KV-L34MF1/L34MH11/L34MN11

RM-845P

SERVICE MANUAL

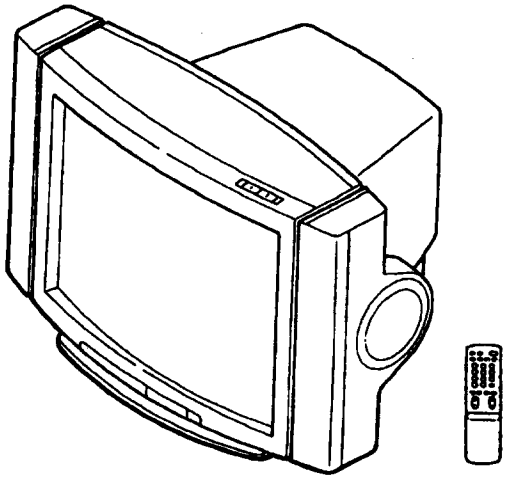

ME Model

KV-L34MF1
Chassis No. SCC-G37L-A
KV-L34MH11
Chassis No. SCC-G37M-A

GE Model

KV-L34MN11
Chassis No. SCC-G44B-A

HK Model

KV-L34MF1
Chassis No. SCC-G43G-A
KV-L34MH11
Chassis No. SCC-G43H-A

G3F CHASSIS

MODELS OF THE SAME SERIES	
KV-L34MF1/L34MH11 KV-L34MN11	KV-K29MF1
KV-K25MF2/K29MF2	

MICROFILM

TRINITRON® COLOR TV

SONY®

SPECIFICATIONS

Specifications		Note
Power requirements	110-240 V AC, 50/60 Hz	
Power consumption (W)	174	
Television system	B/G, I, D/K, M	
Color system	PAL, PAL 60, SECAM, NTSC4.43, NTSC3.58	
Stereo system	NICAM Stereo B/G, I; A2 Stereo (German) B/G	except for KV-L34MF1
Channel coverage		
B/G	VHF: E2 to E12/UHF: E21 to E69/CATV: S01 to S03, S1 to S41	
	VHF: 0 to 5, 5A 6 to 12/UHF: 28 to 69	Australia only
	VHF: 1 to 10	New Zealand only
I	UHF: B21 to B68/CATV: S01 to S03, S1 to S41	
D/K	VHF: R1 to R12/UHF: R21 to R60/CATV: S01 to S03, S1 to S41	
M	VHF: A2 to A13/UHF: A14 to A79/ CATV: A-8 to E, G to W+25, W+27 to W+84 (except for KV-L34MF1)	
Antenna	75-ohm external antenna terminal for VHF/UHF	
Audio output (speaker)	13 W × 2	
Number of terminal		
Video	Input: 3 Output: 1	
Audio	Input: 3 Output: 1	
S1-Video	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms
External speaker	Output: 1	
Picture tube	Hi Black Trinitron	
Tube size (inch)	34	Measured diagonally
Screen size (cm)	80	Measured diagonally
Dimensions (w/h/d, mm)	781.0 × 664.5 × 607.8 1000.6 × 664.5 × 607.8 (including speakers)	
Mass (kg)	70.1 77.5 (including speakers)	
Accessories		
Supplied	Remote commander (1)	
	Size R6 (AA) battery (2)	
	UHF/VHF Mixer (1)	
Optional	TV stand SU-L34	

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section	Title	Page
1. GENERAL		4
2. DISASSEMBLY		
2-1.	Rear Cover Removal	13
2-2.	Chassis Assy Removal	13
2-3.	Service Position	13
2-4.	Extension Cable	14
2-5.	Switch Block Removal	14
2-6.	Picture Tube Removal	15
3. SET-UP ADJUSTMENTS		
3-1.	Beam Landing	16
3-2.	Convergence	17
3-3.	Focus Adjustment	22
3-4.	G2 (Screen) and White Balance Adjustments	22
4. SELF DIAGNOSIS FUNCTION		23
5. CIRCUIT ADJUSTMENTS		
5-1.	Adjustments with Commander	24
5-2.	Adjustment Method	25
5-3.	Display Position Adjustment	28
5-4.	A Board Adjustment	28
5-5.	D1 Board Adjustment	29
5-6.	Picture Distortion Adjustment	30
6. DIAGRAMS		
6-1.	Block Diagrams	
6-2.	Circuit Boards Location	
6-3.	Frame Schematic Diagram	
6-4.	Schematic Diagrams and Printed Wiring Boards	
(1)	Schematic Diagrams of A1, D2, K and V Boards	
(2)	Schematic Diagrams of D, F1, F2, H4 and H8 Boards	
(3)	Schematic Diagram of A Board	
(4)	Schematic Diagrams of A2, P and VM Boards	
(5)	Schematic Diagrams of C and D1 Boards	
6-5.	Semiconductors	
7. EXPLODED VIEWS		
7-1.	Chassis	

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remein as in the manual.

SECTION 1
GENERAL

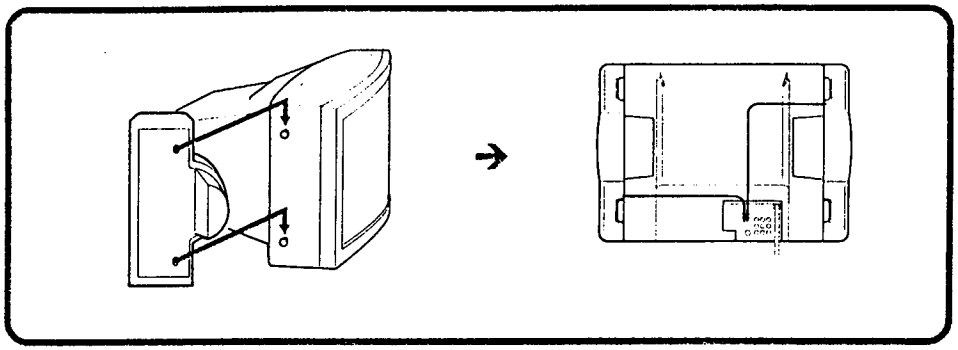

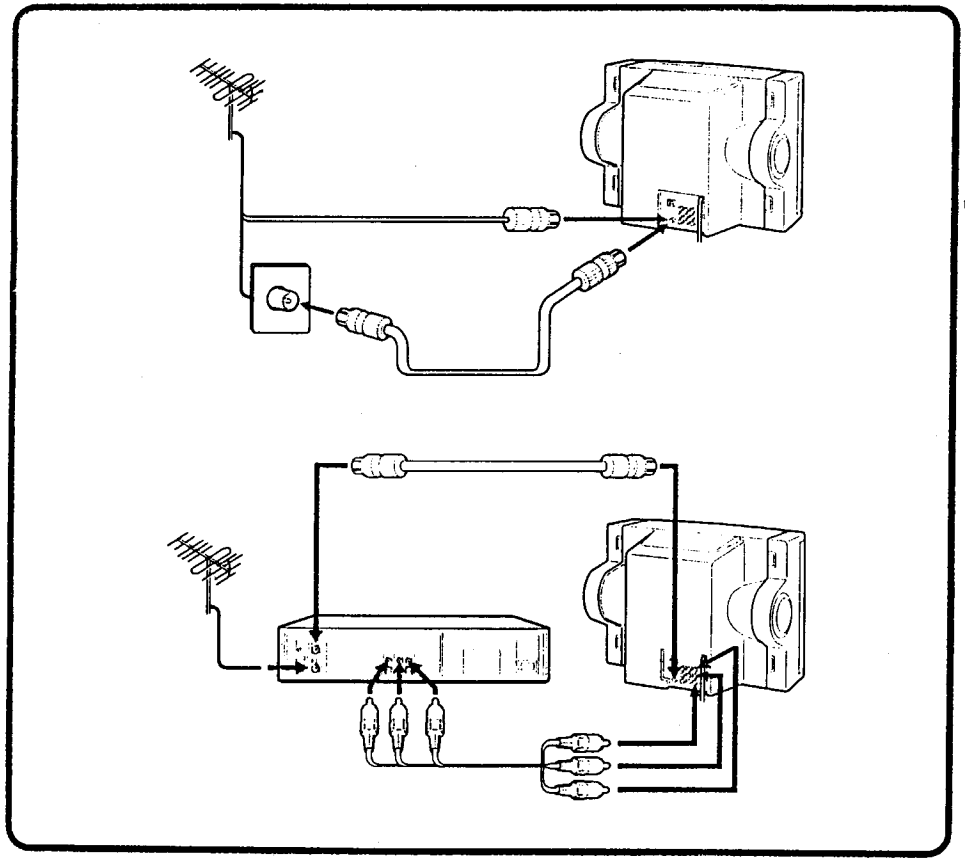

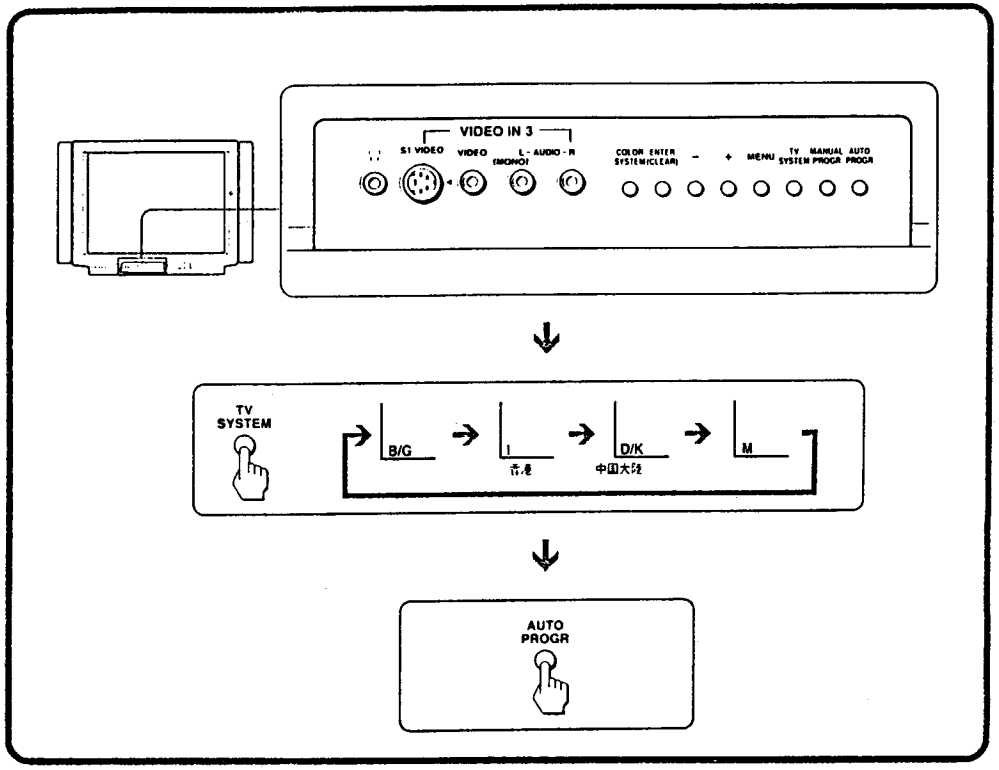

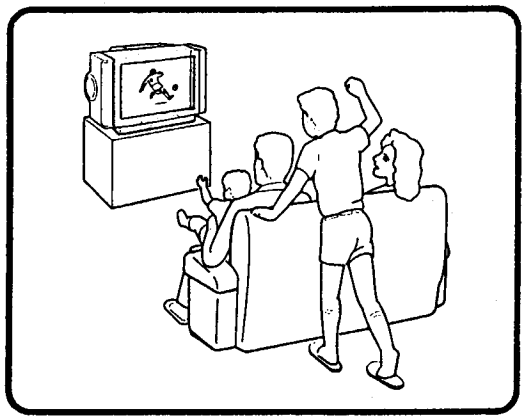

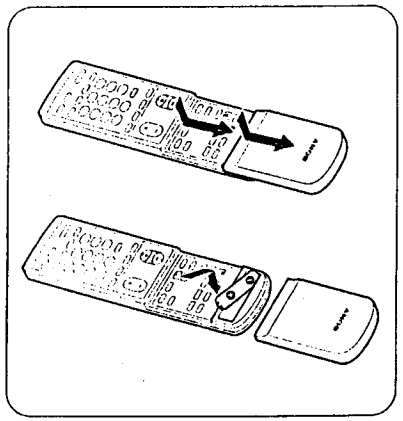

Connections

Connecting the speakers

1 Attach the right and left speakers to the TV.

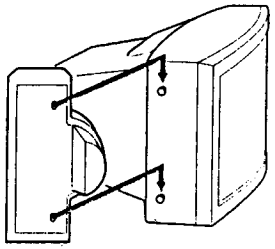

2 Connect the speaker wires to the EXT SP (8Ω) terminals at the rear of the TV.

The red wire should be connected to the ⊕ red terminals and the black wire to the ⊖ black terminals.

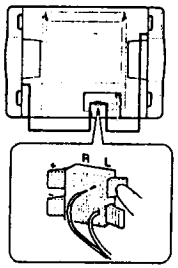

Detaching the screws from the TV

When connecting other speakers, you can detach the screws from sides of the TV.

Notes

- If you connect larger speakers, they must be rated at 8-ohm impedance with normal power handling capacity of more than 15 W.
- Make sure that none of the speaker wire strands stick out, making contact with the neighbouring speaker terminals, to prevent a malfunction caused by a short circuit of the speaker terminals.
- Unplug the unit from the wall outlet when connecting the speakers.

Connecting a VHF antenna or a combination VHF/UHF antenna — 75-ohm coaxial cable (round)

Attach an optional IEC antenna connector to the 75-ohm coaxial cable.
Plug the connector into the Ψ (antenna) socket at the rear of the TV.

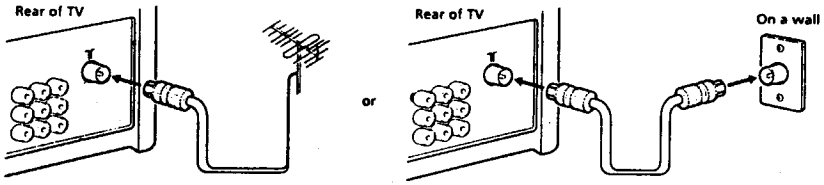

Connecting optional equipment

You can connect optional audio/video equipment to your TV such as a VCR, multi disc player, camcorder, headphones, or stereo system.

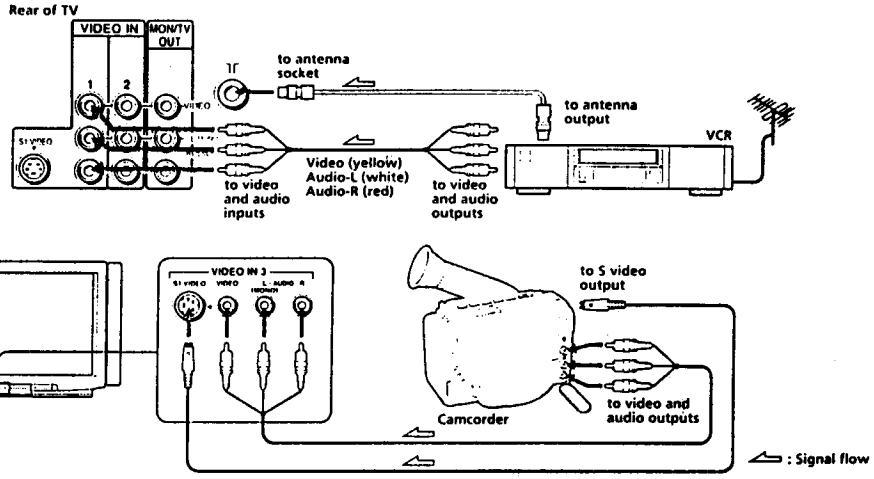

When connecting a monaural VCR

Connect the yellow plug to VIDEO and the black plug to AUDIO-L (mono).

When both S1-Video and video signals are input

The S1-Video input signal is selected. To view a video signal, disconnect the S1-Video connection.

Note on the S1-Video signal

When inputting the S1-Video signal through the VIDEO IN 1 or VIDEO IN 3 jack, turn wide mode off if you do not want to display the picture in wide mode (see page 19).

Note on the video input

When no signal is input, the screen becomes blue.

Presetting channels

You can preset TV channels easily by storing all the receivable channels automatically. You can also preset channels manually or disable program positions.

Presetting channels automatically

You can preset up to 100 TV channels in numerical sequence from program position 1.

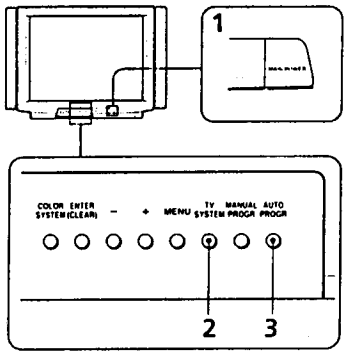

1 Press MAIN POWER.

When the TV is in standby mode after pressing MAIN POWER, press POWER on the TV or remote commander.

2 Press TV SYSTEM to select your local TV system.



3 Press AUTO PROGR.



To start presetting channels automatically from the specified program position

1 Press MANUAL PROGR.
2 Press TV SYSTEM to select your local TV system.
3 Press PROGR +/– to select the program position.
4 Press AUTO PROGR.

Presetting channels manually

To change the program position for a channel or to receive a channel with a weak signal, preset the channel manually.

1 Press MANUAL PROGR.

2 Press PROGR +/– until the required program position appears on the screen.

3 Press TV SYSTEM to select your TV system.

4 Press + or – until the required channel picture appears on the screen.

5 Press MANUAL PROGR.

If the TV system is not properly selected

The color of the picture may be poor and/or the sound may be noisy. In this case, select the appropriate TV system.

1 Press PROGR +/– to select the program position.
2 Press TV SYSTEM until the picture and sound become normal.



Note

- The setting of the TV SYSTEM is memorized for each program position.

Disabling program positions

By disabling unused or unwanted program positions, you can skip those position when you press PROGR +/–.

1 Press PROGR +/– until the unused or unwanted program position appears on the screen.

2 Press MANUAL PROGR.

3 Press ENTER (CLEAR) on the TV.

4 Press MANUAL PROGR.

To cancel the skip setting

Preset the channel manually or automatically again.

Setting the remote command mode

You can use the supplied remote commander to operate this TV and Sony video equipment, such as a VCR or multi disc player. To operate Sony video equipment, first set the remote command mode for the video equipment you want to use.

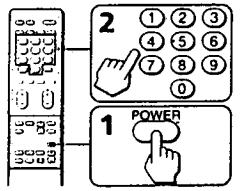

1 Press and hold the POWER button.

2 Press the number buttons that correspond to the remote command mode.

Mode Number buttons	Remote command mode
0 then 1	VTR1 (e.g. Beta format VCR)
0 then 2	VTR2 (e.g. 8 mm format VCR)
0 then 3	VTR3 (e.g. VHS format VCR)
0 then 4	MDP (multi disc player)

After setting the remote command mode, you can use the following buttons to operate the video equipment.

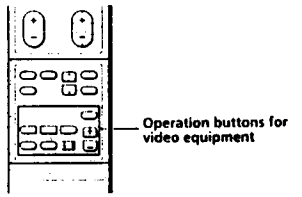

Introducing the menu

You can use the on-screen menus to set the picture quality, sound, and other settings. You can use buttons on both the remote commander and the TV to operate the menus.

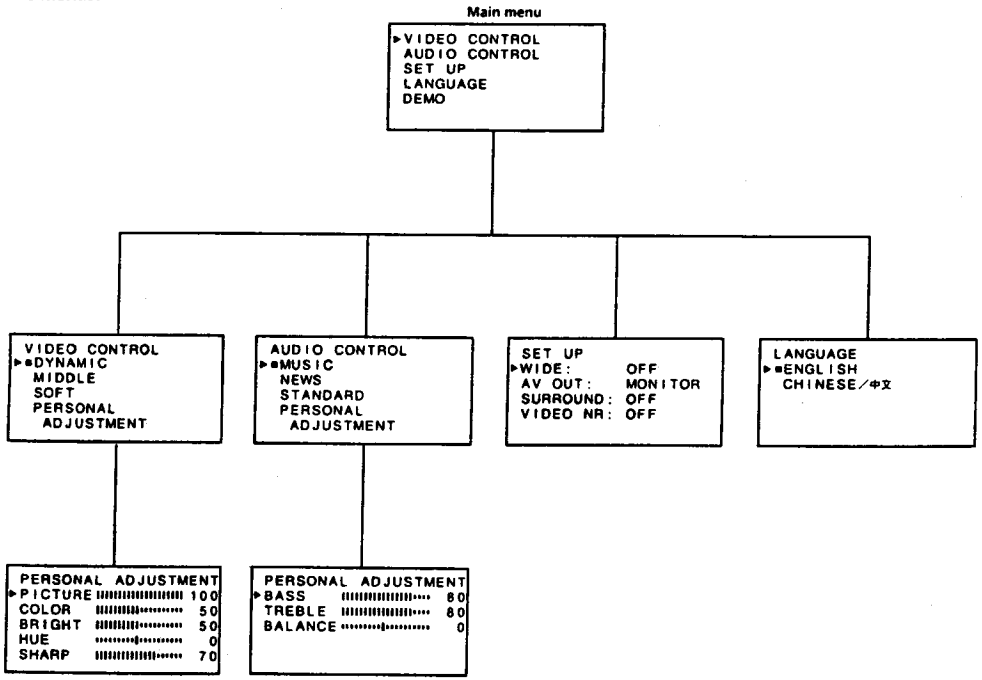

Getting back to the previous menu

Move the cursor (▶) up to the first line of each menu (except the main menu), and press ENTER.

Notes

- If more than 60 seconds elapse after you press a button, the menu screen disappears automatically.
- You can display all of the features available for the TV in DEMO mode.

Cancelling the menu screen

Press MENU.

Changing the menu language

If you prefer Chinese to English, you can change the menu language. You can use buttons on both the remote commander and the TV.

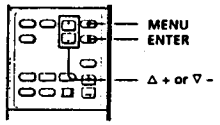

1 Press MENU.

2 Press △ + or ▽ – to move the cursor (▶) to LANGUAGE.

3 Press ENTER.



4 Press △ + or ▽ – to select CHINESE.



5 Press ENTER.

6 Press MENU to return to the normal screen.

Getting back to the English menu

1 Press MENU.

2 Press △ + or ▽ – to move the cursor (▶) to the fourth line from the top ("语言/ LANGUAGE").

3 Press ENTER.

4 Press ENTER.

5 Press MENU to return to the normal screen.

Watching the TV

1 Press MAIN POWER to turn the TV on.



When the TV is in standby mode after pressing MAIN POWER, press POWER on the TV or remote commander.

2 Select the TV channel you want to watch.

To select a channel directly
Press a number button.

To select a two-digit channel, press "-/--" before the number buttons.
For example: to select channel 25, press "-/--," and then "2" and "5."

To scan through channels
Press PROGR +/– until the channel you want appears.

3 Press VOL+/– to adjust the volume.



Switching off the TV

To switch off the TV temporarily, press POWER.

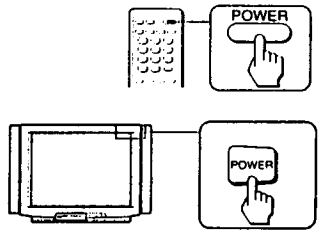

To switch off the TV completely, press MAIN POWER. If the main power is turned off in standby mode, the STANDBY indicator may remain alight for a while.



Watching the video input

Press VIDEO/HOLD.

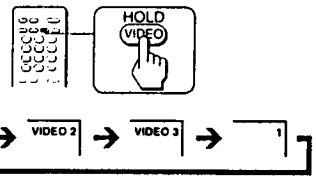

To watch TV, press TV.



Switching back quickly to the previous channel

Press JUMP.



Muting the sound

Press MUTING.

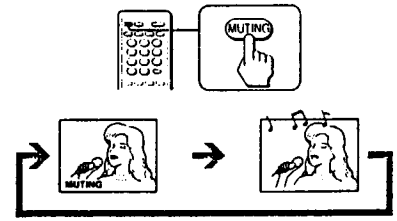

Displaying on-screen information

Press DISP/REVEAL.
The program position, local system, and TV settings are displayed on the screen.

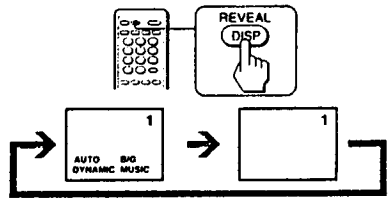

Setting the Sleep Timer

You can set the TV to turn off automatically after the period of time you set.

Press SLEEP/INDEX.

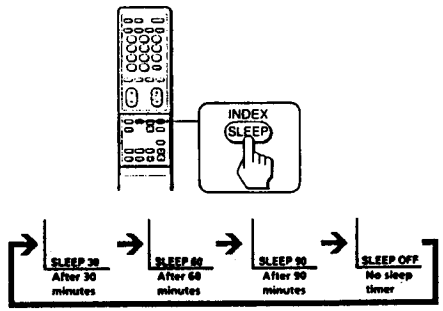

To cancel the Sleep Timer, press SLEEP/INDEX repeatedly until "SLEEP OFF" appears, or turn the TV off.

Adjusting the picture

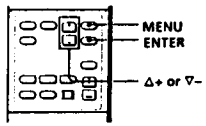

1 Press MENU.

2 Press △+ or ▽– to move the cursor (▸) to VIDEO CONTROL.

3 Press ENTER.

4 Press △+ or ▽– to select the setting, and press ENTER.

Select	To
DYNAMIC	Display more contrast picture
MIDDLE	Display normal contrast picture
SOFT	Display picture suitable for movies and video games
PERSONAL	Display the picture that is adjusted using ADJUSTMENT
ADJUSTMENT	Make specific adjustments. See "Adjusting the picture setting."

5 Press MENU to return to the normal screen.

Adjusting the picture setting (ADJUSTMENT)

You can adjust the picture to your own taste with the ADJUSTMENT option. The adjusted settings are stored in the PERSONAL option.

1 Press MENU.

2 Press △+ or ▽– to move the cursor (▶) to VIDEO CONTROL, and press ENTER.

3 Press △+ or ▽– to move the cursor (▶) to ADJUSTMENT, and press ENTER.

4 Press △+ or ▽– to move the cursor (▶) to the item you want to adjust, and press ENTER.



5 Press △+ or ▽– to adjust the item, and press ENTER.

Item	Press △+ to	Press ▽– to
PICTURE	Increase picture contrast	Decrease picture contrast
COLOR	Increase color intensity	Decrease color intensity
BRIGHT	Brighten the picture	Darken the picture
HUE	Make skin tones become greenish	Make skin tones become reddish
SHARP	Sharpen the picture	Soften the picture

6 To adjust other items, repeat steps 4 and 5.

7 Press MENU to return to the normal screen.

Note

- You can adjust HUE for NTSC color system only.

If the color of the picture is abnormal

When receiving programs through the Ψ terminal: Press TV SYSTEM or COLOR SYSTEM until the color becomes normal.



Note

- Normally set COLOR SYSTEM to AUTO.

Adjusting the sound

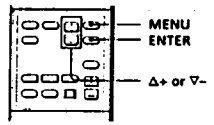

1 Press MENU.



2 Press △+ or ▽– to move the cursor (▶) to AUDIO CONTROL.



3 Press ENTER.

4 Press △+ or ▽– to select the sound that you want, and press ENTER.

Select	To
MUSIC	Listen to music programs.
NEWS	Listen to news program. A person's voice can be heard clearly.
STANDARD	Listen to sound other than music or news.
PERSONAL	Listen to the sound that is adjusted using ADJUSTMENT.
ADJUSTMENT	Make specific settings. See "Adjusting the sound setting."

5 Press MENU to return to the normal screen.

Adjusting the sound setting (ADJUSTMENT)

You can adjust the sound to your own taste with the ADJUSTMENT option. The adjusted settings are stored in the PERSONAL option.

1 Press MENU.

2 Press △+ or ▽– to move the cursor (▶) to AUDIO CONTROL, and press ENTER.

3 Press △+ or ▽– to move the cursor (▶) to ADJUSTMENT, and press ENTER.

4 Press △+ or ▽– to move the cursor (▶) to the item you want to adjust, and press ENTER.

5 Press △+ or ▽– to adjust the item, and press ENTER.

Item	Press △+ to	Press ▽– to
BASS	Increase the bass sound	Decrease the bass sound
TREBLE	Increase the treble sound	Decrease the treble sound
BALANCE	Increase the volume of right speaker	Increase the volume of left speaker

6 To adjust other items, repeat steps 4 and 5.

7 Press MENU to return to the normal screen.

If the sound is distorted or noisy

When receiving programs through the Ψ terminal: Press TV SYSTEM until the sound becomes clear.



(except for KV-L34MF1)

Selecting a stereo or bilingual program

You can enjoy stereo sound or bilingual program of NICAM and A2 (German) systems. The initial setting is stereo sound.

Press A/B/ENLARGE repeatedly until you receive the sound you want.
The sound changes and the corresponding indicator lights up as follows:

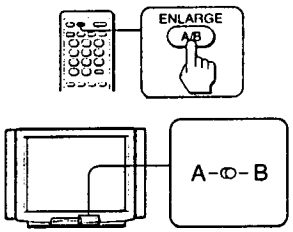

When receiving a NICAM program:

Broadcasting	On-screen display	Selected sound (indicator)
NICAM stereo	NICAM	→ Stereo → Regular (A and B)
NICAM bilingual	NICAM	→ A → B → Regular (A) (B)
NICAM monaural	NICAM	→ Monaural → Regular (A)

When receiving a A2 (German) program:

Broadcasting	On-screen display	Selected sound (indicator)
A2 (German) stereo	STEREO	Stereo (A and B)
A2 (German) bilingual	—	→ A → B → A+B (A) (B) (A and B)

Receiving area for NICAM and A2 (German) programs

System	Receiving area
NICAM	Hong Kong, Singapore, New Zealand, etc.
A2 (German)	Australia, Malaysia, Thailand, etc.

Notes
- If the signal is very weak, the sound becomes monaural.
- If the stereo sound is noisy, select "regular" or "mono." The sound becomes monaural, however, the noise will be reduced.

Watching two pictures simultaneously

With this function you can display a Picture In Picture (PIP) screen (small picture) within the main picture of a TV program or a video input.

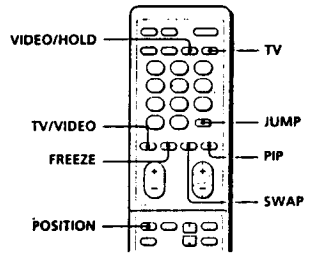

Displaying PIP

Press PIP.



The channels are displayed as follows:
Main screen: green
PIP screen: white

Selecting a TV program or video in the main screen

To select a TV program, press TV and select the channel.
To select a video, press VIDEO/HOLD to select a video input.

Selecting a TV program or video in the PIP screen

To select a TV program, press TV/VIDEO to select TV then select the channel.
To select a video, press TV/VIDEO to select a video input.

Note
- To enjoy two different TV programs simultaneously, you need another equipment with built-in tuner (e.g., VCR with tuner, satellite tuner, etc.).

Swapping pictures between the main and PIP screens

Press SWAP.



Changing the position of the PIP screen

Press POSITION.

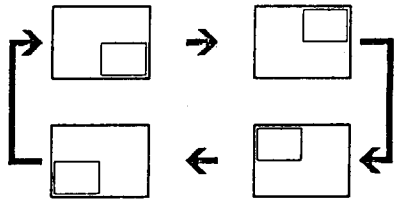

Freezing the PIP screen

Press FREEZE.
To restore the normal picture, press FREEZE again.

Notes
- When you display a VCR picture on the PIP screen at a speed other than normal speed, the picture may be noisy depending on the VCR. The picture can be improved by selecting the smaller size of the PIP screen.
- If you display different color systems (PAL, PAL 60, SECAM, NTSC) on the main screen and the PIP screen, the size of the PIP screen may be different and the PIP picture may be noisy. This is not caused by the malfunction of the TV.

(except for KV-L34MF1)

Viewing Teletext

TV stations broadcast an information service called Teletext via a TV channel.
Teletext service allows you to receive various information such as weather forecasts or news at any time you want.

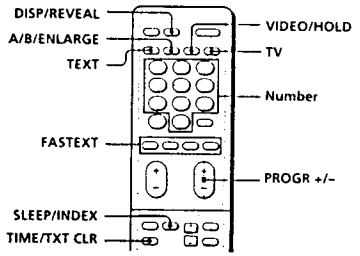

Displaying Teletext

1 Select a TV channel which carries the Teletext broadcast you want to watch.

2 Press TEXT to display the Teletext.
A Teletext page is displayed (normally the index page). If there is no Teletext broadcast, P100 is displayed at the top left corner of the screen.

To cancel the Teletext display, press TV.

Superimposing a Teletext page on the TV picture

Press TEXT.
Each time you press TEXT, the screen changes as follows:

Teletext → Teletext and TV → TV

Checking the contents of a teletext service (INDEX)

Press SLEEP/INDEX to display an overview of the Teletext contents and page numbers.

Using FASTEXT

This feature allows you to quickly access a Teletext page that uses FASTEXT. When a FASTEXT page is broadcast, a color-coded menu appears at the bottom of the screen. The colors of the menu correspond to the RED, GREEN, YELLOW, and CYAN buttons on the remote commander. These color buttons function as the FASTEXT buttons in Teletext mode.

Press the color button which corresponds to the color-coded menu.
The page is displayed after a few seconds.

Selecting a Teletext page

To input the three-digit page number of the Teletext page, press the number buttons.
If you make a mistake, key in the correct page number again.

To access the next or previous page, press PROGR +/–.

Holding a Teletext page

A Teletext page may consist of several subpages. You can stop the page scrolling in order to read the text at your own pace.

Press VIDEO/HOLD.
The HOLD symbol "⏸" is displayed at the top left corner of the screen.

To resume normal Teletext operation, press TEXT.

Revealing concealed information

Sometimes pages contain concealed information, such as an answer to a quiz. The reveal option lets you disclose the information.

Press DISP/REVEAL.
To conceal the information, press DISP/REVEAL again.

Enlarging the Teletext display

Press A/B/ENLARGE.
Each time you press A/B/ENLARGE, the Teletext display changes as follows:

Enlarge upper half → Enlarge lower half → Normal size

Waiting for a Teletext page while watching a TV program (TEXT CLEAR)

1 Key in the page number of the Teletext that you want to refer, then press TIME/TXT CLR.

2 When the page number is displayed on the screen, press TEXT to switch the Teletext on.

Customizing the TV (SET UP)

Turning wide mode

When receiving the signal conforming to wide mode (S1-Video signal), you can change the size of the picture on the screen.

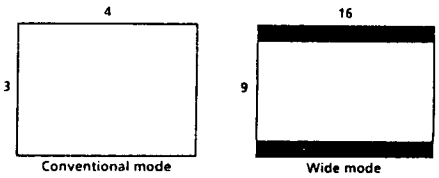

1 Press MENU.

2 Press △+ or ▽– to select SET UP, and press ENTER.



3 Press △+ or ▽– to select WIDE, and press ENTER.

4 Press △+ or ▽– to select the wide mode to suit the size of the picture you want to display on the TV screen.

Select	To
ON	Display the picture on the screen in wide mode
AUTO	Display the picture on the screen in wide mode automatically when receiving the S1-Video signal through the S1-Video input jack
OFF	Display the picture on the screen in conventional size

Note
- When the picture is in wide mode, the bright lines which are used for adjusting the CRT at optimum level appear at the top of the screen.

Using the AV OUT (advanced rec-out) terminal

You can select the output signal from the MON/TV OUT jacks at the rear of the TV.

1 Press MENU.

2 Press △+ or ▽– to select SET UP, and press ENTER.

```
SET UP
▸WIDE:      OFF
 AV OUT:    MONITOR
 SURROUND:  OFF
 VIDEO NR:  OFF
```

3 Press △+ or ▽– to select AV OUT, and press ENTER.

4 Press △+ or ▽– to select the output signal, and press ENTER.

Select	To
TV	Output the TV signal.
MONITOR	Output the signal of the picture you are watching as a monitor.

Note

- Do not change the channel while recording with a VCR through the MON/TV OUT jacks. If you change the channel, it also changes the channel you are recording.

Selecting the surround sound

You can enjoy a surround sound effect that is like being in a music hall when receiving stereo signals.

1 Press MENU.

2 Press △+ or ▽– to select SET UP, and press ENTER.

```
SET UP
▸WIDE:      OFF
 AV OUT:    MONITOR
 SURROUND:  OFF
 VIDEO NR:  OFF
```

3 Press △+ or ▽– to select SURROUND, and press ENTER.

4 Press △+ or ▽– to turn the surround sound on or off, and press ENTER.

Select	To
ON	Listen to surround sound that is effective for stereo signals
SPACE	Listen to surround sound that is effective for monaural signals
OFF	Turn off surround sound

Reducing the noise of the picture

You can reduce the noise level of the picture when the TV receives a weak signal or when you play a videotape that is in poor condition.

1 Press MENU.

2 Press △+ or ▽– to select SET UP, and press ENTER.

```
SET UP
▸WIDE:      OFF
 AV OUT:    MONITOR
 SURROUND:  OFF
 VIDEO NR:  OFF
```

3 Press △+ or ▽– to select VIDEO NR, and press ENTER.

4 Press △+ or ▽– to turn the noise reduction on or off, and press ENTER.

Troubleshooting

If you have any problems, read this manual again and check the countermeasure for each of the symptoms listed below.
If the problem persists, contact your nearest authorized service center or dealer.

Snowy picture
Noisy sound



➡ Check the antenna.
➡ Check the antenna connection on the TV and on the wall.
➡ Check the TV system setting.

Dotted lines or stripes

➡ This may be caused by local interference (e.g. cars, neon signs, hair dryers, etc.). Adjust the antenna for minimum interference.

Double images or "ghosts"

➡ This may be caused by reflections from nearby mountains or buildings. A highly directional antenna may improve the picture.

Good picture
Noisy sound



➡ Check the TV SYSTEM setting.

No picture
No sound



➡ Press MAIN POWER.
➡ Press POWER.
➡ Check the antenna connection.
➡ Check the VCR connections.

Good picture
No sound



➡ Press VOLUME +.
➡ Press MUTING.
➡ Press A/B/ENLARGE.
➡ Check the speaker connection.

No color

➡ Adjust the COLOR level in the VIDEO CONTROL menu's ADJUSTMENT option.
➡ Check the COLOR SYSTEM setting.

TV cabinet creaks

➡ Even if the picture or the sound is normal, changes in the room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

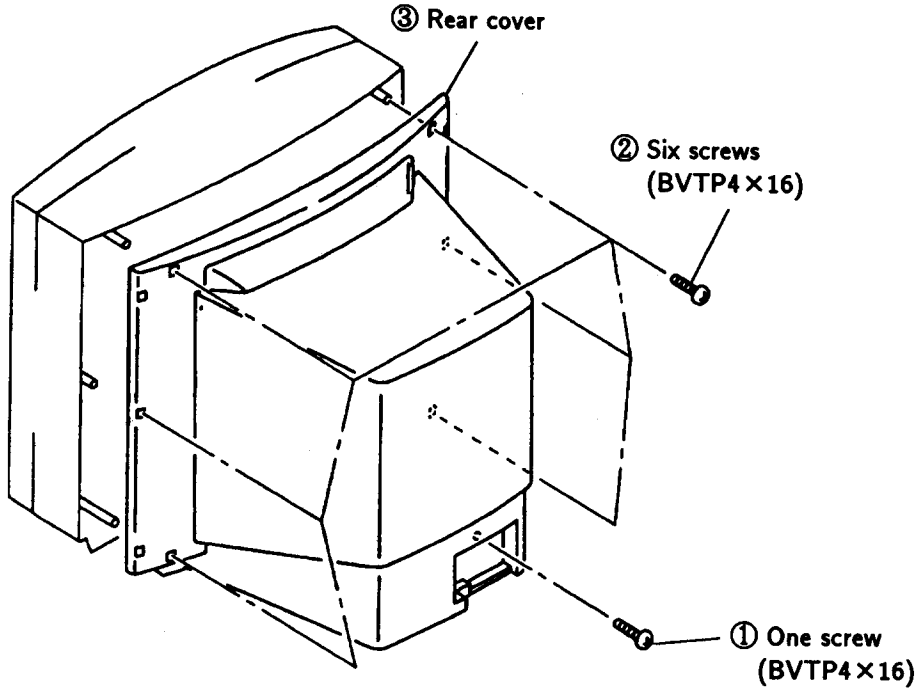

2-2. CHASSIS ASSY REMOVAL

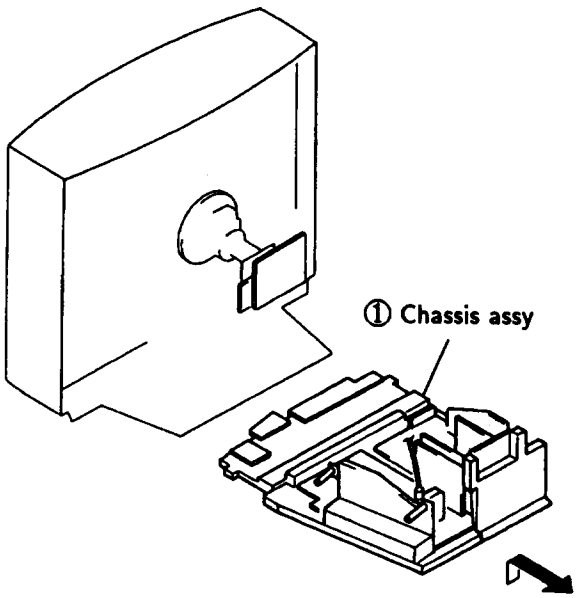

2-3. SERVICE POSITION

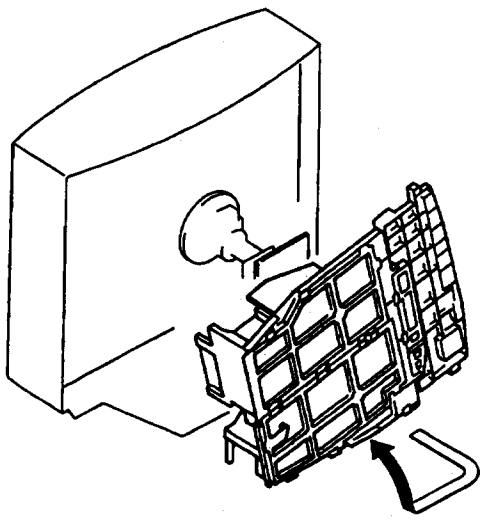

2-4. EXTENSION CABLE

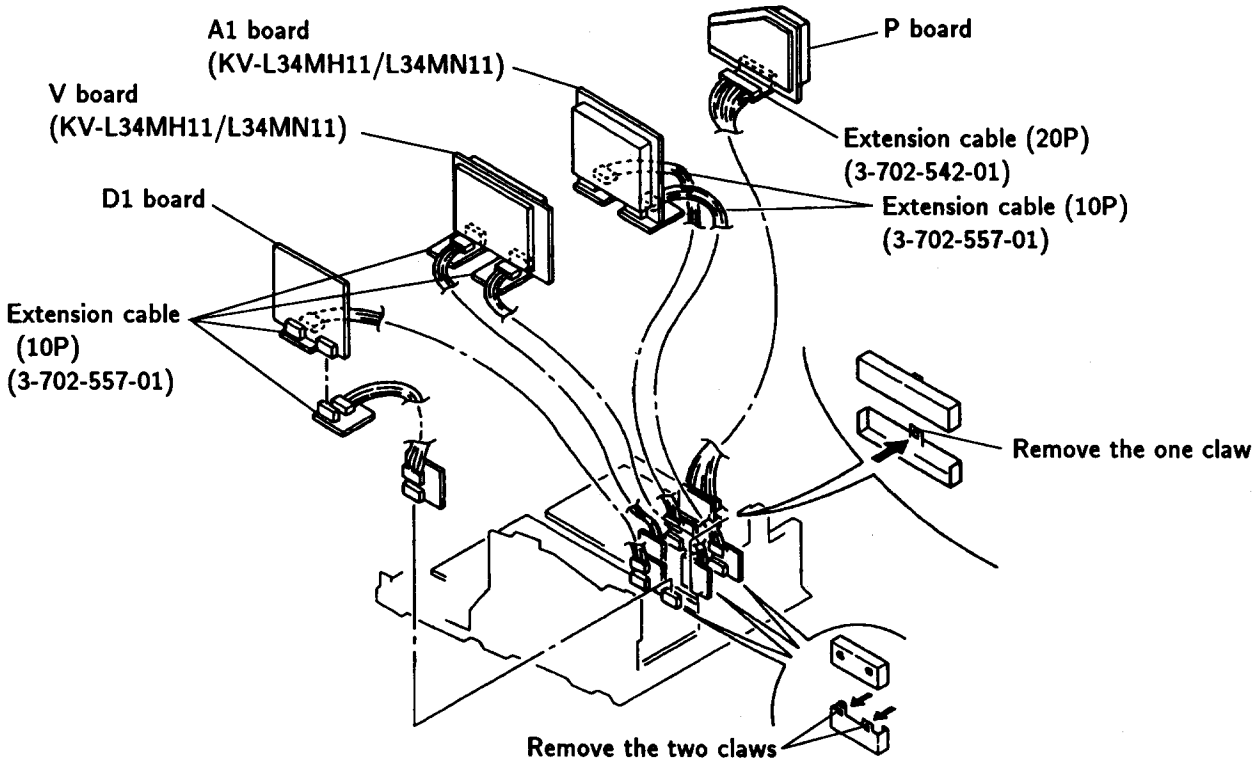

2-5. SWITCH BLOCK REMOVAL

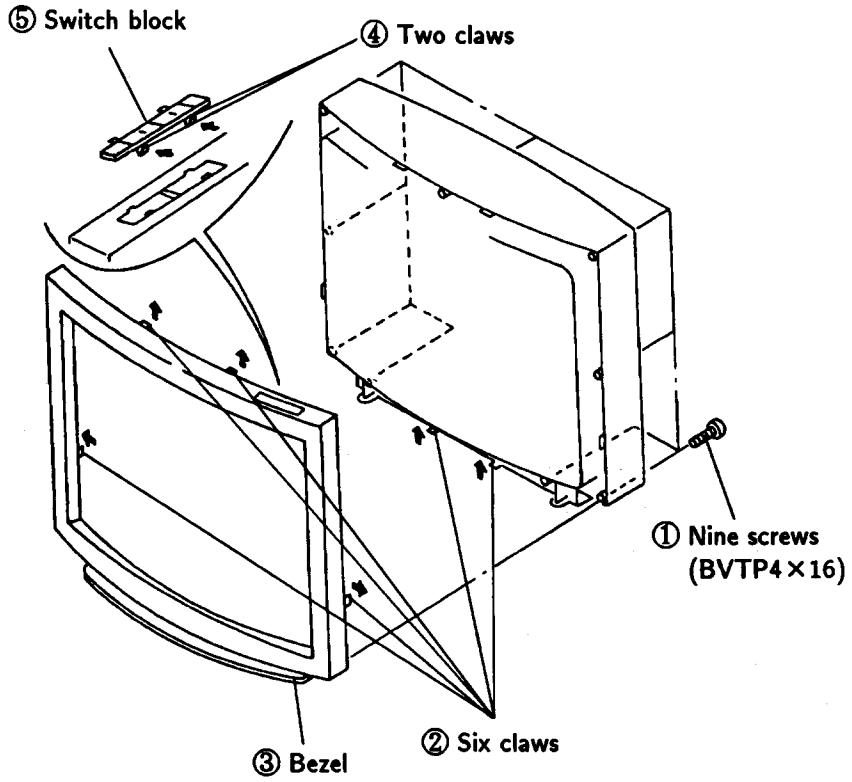

2-6. PICTURE TUBE REMOVAL

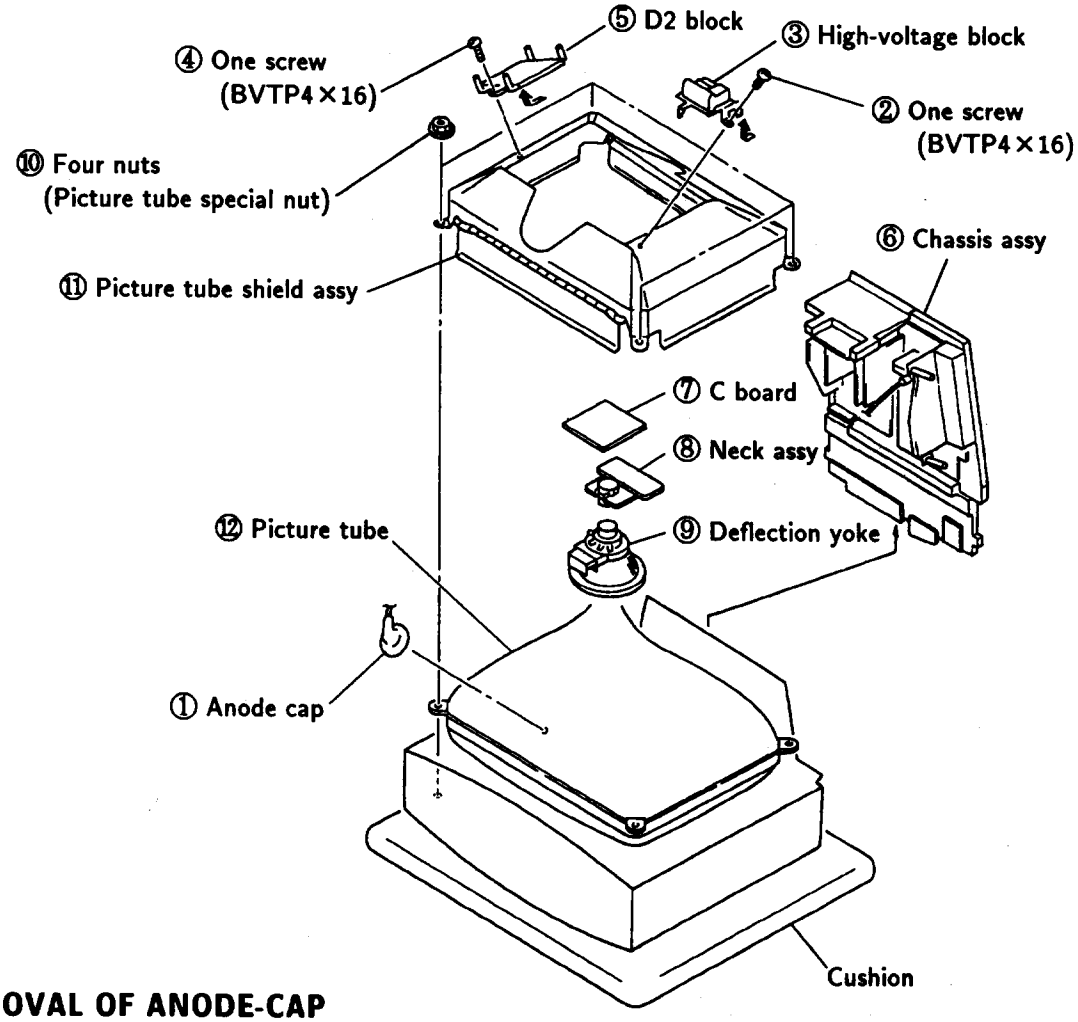

• REMOVAL OF ANODE-CAP

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT chield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

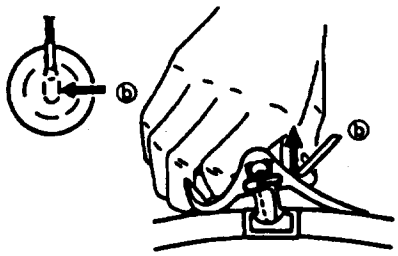

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

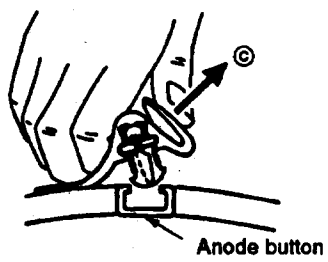

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ⓒ.

• HOW TO HANDLE AN ANODE-CAP

① Don't hurt the surface of anode-caps with sharp shaped material!

② Don't press the rubber too hard in order not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.

③ Don't turn the foot of rubber over hard!
The shatter-hook terminal will stick out or hurt the rubber.

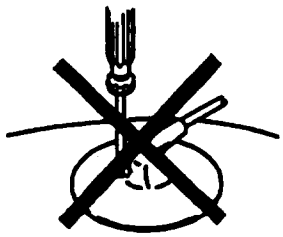

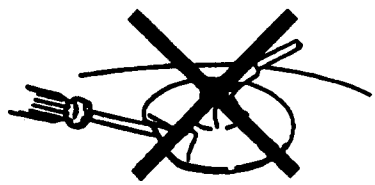

SECTION 3
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switch should be set as follows unless otherwise noted:

PICTURE control ..... RESET
BRIGHTNESS control ..... CENTER

Perform the adjustments in order as follows :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparations :

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
   Contrast } normal
   Bightness }
2. Position neck ass'y as shown in Fig 3-2.
3. Set the pattern generator raster signal to red.
4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side.
   (See Figures 3-1 through 3-3.)
5. Move the deflection yoke forward and adjust so that entire screen is red. (See Figure 3-1.)
6. Switch the raster signal to blue, then to green and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
   (See Figure 3-4.)

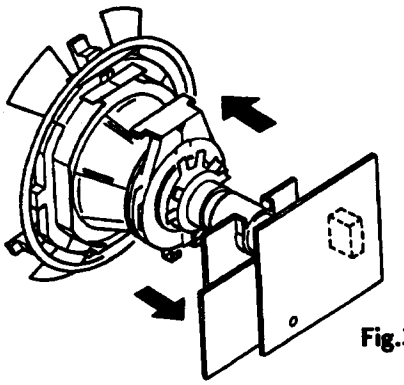

Fig.3-1

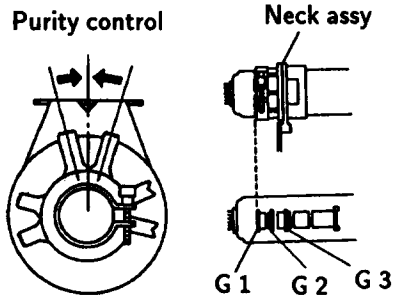

Fig.3-2

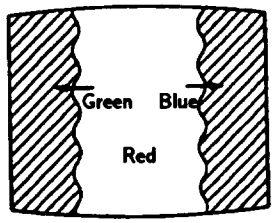

Fig.3-3

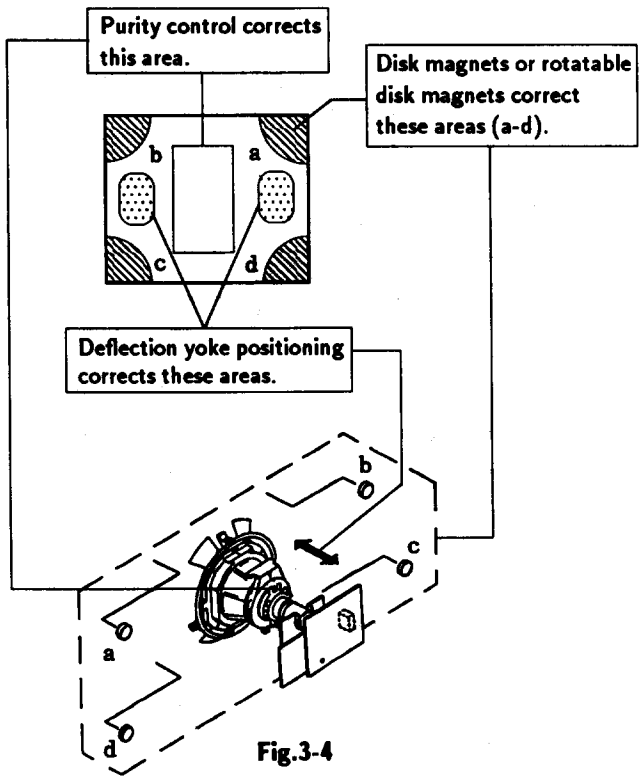

Fig.3-4

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) **Horizontal and Vertical Static Convergence**

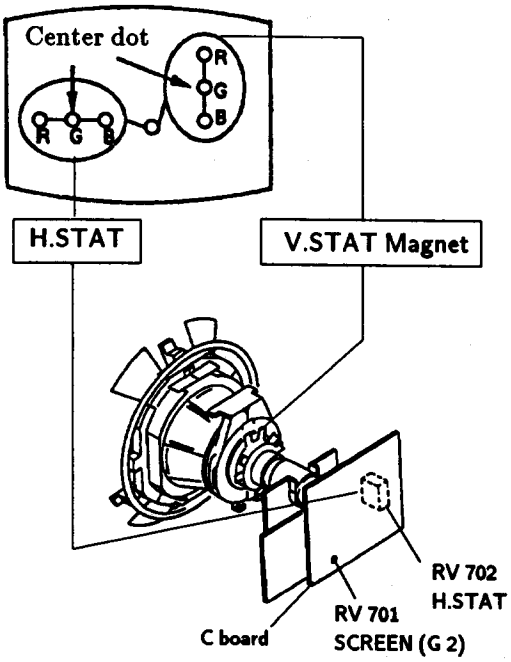

1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.
   (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other)

- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

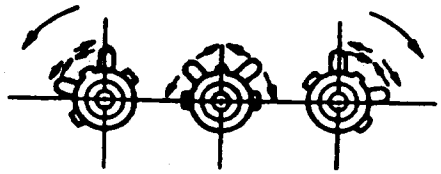

4. If the V.STAT magnet is moved in the direction of the ⓐ and ⓑ arrows, the red, green, and blue points move as shown below.

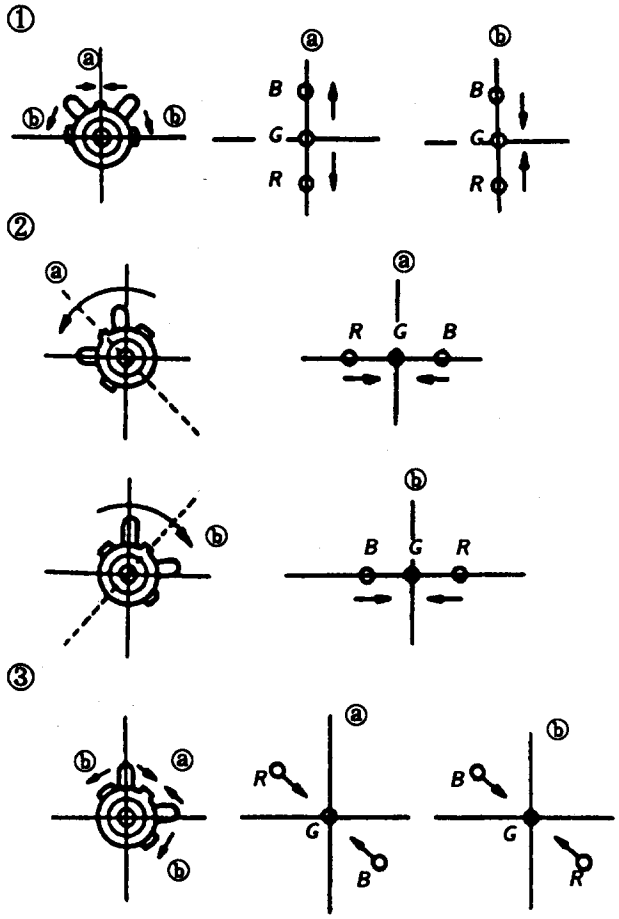

- Operation of BMC (Hexapole) Magnet

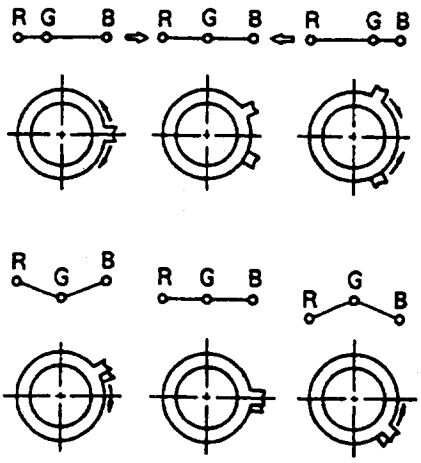

- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking.
  Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

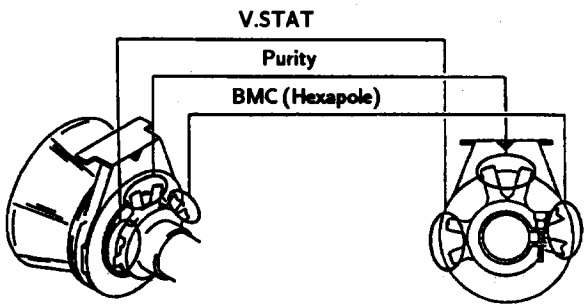

• Y separation axis correction magnet adjustment

1. Receive the cross-hatch signal, and adjust [PIC] to "MIN" and [BRT] to "standard".
2. Adjust the deflection yoke to the upright condition when it hits the CRT.
3. Adjust so that the Y separation axis correction magnet on the neck assembly is symmetrical at the top and bottom (open state).
4. Return the deflection yoke to its original position.

(2) Dynamic Convergence Adjustment

Preparations :

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.

1. Slightly loosen the deflection yoke screws.
2. Remove the deflection yoke spacer.
3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the defelection yoke spacer.

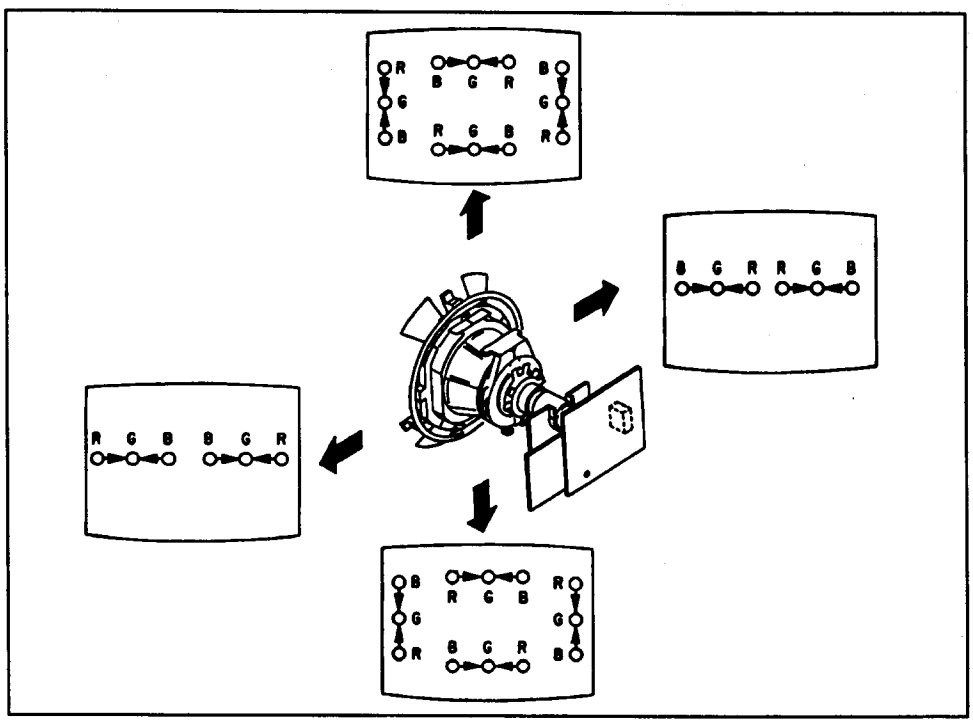

(3) Screen-corner Convergence

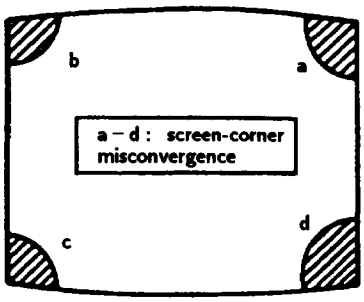

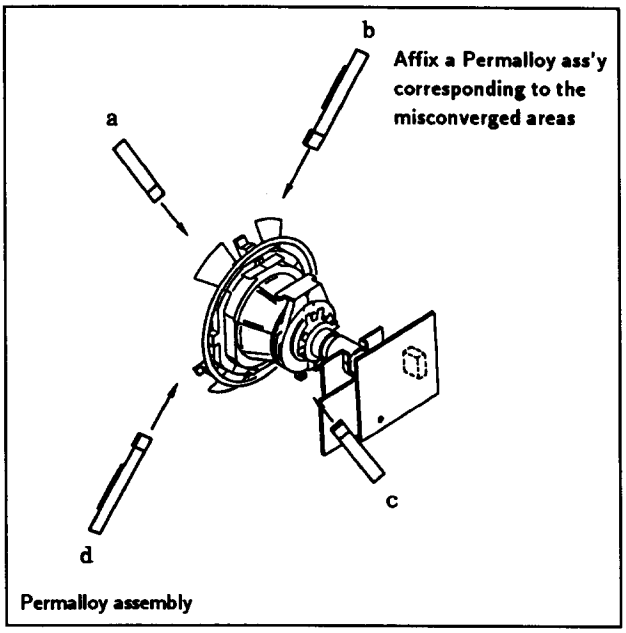

(4)Dynamic convergence adjustment

1. Adjust horizontal convergence located at the center position of the screen with H STAT VR.
2. Dynamic convergence adjustments are made with the RM-845P that comes with this unit.

Entering service mode

With the unit on standby
⇩
"DISPLAY"
⇩
"5"
⇩
"VOL (+)"
⇩
"POWER"

This operation sequence puts the unit into service mode.

The screen display is :

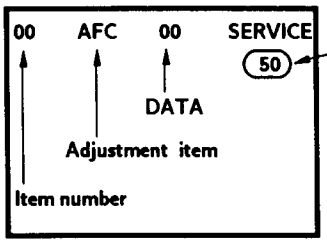

"1", "4"	Raise/lower the service item number
"3", "6"	Raise/lower the data
"MUTE"	Writes
"0"	Executes the writing

Item Number 20

This explanation uses UYBOW as an example.

1. Select 20 UYBOW with the "1" and "4" buttons.
2. Raise/lower the data with the "3" and "6" buttons.
3. Select the optimum stste.
4. Write with the MUTE button. (The display changes to blue WRITE.)
5. Execute the writing with the "0" button. (The WRITE display changes briefly to red.)

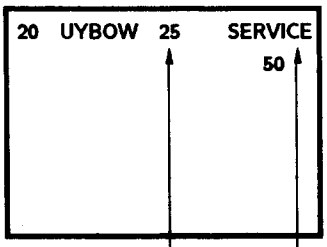

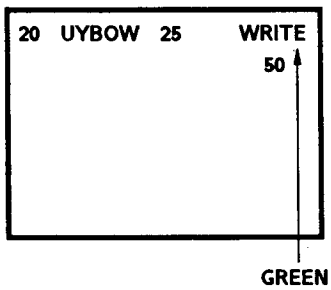

Written with "MUTE"

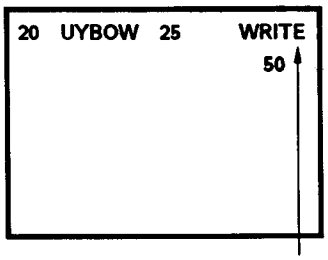

The WRITE display changes briefly to red, then the display returns to a green SERVICE.

Write excuted with "0"

"1", "4"	Select the adjustment item.
↓	
"3", "6"	Raise/lower the data.
↓	
"MUTE"	Writes.
↓	
"0"	Executes the writing.

Item number	Adj. Item	Data range	Standard DATA 50Hz/60Hz		Note	Device
			Normal	Wide		
4C	DCS	00~3F	1 F	1 F	DC Shift	(CXA 1526 P)
4D	UYB	00~3F	1 F	1 F	Upper Y Bow	(CXA 1526 P)
4E	LYB	00~3F	1 F	1 F	Lower Y Bow	(CXA 1526 P)
4F	HAP	00~3F	1 F	1 F	H. Amp	(CXA 1526 P)
50	HTL	00~3F	1 F	1 F	H. Tilt	(CXA 1526 P)
51	UCB	00~3F	1 F	1 F	Upper Corner Bow	(CXA 1526 P)
52	UTL	00~3F	1 F	1 F	Upper Tilt	(CXA 1526 P)
53	LCB	00~3F	1 F	1 F	Lower Corner Bow	(CXA 1526 P)
54	LTL	00~3F	1 F	1 F	Lower Tilt	(CXA 1526 P)

R.G.B.dots movement on the screen of the set

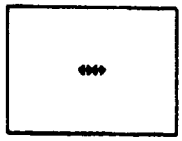

DC SHIFT

Fine adjustment of H STAT

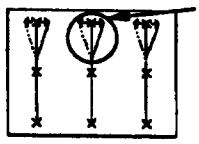

UPPER Y BOW

Adjustment of Y BOW of the upper section of the screen.

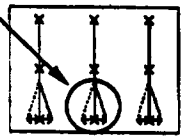

Standerd LOWER Y BOW

Adjustment of Y BOW of the lower section of the screen.

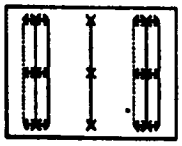

H AMP

H AMP adjustment

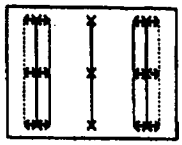

H TILT

H TILT adjustment

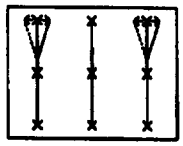

UPPER COR BOW

Adjustment of C BOW of the ower section of the screen.

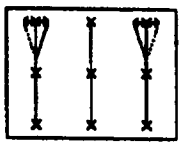

UPPER TILT

Adjustment of TILT of the lower section of the screen.

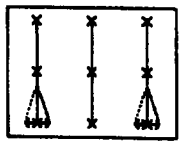

LOWER COR BOW

Adjustment of C BOW of the lower section of the screen.

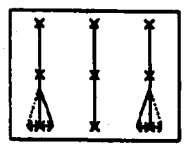

LOWER TILT

Adjustment of TILT of the lower section of the screen.

At this time, H.TILT, H.AMP, UPPER TILT, UPPER COR, BOW, LOWER TILT, and LOWER COR, BOW look like all the same, but the movement of the right and left dots are reverse in all the TILT system. (Pay attention to the dotted lines.)

3-3. FOCUS ADJUSTMENT

Adjust FOCUS control on the flyback transformer for a best focus.

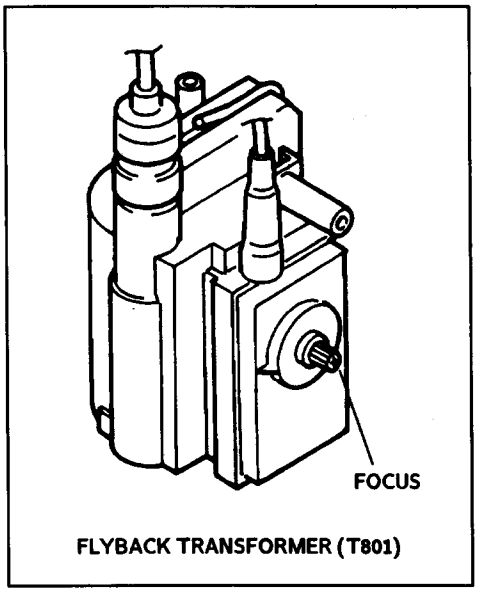

FLYBACK TRANSFORMER (T801)

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

(1) G2 (SCREEN) ADJUSTMENT (RV701)

1) Set the PICTURE and BRIGHTNESS to normal.
2) Put to VIDEO input mode without signals.
3) Set to Service Mode.
4) Change BLU data of the item number "58" from "01" to "00". (To turn off Blue Black.)
5) Press MUTE, and 0 to write the data in the memory.
6) Connect R, G, and B of the C board cathode to the oscilloscope.
7) Adjust G2 (RV701) volume to the value below.

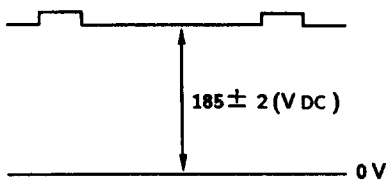

8) Re-set BLU data of the item number "58" from "00" back to "01".
9) Press MUTE, and 0 to write the data in the memory.

(2) WHITE BALANCE ADJUSTMENTS

1) Set to service mode.
2) Input an entire white signal.
3) Set the PICTURE to minimum.
4) Select SBR (05)with 1 and 4, and then set the level to minimum with 3 and 6.
5) Select GCT (09)and BCT (0A)with 1 and 4. And adjust the level with 3 and 6 for the best white balance.
6) Set the PICTURE to maximum.
7) Select GDR (07)and BDR (08)with 1 and 4, and adjust the level with 3 and 6 for the best white balance.
8) Write into the memory by pressing MUTE → then 0.

(3) SUB BRIGHT ADJUSTMENT

1) Set to service mode.
2) Input a staircase signal of black and white from the pattern generator.
3) BRIGHTNESS ··· RESET
   PICTURE ····· minimum
4) Select SBR with 1 and 4, and adjust SBR level with 3 and 6 so that the stripe second from the right is dimly lit.

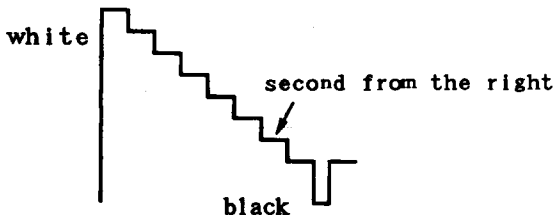

SECTION 4
SELF DIAGNOSIS FUNCTION

If no acknowledgement is returned from a device which is turned "ON", the device has a problem.
In this case, one of the LED's responding to the problem device will flicker defined number of times.

Flickering is operated by lighting the LED's for 60ms and turning them off for 600ms.

The flickering frequency responding to each failed device is shown below.

Device	NONVOLATILE MEMORY	AV SWITCH (CXA1545S)	MAIN Y/C (TDA9145)	RGB JUNGLE (CXA1587)	DY DSP (CXD2018)	SURROUND PROCESSOR (TA8776N)
Flickering Frequency	1	2	3	4	5	6

All the devices are checked one after another from the left on the table.
If an error is found, the responding LED will start flickering.
So, if more than 2 devices are failed, the one on the left side will start flickering first.

SECTION 5
CIRCUIT ADJUSTMENTS

5-1. ADJUSTMENTS WITH COMMANDER

Service adjustments are made with the RM-845 P that comes with this unit.

Entering service mode

With the unit on standby

↓

"DISPLAY"

↓

"5"

↓

"VOL (+)"

↓

"POWER"

This operation sequence puts the unit into servise mode.

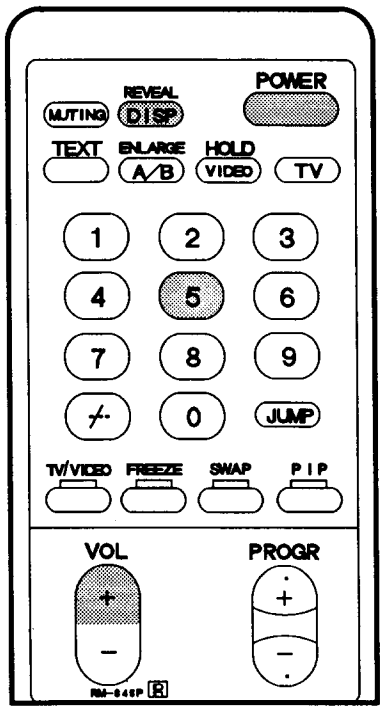

RM-845P

"1", "4"	Raise/lower the service item number
"3", "6"	Raise/lower the data
"MUTE"	Writes
"0"	Executes the writing

"7", "0"	The data all becomes the values in memory
"8", "0"	User control all goes to the standard state
"5", "0"	Service data initialization (Besure not to use usually.)
"2", "0"	Write 50Hz adjustment data to 60Hz, or vice versa.

The screen display is :

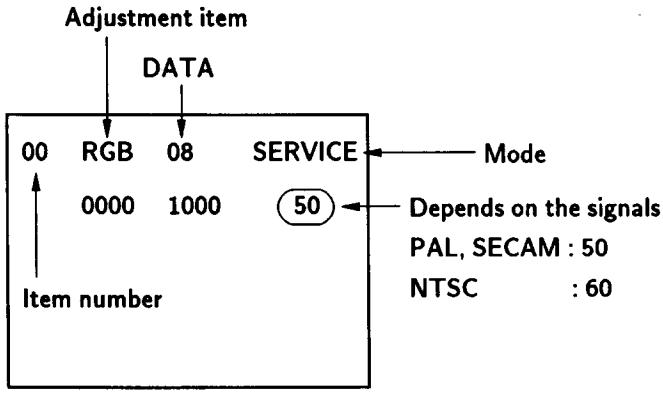

"1", "4"	Select the adjustment item.
↓	
"3", "6"	Raise/lower the data.
↓	
"MUTE"	Writes
↓	
"0"	Executes the writing.

5-2. ADJUSTMENT METHOD

Item Number 24

This explanation uses V-SHFT as an example.

1. Select 24 V-SHFT with the "1" and "4" buttons.
2. Raise/lower the data with the "3" and "6" buttons.
3. Select the optimum state. (The standard is for 0F PAL reception.)
4. Write with the MUTE button. (The display changes to green WRITE.)
5. Execute the writing with the "0" button. (The WRITE display changes briefly to red.)

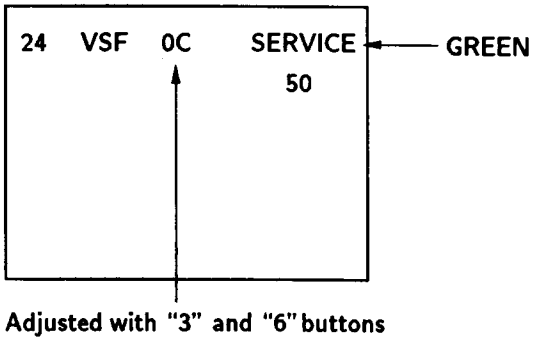

Adjusted with "3" and "6" buttons

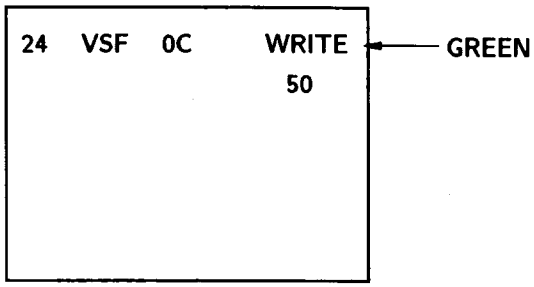

Written with "MUTE"

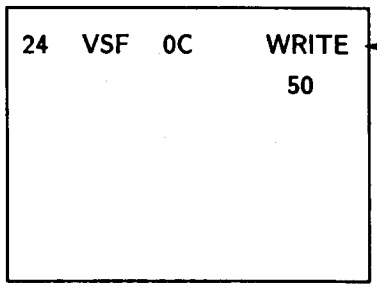

The WRITE display changes briefly to red, then the display returns to a green SERVICE.

Write excuted with "0"

Use the same method for Items Number 00-5E. Use "1" and "4" to select the adjustment item, use "3" and "6" to adjust, write with "MUTE", then execute the write with "0".

Note : In "WRITE", the data of all items are wrote together to memory.

Note : In item 02 50Hz, or item 03 60Hz, it operates normally in spite of the 50Hz or the 60Hz of the input signal. Therefore be sure to adjust data according to the input signal.

Item number	Adjustment Item	Data range	Standard DATA				Note	Device
			50 Hz		60 Hz			
			Normal	Wide	Normal	Wide		
00	RGB	00~0F	07	07	07	07	RGB PICTURE	(CXA 1587 S)
01	SCN	00~0F	08	06	08	06	SUB-Contrast	(CXA 1587 S)
02	VM	00~03	02	02	02	02	VM Level	(CXA 1587 S)
03	SCL	00~0F	08	07	08	07	SUB-COLOR	(CXA 1587 S)
04	SHU	00~0F	08	08	08	08	SUB-HUE	(CXA 1587 S)
05	SBR	00~3F	1F	1F	1F	1F	SUB-BRIGHTNESS	(CXA 1587 S)
06	ABL	00~03	03	03	03	03	ABL Mode	(CXA 1587 S)
07	GDR	00~3F	1F				G Drive	(CXA 1587 S)
08	BDR	00~3F	1F				B Drive	(CXA 1587 S)
09	GCT	00~0F	07				G CUT-OFF	(CXA 1587 S)
0A	BCT	00~0F	07				B CUT-OFF	(CXA 1587 S)
0B	AKR	00~FF	7F				AKB OFF R CUT-OFF	(CXA 1587 S)
0C	AKG	00~FF	7F				AKB OFF G CUT-OFF	(CXA 1587 S)
0D	AKB	00~FF	7F				AKB OFF B CUT-OFF	(CXA 1587 S)
			50 Hz		60 Hz			
0E	GMA	00~0F	0C		0C		γ control	(CXA 1587 S)
0F	DCT	00~03	00		00		DC TRAN	(CXA 1587 S)
10	DPI	00~03	03		03		D-PIC	(CXA 1587 S)
11	YFI	00~3F	22		22		Y Filter Adjust	(CXA 1587 S)
12	SHL	00~01	01		01		SHP-LIM	(CXA 1587 S)
13	YDL	00~0F	07		07		Y Delay Time	(CXA 1587 S)
14	YSW	00~03	01		01		Y-SW OUT	(CXA 1587 S)
15	HSH	00~3F	23		2A		H Shift	(CXA 1587 S)
			5 T	5 V	6 T	6 V		
16	POV	00~0F	08	08	08	08	Pre-Over	(CXA 1587 S)
17	SHF	00~03	02	02	02	02	SHP-F 0	(CXA 1587 S)
18	SSH	00~03	01	02	02	03	SUB-Sharpness	(CXA 1587 S)
19	RMT	00~01	00				R-Mute	(CXA 1587 S)
1A	GMT	00~01	00				G-Mute	(CXA 1587 S)
1B	BMT	00~01	00				B-Mute	(CXA 1587 S)
1C	AG 1	00~01	00				Aging 1 (White)	(CXA 1587 S)
1D	AKF	00~01	00				AKB-OFF	(CXA 1587 S)
			TV		Video			
1E	SMD	00~01	00		00		Scan Mode	(CXA 1587 S)
1F	VEX	00~01	00		00		V-Extension	(CXA 1587 S)
20	AFC	00~03	03		03		AFC Loop Gain	(CXA 1587 S)
21	AFF	00~01	00		00		AFC-OFF	(CXA 1587 S)
22	RFP	00~01	00		00		Reference Position	(CXA 1587 S)
23	VSZ	00~3F	1E	1E	1A	1A	V-Size	(CXD 2018 Q)
24	VSF	00~3F	2E	2E	32	32	V-Shift	(CXD 2018 Q)
25	SCR	00~F	08	08	08	08	S-Correction	(CXD 2018 Q)
26	VLN	00~F	08	08	08	08	V-Linearity	(CXD 2018 Q)
27	HSZ	00~3F	0C	0C	0E	0E	H-Size	(CXD 2018 Q)
28	PAP	00~3F	2E	2E	2E	2E	Pin-Amp	(CXD 2018 Q)
29	TLT	00~0F	09	09	09	09	Tilt	(CXD 2018 Q)
2A	UCP	00~0F	0A	0A	0A	0A	Upper Corner Pin	(CXD 2018 Q)
2B	LCP	00~0F	0C	0C	0C	0C	Lower Corner Pin	(CXD 2018 Q)
2C	VBW	00~0F	08	08	08	08	V-Bow	(CXD 2018 Q)
2D	VAG	00~0F	08	08	08	08	V-Angle	(CXD 2018 Q)
2E	HVV	00~07	04	04	04	04	HV-Comp-V	(CXD 2018 Q)
2F	HVH	00~07	00	00	00	00	HV-Comp-H	(CXD 2018 Q)
30	FCL	00~07	03				Frame Color	(SDA 9188)
31	FON	00~01	01				Frame ON	(SDA 9188)
			50 Hz		60 Hz			
32	DLY	00~07	00		00		Select Delay LL 3 P	(SDA 9188)
33	P-V	00~0F	07		07		V read delay	(SDA 9188)
34	PVS	00~07	04		04		PIP-V offset	(SDA 9188)
35	P-H	00~3F	0A		07		H read delay	(SDA 9188)
36	PHS	00~0F	04		03		PIP-H offset	(SDA 9188)

Item number	Adjustment Item	Data range	Standard DATA 50 Hz Normal	Standard DATA 50 Hz Wide	Standard DATA 60 Hz Normal	Standard DATA 60 Hz Wide	Note	Device
37	CTR	00~0F	0A				Contrast	(SDA 9188)
38	EPL	00~01	01				External PLL	(SDA 9188)
39	FWV	00~01	01				Frame Width V	(SDA 9188)
3A	FWH	00~01	01				Frame Width H	(SDA 9188)
3B	DVI	00~0F	07				Setting Delay VSI	(SDA 9188)
3C	DVP	00~0F	0F				Delay VSP Pulse	(SDA 9188)
3D	BRT	00~0F	0C				Frame BRIGHT Data	(SDA 9188)
3E	LEV	00~0F	00				Level Adjust	(TDA 9840)
3F	STR	00~3F	02				Stereo Adjust	(TDA 9840)
40	AXG	00~01	00				AUX Output Gain	(TDA 8204)
41	AXM	00~01	00				AUX Output Mute	(TDA 8204)
42	VCX	00~01	00				VCXO free run	(TDA 8204)
43	ERC	00~01	00				Error count Time	(TDA 8204)
44	MXE	00~01	00				MAX. allowed Error	(TDA 8204)
45	SRO	00~01	00				SRO set Bit	(TDA 8204)
46	ATO	00~00	01				Auto Selection	(TDA 8204)
47	SYS	00~01	00				System select	(TDA 8204)
48	FSW	00~03	00				Force Switch	(TDA 8204)
49	SYN	00~01	01				Synthesizer	(TDA 8204)
4A	VCR	00~01	00				VCC Reference Sw	(CXP 1315 P)
4B	SEL	00~FF	5F				Separation Level	(CXP 1315 P)
			Normal		Wide			
4C	DCS	00~3F	1F		1F		DC Shift	(CXA 1526 P)
4D	UYB	00~3F	1F		1F		Upper Y Bow	(CXA 1526 P)
4E	LYB	00~3F	1F		1F		Lower Y Bow	(CXA 1526 P)
4F	HAP	00~3F	1F		1F		H. Amp	(CXA 1526 P)
50	HTL	00~3F	1F		1F		H. Tilt	(CXA 1526 P)
51	UCB	00~3F	1F		1F		Upper Corner Bow	(CXA 1526 P)
52	UTL	00~3F	1F		1F		Upper Tilt	(CXA 1526 P)
53	LCB	00~3F	1F		1F		Lower Corner Bow	(CXA 1526 P)
54	LTL	00~3F	1F		1F		Lower Tilt	(CXA 1526 P)
55	TXP	00~0F	00				Teletext Picture	(Teletext μ-Con)
56	ODL	00~FF	10				Power ON Delay	(CXP 80424)
57	OSH	00~3F	0 F				OSD Position H	(CXP 80424)
58	BLU	00~01	01				Blue Back Feature	(CXP 80424)
59	ROC	00~0F	04				Center of Rotation	(CXP 80424)
5A	ROS	00~07	07				Step Width	(CXP 80424)
5B	HTR	00~3F	1F	1F	1F	1F	H Trapezoid	(CXP 80424)
5C	MUT	00~01	01				No Sync. Mute	(CXP 80424)
5D	DID	00~01	00				Disable Degauss	(CXP 80424)
5E	OP0	00~FF	6D				Option 0	(CXP 80424)
5F	OP1	00~0F	01				Option 1	(CXP 80424)

*1 : Input data are different according to models.

Item	CCD	Text	PinP	Jpn	Nicm	W.G	Mts	Comb
KV-L34MF1	0	0	1	0	0	0	0	1
KV-L34MH11	0	1	1	0	1	1	0	1
KV-L34MN11	0	1	1	0	1	1	0	1
KV-L34SN11	0	1	1	0	1	1	0	1

*2 : Input data are different according to models.

Item	—	—	—	—	Mono	Tilt	Dcon	Chin
KV-L34MF1	0	0	0	0	0	0	1	1
KV-L34MH11	0	0	0	0	0	0	1	1
KV-L34MN11	0	0	0	0	0	0	1	1
KV-L34SN11	0	0	0	0	0	0	1	1

5-3. DISPLAY POSITION ADJUSTMENT

Item Numbers 35-36

33 P-V Pin-P vertical position correction
34 PVS Pin-P vertical offset
35 P-H Pin-P horizontal position correction
36 PHS Horizontal offset

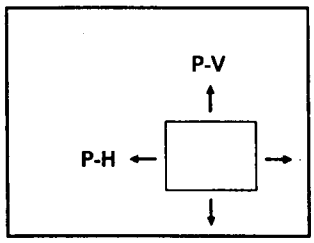

When pressing PIP "POSITION" key in the service mode, "POSITION" turns round and round automatically.

Item numbers 33-36 are set to the standerd values.

54 TXP Teletext picture
Corrects the brightness for when teletext is received.
Standard value is 05.

5-4. A BOARD ADJUSTMENT

SUB CONTRAST ADJUSTMENT (SCN)

1. Receive a PAL color-bar.
2. Put DC 3.0 V to the pin ㉘ (ABL IN) of IC 304, A board. Set the PICTURE 100%, BRIGHT 50% and COLOR MIN.
3. Connect an oscilloscope to the pin ⑥ (R OUT) of CN118, A board.
4. Set to Service Mode and select 01 (SCN) with 1 and 4 of the commander to adjust to 2.2±0.05 V.
5. Press MUTING → 0 of the commander to write the data.
6. Receive a NTSC color-bar and adjust 01 (SCN) same value as PAL.
7. Receive the PAL color-bar to set to WIDE mode by pressing MENU. Then set to Service Mode and adjust 01 (SCN) to write the 2 step dropped value of the step 4.
8. Receive the NTSC color-bar and adjust as step 7.

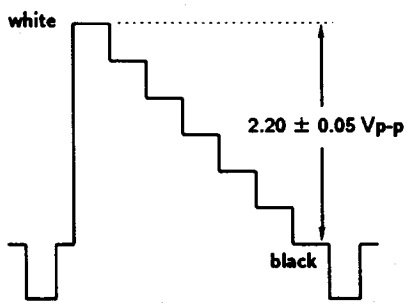

SUB COLOR ADJUSTMENT (SCL)

1. Receive a PAL color-bar.
2. Connect an oscilloscope to the pin ⑦ (B OUT) of CN118, A board.
3. Set to Service Mode and select 03 (SCL) with 1 and 4 of the commander to adjust to VB2=VB3=VB4 with 3 and 6.
4. Press MUTING → 0 of the commander to write the data.
5. Adjust as step 3 and 4 by receiving NTSC color-bar.

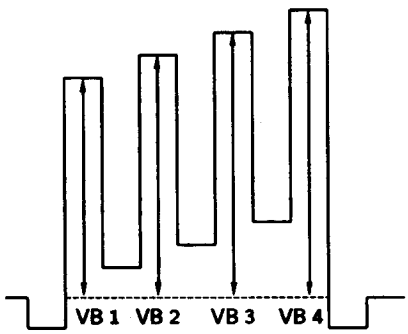

VB 2=VB 3=VB 4

6. Receive the PAL color-bar to set to WIDE mode by pressing MENU. Then set to Service Mode and adjust 03 (SCL) to write the 1 step dropped value of the step 4.
7. Receive the NTSC color-bar and adjust as step 6.

SUB HUE ADJUSTMENT (SHU)

1. Receive a NTSC color-bar.
2. Connect an oscilloscope to the pin ⑦ (B OUT) of CN 118, A board.
3. Select 04 (SHU) with 1 and 4 of the commander by setting to Service Mode and adjust to VB 1=VB 2 =VB 3=VB 4 with 3 and 6.

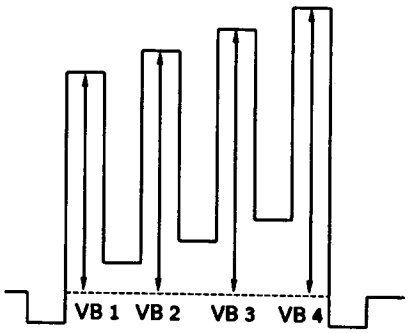

VB 1=VB 2=VB 3=VB 4

4. Press MUTING → 0 of the commander to write the data.
5. Set to WIDE Mode by MENU button to write the same value as the step 3.

Y. FILTER ADJUSTMENT (YF1)

1. Set to Service Mode.
2. Select 14 (Y. SW) with the 1 and 4 of the commander to set the data "3" with 3 and 6.
3. Put SINE wave of 4.43 MHz to the pin ② (YIN) of IC304.
4. Connect an oscilloscope to the pin ① of CN105, A board.
5. Adjust so that the waveform is minimum by selecting 11 (YF1) with 3 and 6.
   Change back 14 (Y. SW) to data "1".
6. Press MUTING → 0 of the commander to write the data.

PIP H. V. POSITION (P-H, P-V)

1. Receive a PAL color-bar.
2. Set the PIP picture by pressing PIP button of the commander.
3. Set to Service Mode.
4. Select 33 (P-V) with the 1 and 4 of the commander to set the data "07" with 3 and 6.
5. Select 35 (P-H) to set the data "0A" .
6. Receive a NTSC color-bar.
7. Select 33 (P-V) to set the data "07" with 3 and 6. Select 36 (PHS) to set the data "03 " with 3 and 6.
8. Check by pressing POSITION of the commander.
9. Press MUTING → 0 of commander to write the data.

5-5. D1 BOARD ADJUSTMENT

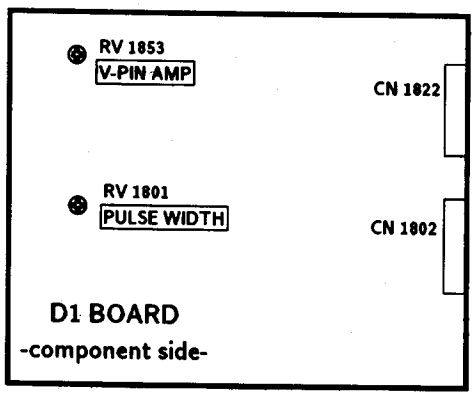

V-PIN AMP, PULSE WIDTH ADJUSTMENT (RV1853, RV1801)

1. Receive a color-bar.
2. Connect AC voltmeter between the pin ① of CN1802 and GND.
3. Turn RV1853 clockwise to the end and RV1801 counterclockwise to the end.
4. Turn RV1801 clockwise a little to adjust the value on the AC voltmeter to AC25 ± 0.5 Vp-p.

5-6. PICTURE DISTORTION ADJUSTMENT

Item Numbers 23-2D

23 VSZ (V SIZE)



24 VSF (V SHIFT)



25 SCR (VERTICAL S correction)



26 VLN (V LINEARITY)

27 HSZ (H SIZE)



28 PAP (PIN AMP)

29 TLT (TILT)



2A UCP (Upper Corner Pin)

2B LCP (Lower Corner Pin)

2C VBOW (V-BOW)



2D VAG (V-ANGLE)



RM-845P

SECTION 6
DIAGRAMS

6-1. BLOCK DIAGRAM

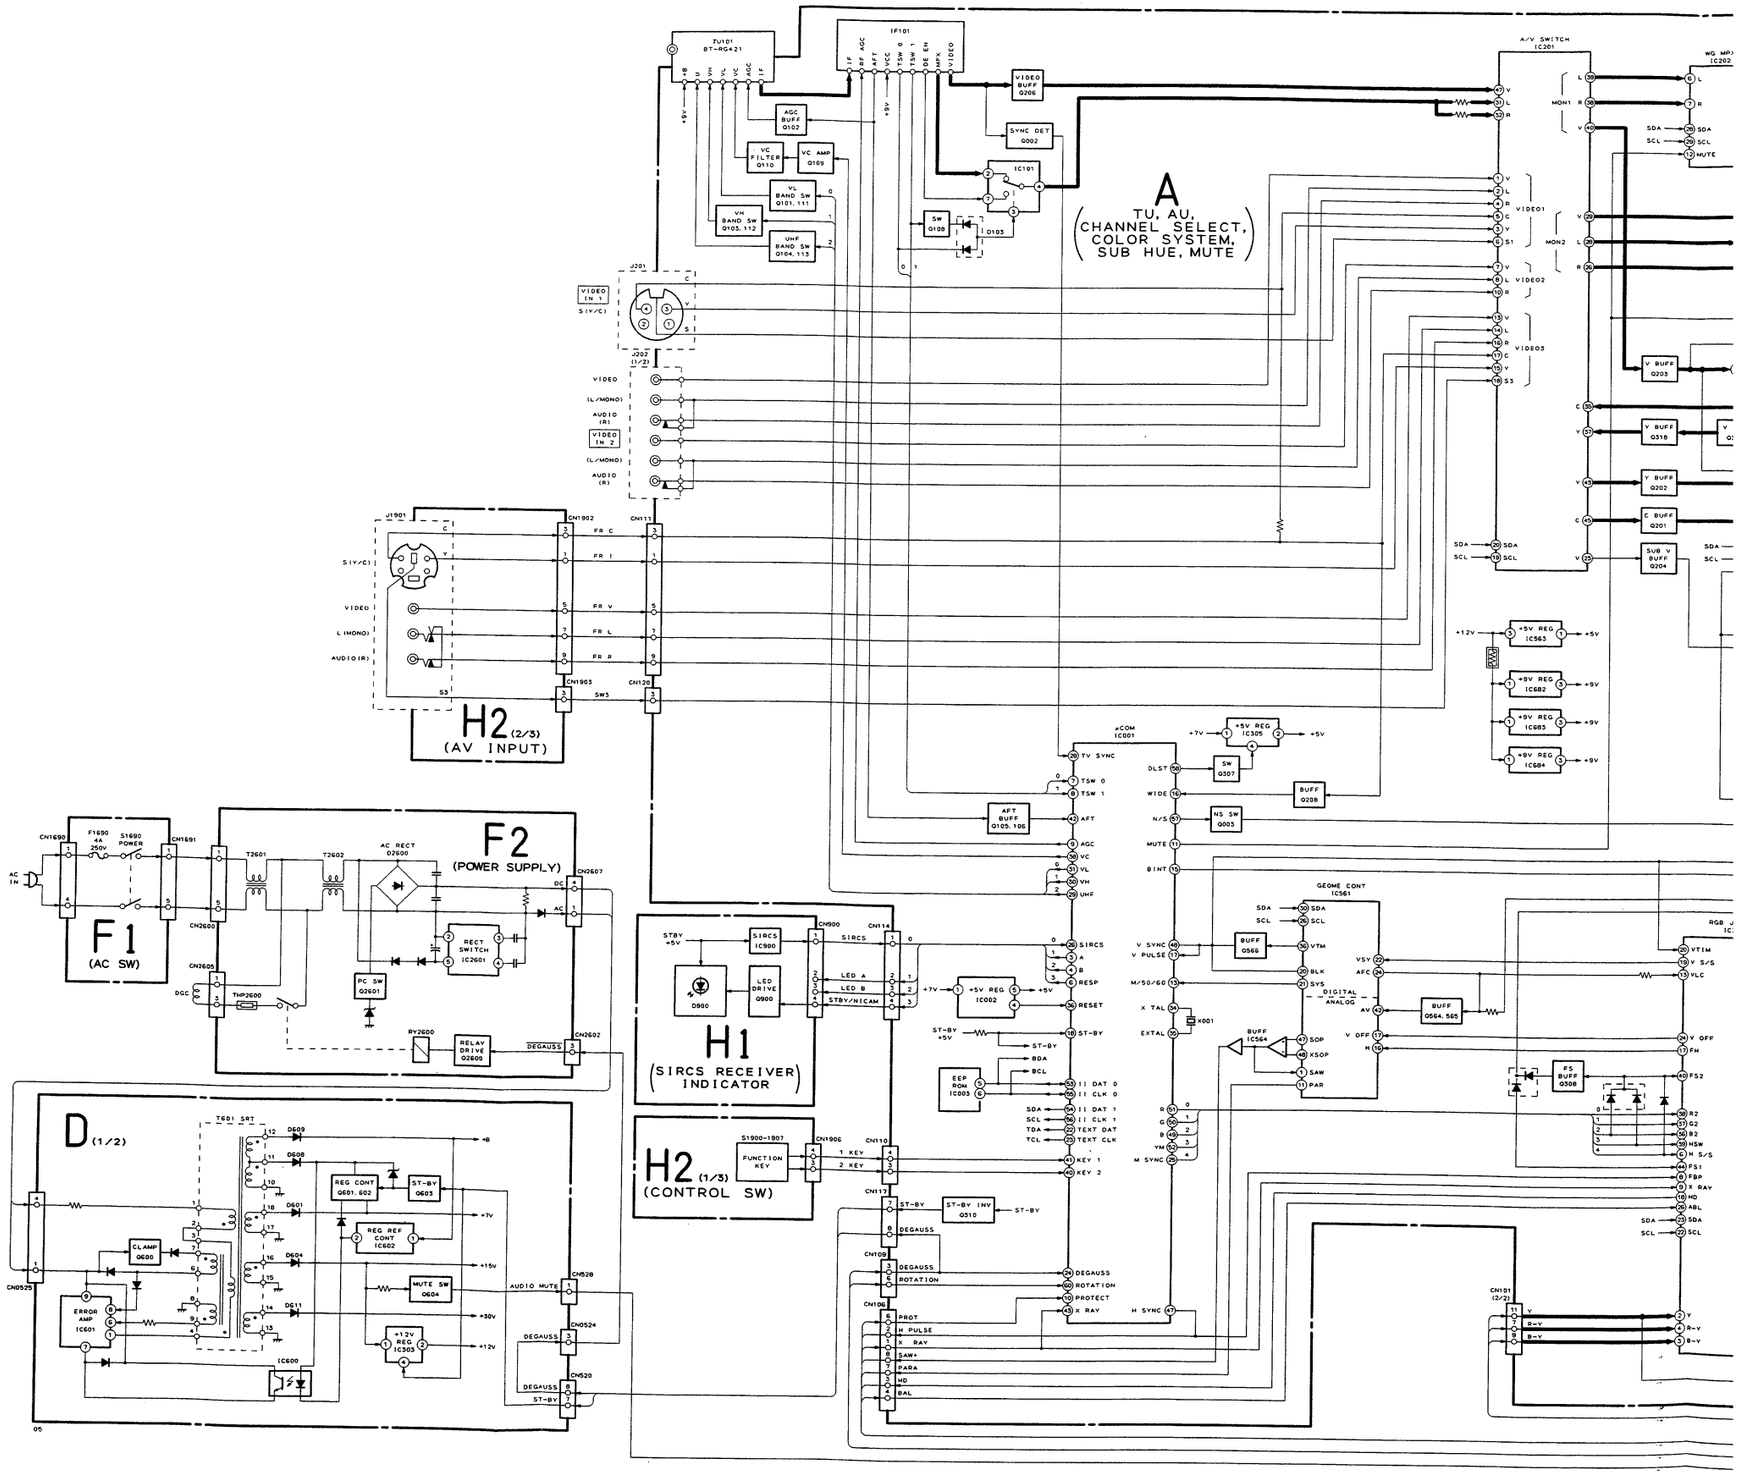

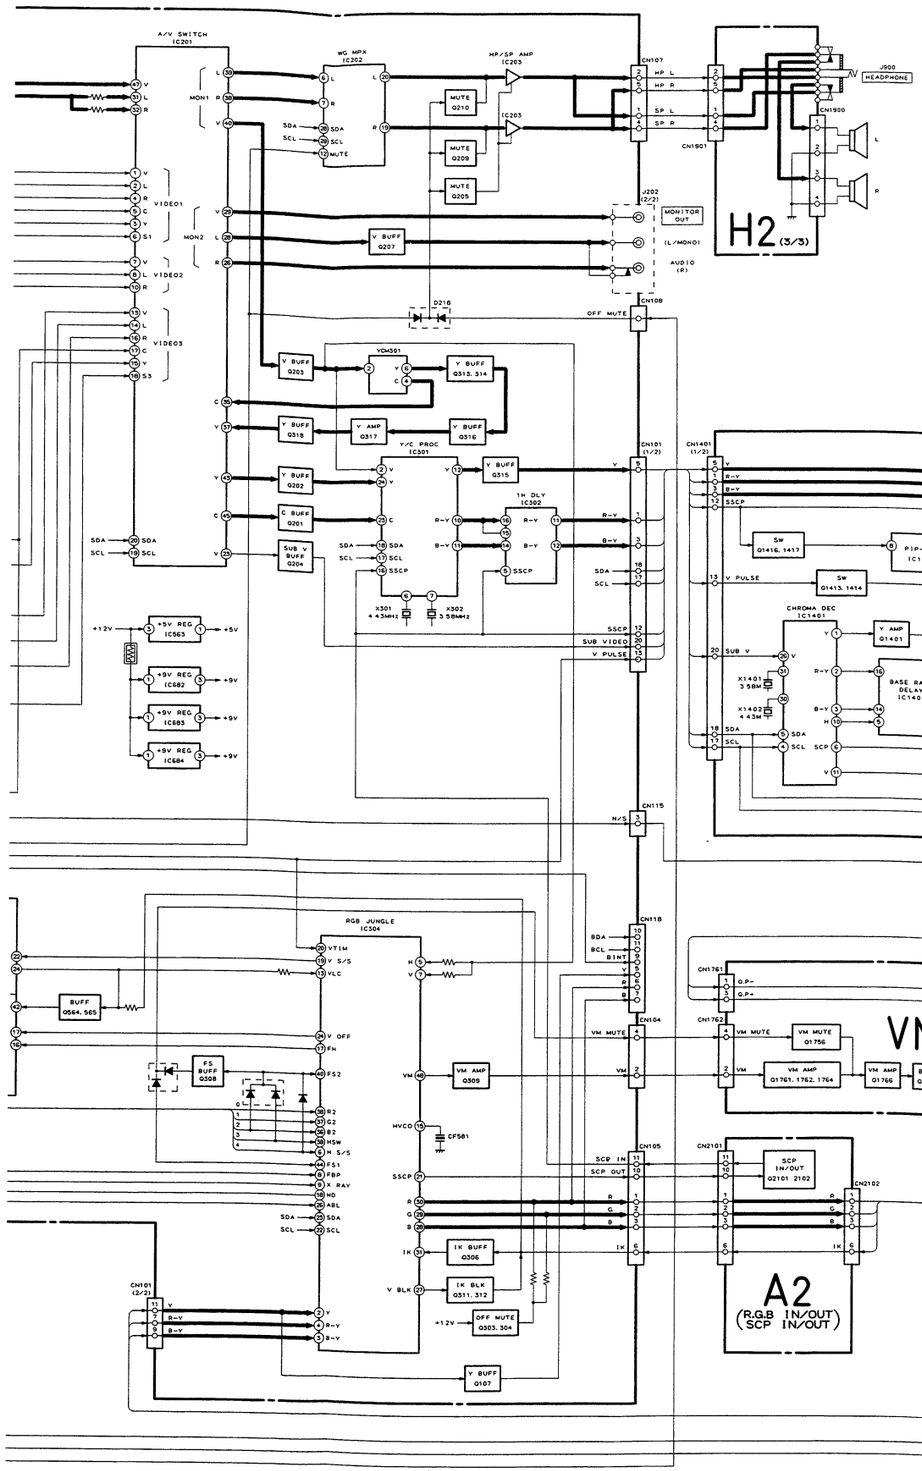
A/V SWITCH IC201
WG MPX IC202
HP/SP AMP IC203
MUTE Q210
MUTE Q209
MUTE Q205
CN107
HP L
HP R
SP L
SP R
CN1901
J900 HEADPHONE
CN1900
H2 (3/3)
J202 (2/2)
MONITOR OUT
AUDIO (L/MONO)
AUDIO (R)
VIDEO1
VIDEO2
VIDEO3
MON1
MON2
V BUFF Q207
D216
CN108
OFF MUTE
V BUFF Q203
YDM301
V BUFF Q313, 314
Y BUFF Q318
Y AMP Q317
V BUFF Q316
Y BUFF Q202
Y/C PROC IC301
Y BUFF Q315
1H DLY IC302
C BUFF Q201
SUB V BUFF Q204
X301 4.43MHz
X302 3.58MHz
CN101 (1/2)
+5V REG IC563
+5V REG IC682
+5V REG IC683
+5V REG IC684
CN115
N/S
CN1401 (1/2)
SW Q1416, 1417
PIP-PLL IC1405
SW Q1413, 1414
V/U/V SW IC1406
PIN CONCEPT IC1404
PIN CONCEPT IC1403
CHROMA DEC IC1401
V AMP Q1401
V BUFF Q1404, 1405
BASE RAND DELAY IC1402
R-Y BUFF Q1402
B-Y BUFF Q1403
SW Q1415
BUFF Q1420
BUFF Q1422
BUFF Q1421
BUFF Q1408
BUFF Q1407
BUFF Q1409
BUFF Q1406
+12V REG IC1407
+8V REG IC1410
+5V REG IC1411
CN1401 (2/2)
P (PINP)
RGB JUNGLE IC304
BUFF Q564, 565
FS BUFF Q308
VM AMP Q309
CF581
IK BUFF Q306
IK BLK Q311, 312
OFF MUTE Q303, 304
V BUFF Q107
CN118
CN104
CN105
CN2101
CN2102
SCP IN/OUT Q2101, 2102
A2 (R.G.B IN/OUT SCP IN/OUT)
CN1761
CN1762
VM MUTE Q1756
VM AMP Q1761, 1762, 1764
VM AMP Q1766
BUFF Q1767
VM DRIVE Q1763, 1765
NECK ASS'Y
VM (VM OUT)
C (RGB OUT)
CN703
R DRIVE Q712
G DRIVE Q711
B DRIVE Q710
IK DET Q713
R AMP Q706
G AMP Q705
B AMP Q704
BIAS Q714
R OUT Q703
G OUT Q702
B OUT Q701
IK LIMIT Q709
IK LIMIT Q708
IK LIMIT Q707
PICTURE TUBE
CN701
RV701 Q2
RV702 H STAT
D1 (ROTATION CIRCUIT, V PIN CORRECTION, PICTURE ROTATION CONT., V PIN CONT.)
CN1801
ROTATION
N/S MUTE
N/S DRIVE IC1804
INV Q1816
BUFF Q1814, 1815
N/S DRIVE Q1816, 1817
DEGAUSS SW Q1812, 1813
CN1804
N/S COIL
RV1801 PULSE WIDTH
CN526
H TRPZ
CN0523 (1/2)
CN1802 (1/2)
IC1852
V PIN DRIVE IC1853
INV Q1851
V PIN DRIVE/OUT Q1859-1861
V PIN DRIVE/OUT Q1854-1856
L1852
V POT
RV1853 V PIN AMP
VCC DRV IC1852
VCC OUT Q1857, 1858
CN1802 (2/2)
CN0523 (2/2)
CN518
CN1822
CN0522
GP DRIVE Q1840, 1841
+5V REG IC1851
CN0532
T801 FBT
D801
D815
D814
D816
T804
DY ASS'Y
CN0506
H DRIVE
H DRIVE Q2502
T2502 HDT
H OUT Q2591
DAMPER
T2503 PMT
L2509 HLC
PIN DRIVE Q2505
PIN OUT Q2503
PIN CONTROL IC2504
S2501
S2502
D (2/2) (H/V OUT)
H PULSE
PARA
ABL
SAW+
V OUT IC1501
PROT
PROTECT Q1501-1504
X RAY
OCP OUT Q803
IC804

6-2. FRAME SCHEMATIC DIAGRAM

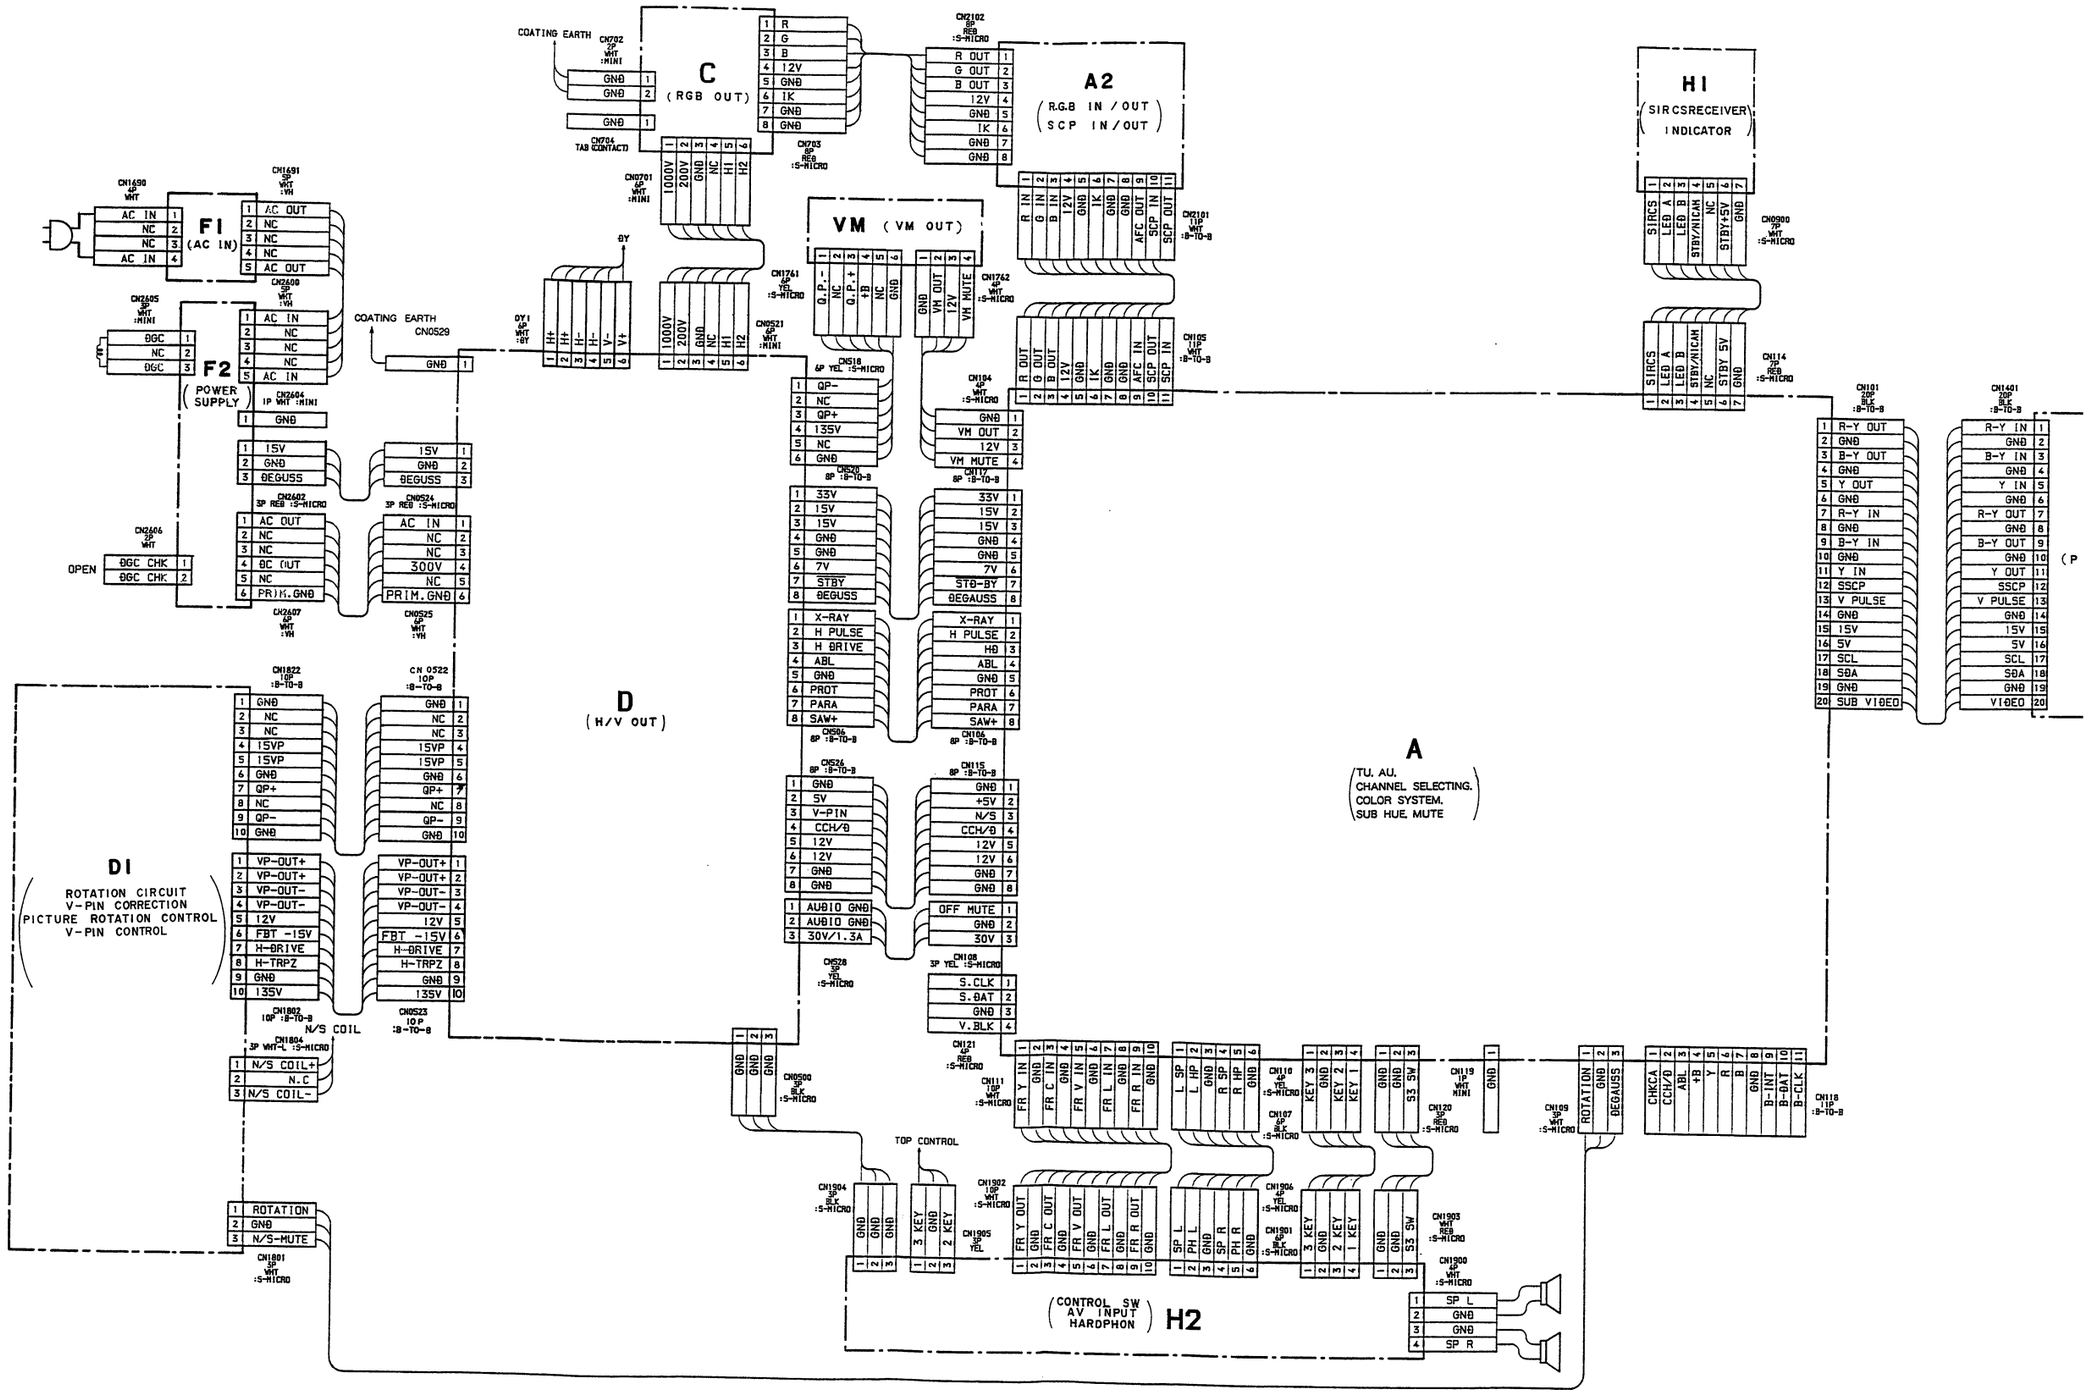

. CIRCUIT BOARDS LOCATION

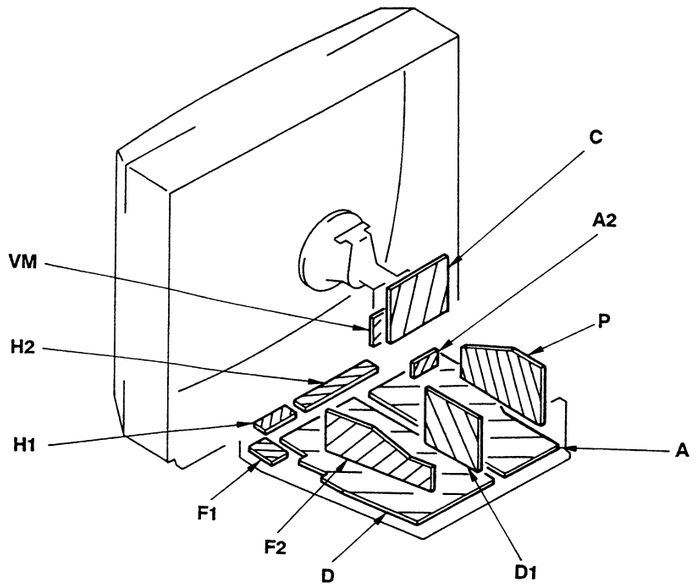

6-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytic and tantalums.
- All resistors are in ohms.
  kΩ =1000Ω, MΩ =1000KΩ
- Indication of resistance, which does not have one for rating electrical power, is as follows.

  Pitch: 5 mm
  Rating electrical power ¼ W (CHIP: 1/10W)

- : nonflammable resistor.
- △ : internal component.
- ▭ : panel designation, or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Readings are taken with a color-bar signal input.
  no mark : PAL
  〈 〉: SECAM
  ( ): NTSC 3.58
  { }: NTSC 4.43
- Readings are taken with a 10 MΩ digital multimeter.
- Voltage are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- ＊ : Can not be measured.
- Circled numbers are waveform reference.
- ▬▬ : B + bus.
- ▬ ▬ : B − bus.
- ▒▒▒ : signal path.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ※	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

PRINTED WIRING BOARDS

F1 [AC IN] **H1** [SIRCS RECEIVER, INDICATOR] **F2** [POWER SUPPLY] **H2** [CONTROL SW, AV INPUT, HEADPHONE]

– F1 Board –

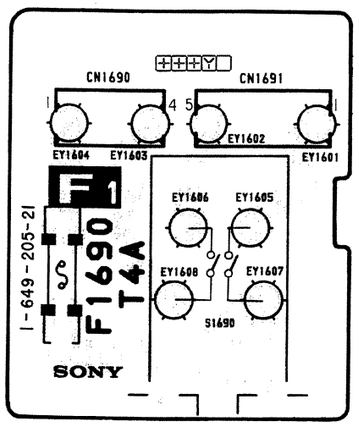

– H1 Board –

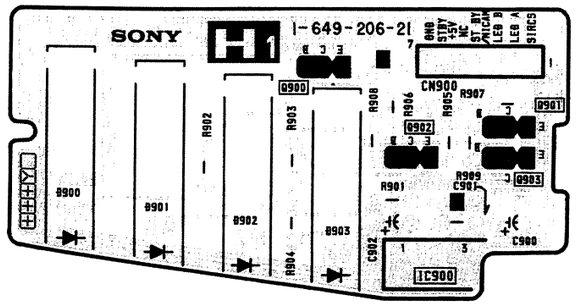

– F2 Board –

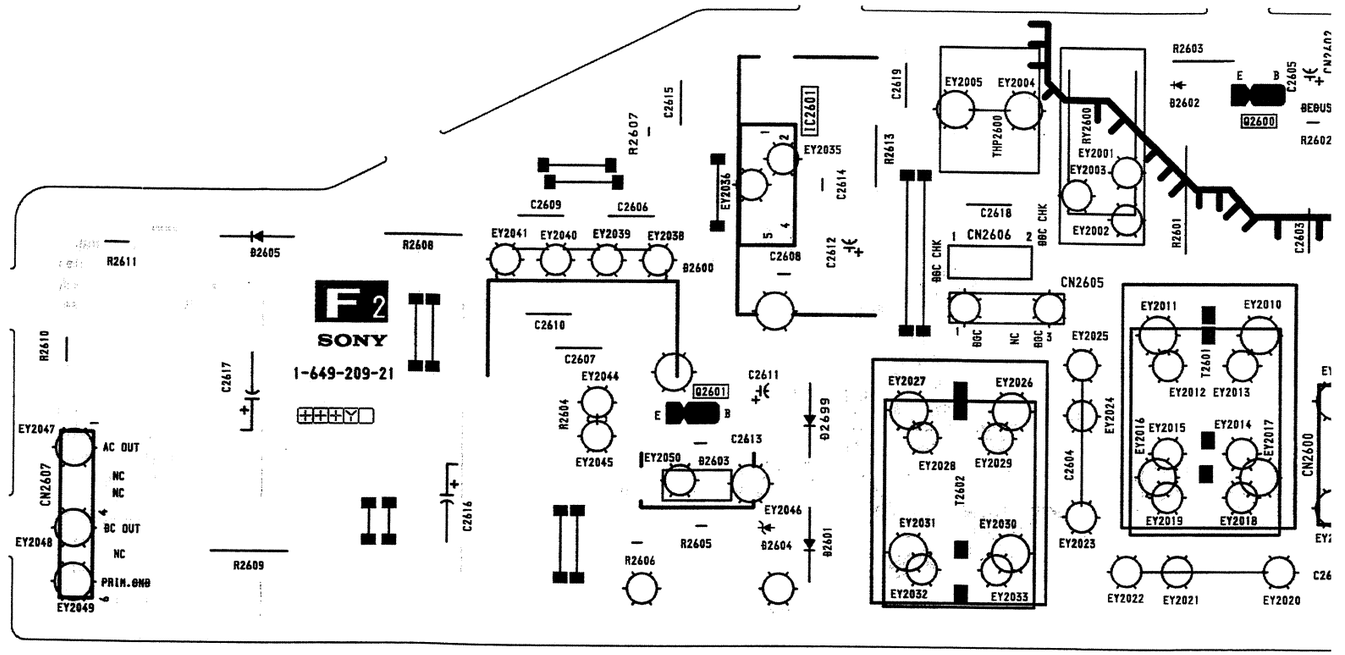

– H2 Board –

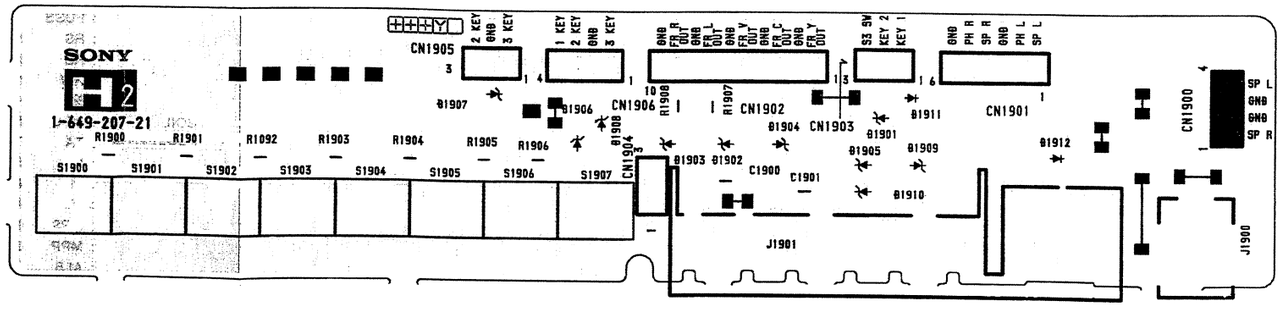

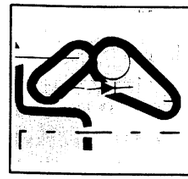

NOTE:
The cir
600 Vp
inspecti

– D Board –

D [H/V OUT]

• **D BOARD**

IC		DIODE	
IC303	F – 3	D601	B – 4
IC600	B – 1	D602	D – 4
IC601	B – 3	D604	C – 2
IC602	F – 1	D606	D – 4
IC804	F – 7	D607	C – 2
IC1501	E – 10	D608	E – 2
IC2504	E – 3	D609	D – 2
		D610	B – 3
		D611	D – 2
		D612	E – 1
		D613	A – 3
		D614	E – 1
		D615	F – 2
		D616	D – 4
		D617	A – 3
		D624	F – 2
TRANSISTOR		D801	C – 7
		D802	B – 9
Q600	C – 4	D803	F – 6
Q601	E – 1	D814	E – 9
Q602	E – 1	D815	B – 8
Q603	E – 1	D816	A – 9
Q604	F – 3	D824	E – 5
Q803	F – 6	D825	E – 5
Q1501	F – 9	D1501	E – 9
Q1502	E – 9	D1502	F – 5
Q1503	E – 9	D1503	E – 10
Q1504	F – 9	D1504	F – 9
Q2501	F – 4	D1505	F – 5
Q2502	D – 5	D1506	E – 9
Q2503	E – 4	D2506	D – 7
Q2505	E – 4	D2507	E – 7
Q2591	D – 6	D2508	D – 6
		D2509	E – 3
		D2510	B – 5
		D2511	C – 5
		D2512	F – 4
		D2515	F – 4
		D2524	F – 3
		D2526	F – 1
		D2527	F – 1

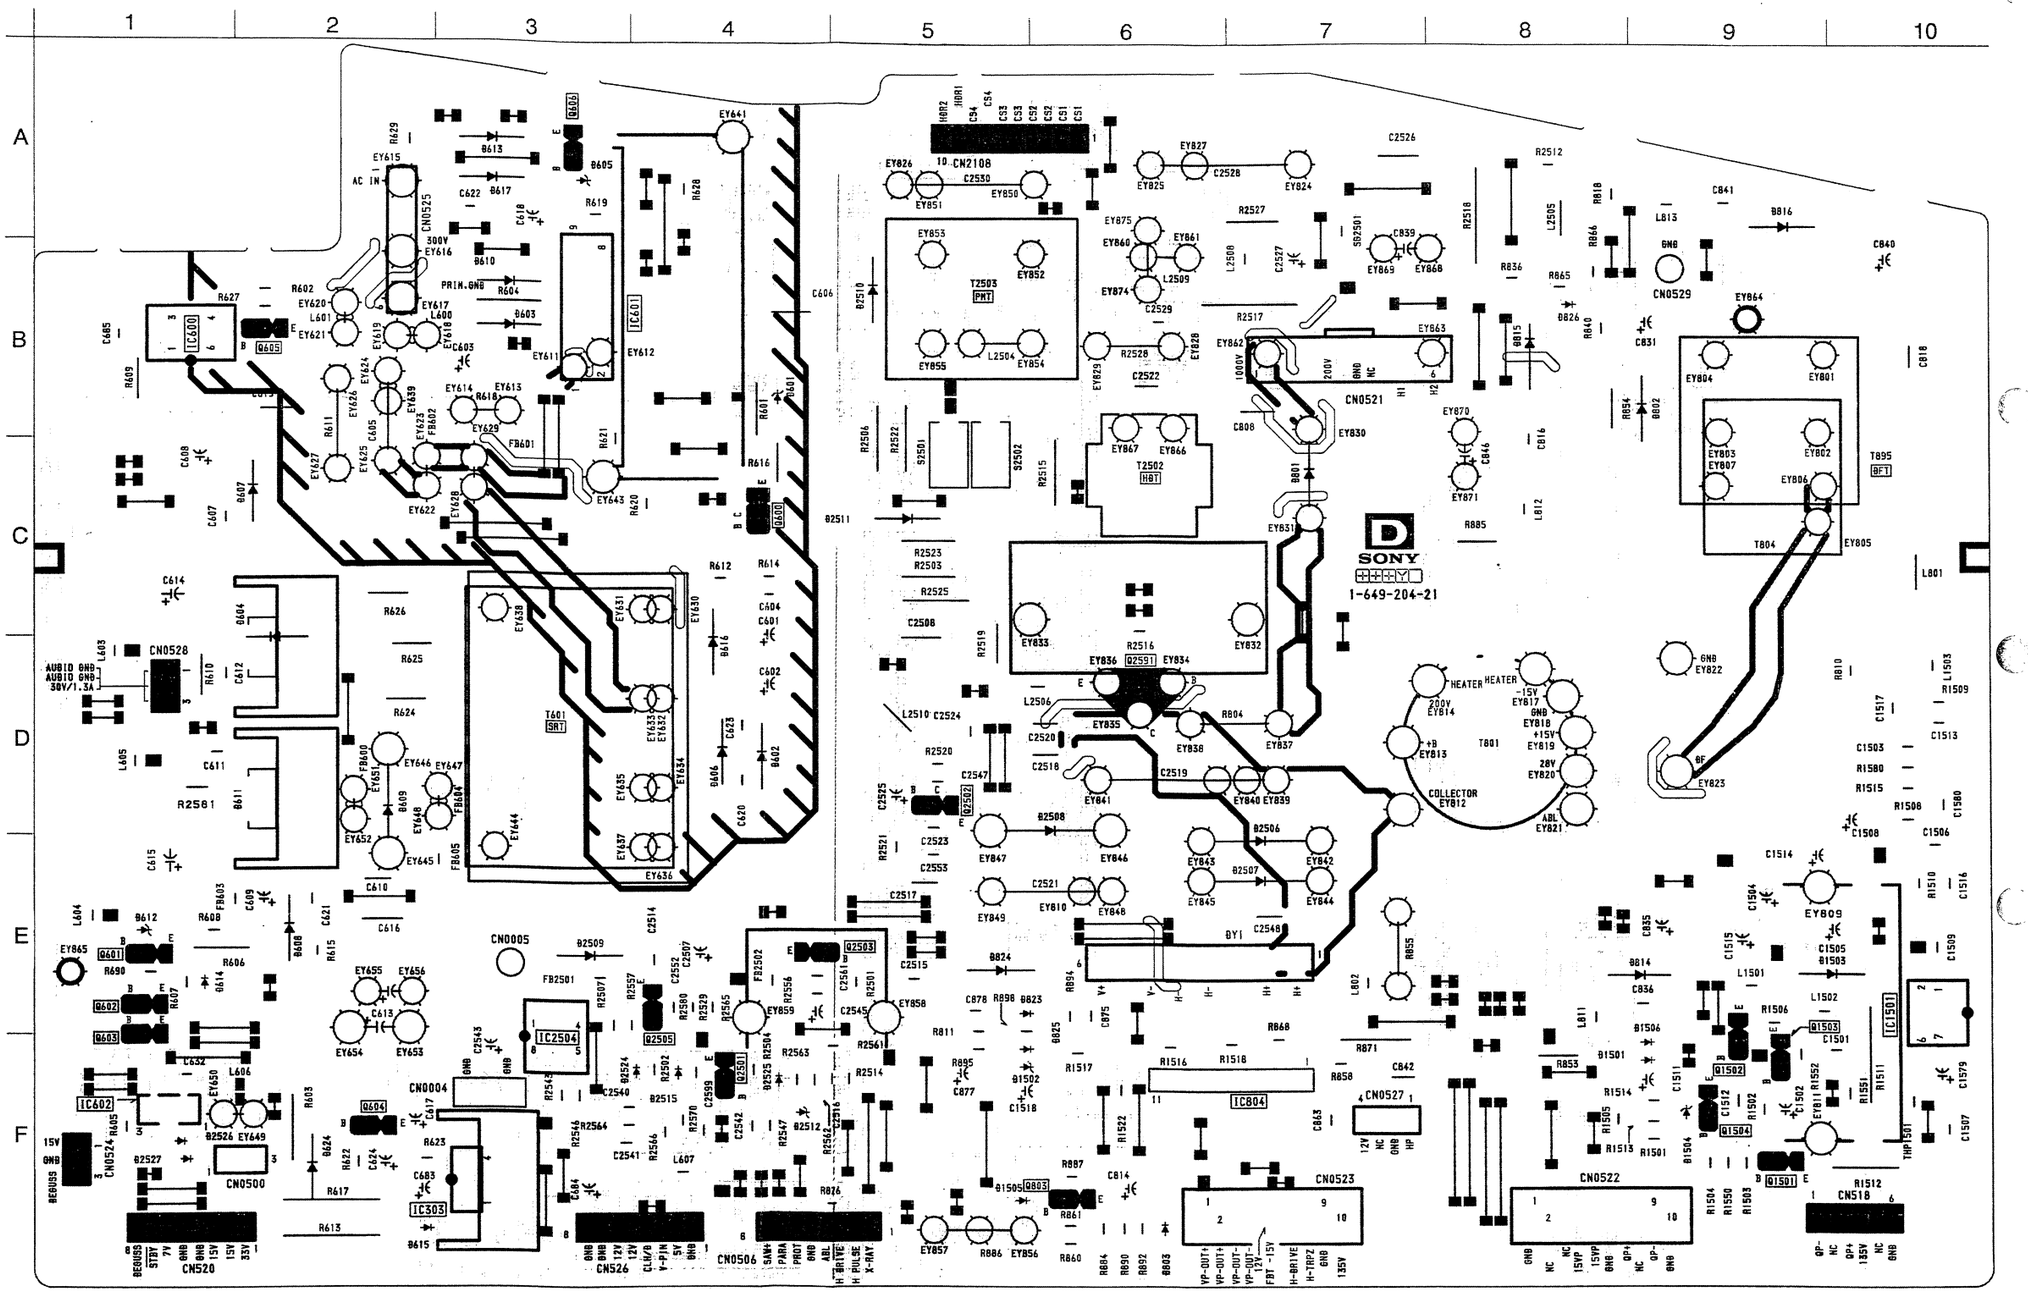

:ed as left contains high voltage of over
ıst be paid to prevent an electric shock in
ring.

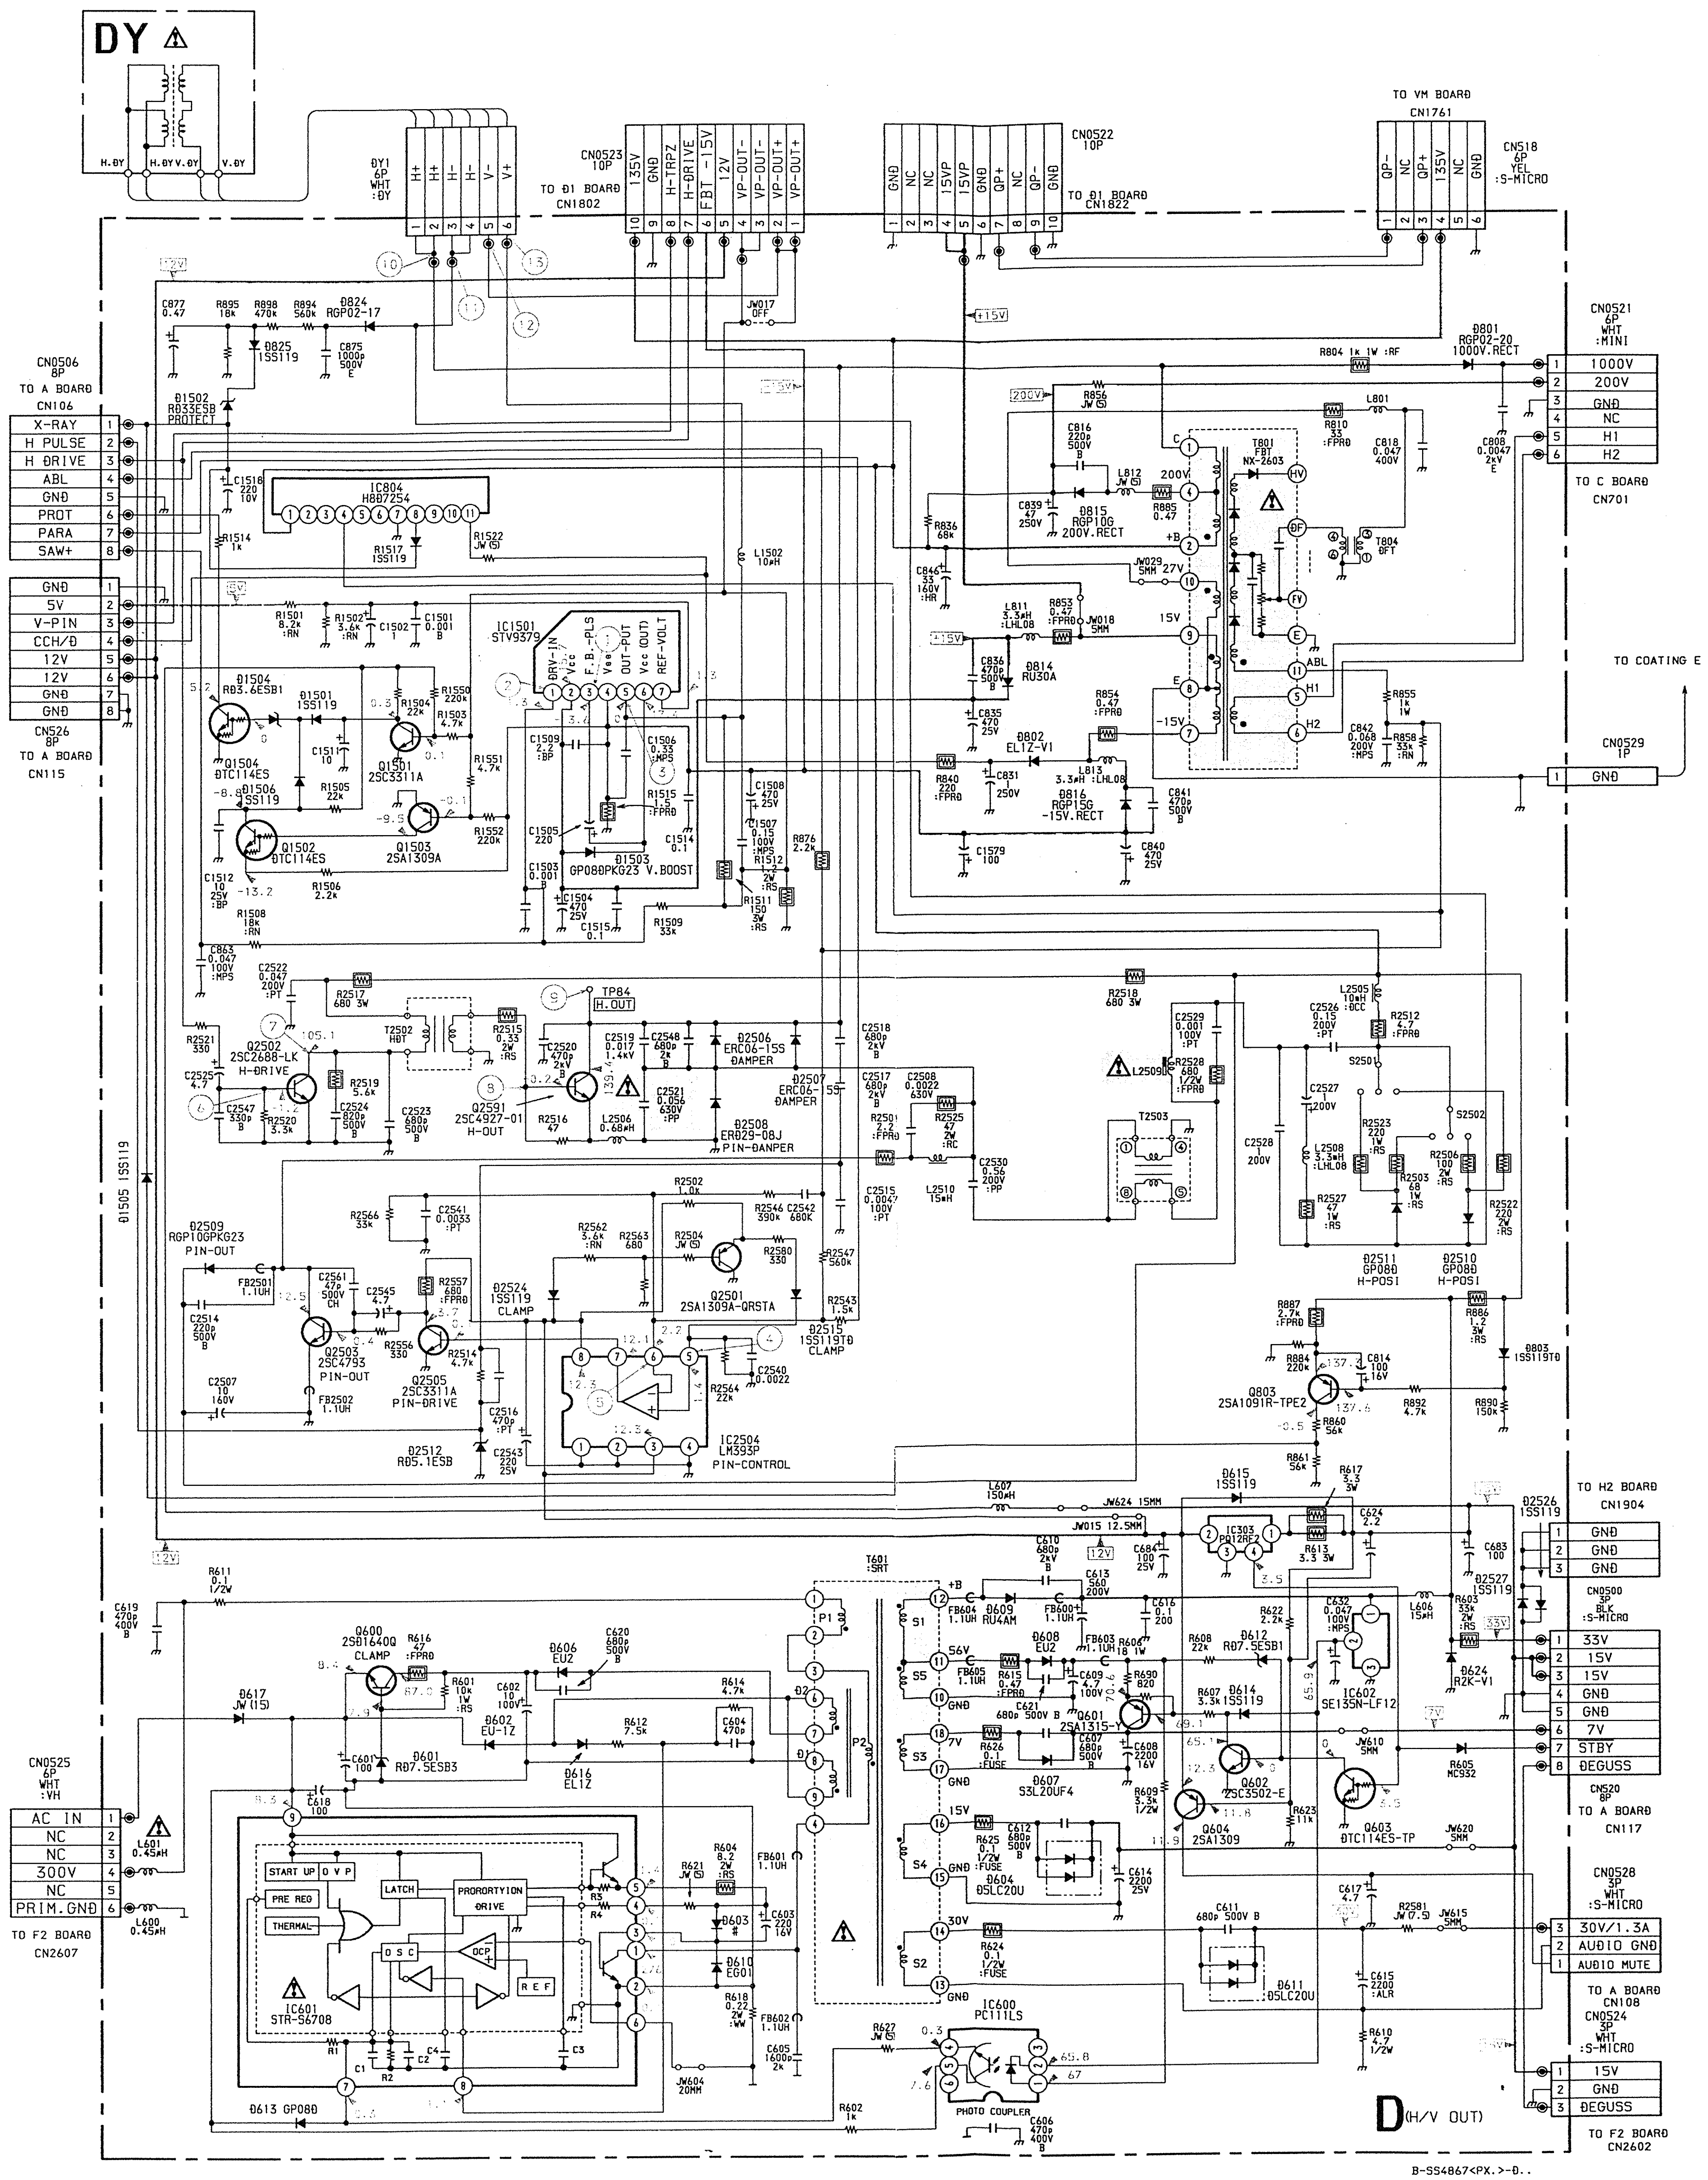
DY
CN0506 8P TO A BOARD CN106
X-RAY
H PULSE
H DRIVE
ABL
GND
PROT
PARA
SAW+
GND
5V
V-PIN
CCH/D
12V
12V
GND
GND
CN526 8P TO A BOARD CN115
DY1 6P WHT :DY
H+
H+
H-
H-
V-
V+
CN0523 10P TO D1 BOARD CN1802
135V
GND
H-TRPZ
H-DRIVE
FBT -15V
12V
VP-OUT-
VP-OUT-
VP-OUT+
VP-OUT+
CN0522 10P TO D1 BOARD CN1822
GND
NC
NC
15VP
15VP
GND
QP+
NC
QP-
GND
TO VM BOARD CN1761
QP-
NC
QP+
135V
NC
GND
CN518 6P YEL :S-MICRO
IC804 HBD7254
IC1501 STV9379
T801 FBT NX-2603
T804 DFT
CN0521 6P WHT :MINI
1000V
200V
GND
NC
H1
H2
TO C BOARD CN701
TO COATING E
CN0529 1P
GND
Q2502 2SC2688-LK H-DRIVE
T2502 HDT
TP84 H.OUT
Q2591 2SC4927-01 H-OUT
D2506 ERC06-15S DAMPER
D2507 ERC06-15S DAMPER
D2508 ERD29-08J PIN-DANPER
T2503
Q2503 2SC4793 PIN-OUT
Q2505 2SC3311A PIN-DRIVE
Q2501 2SA1309A-QRSTA
IC2504 LM393P PIN-CONTROL
Q803 2SA1091R-TPE2
TO H2 BOARD CN1904
GND
GND
GND
CN0500 3P BLK :S-MICRO
33V
15V
15V
GND
GND
7V
STBY
DEGUSS
CN520 8P TO A BOARD CN117
CN0528 3P WHT :S-MICRO
30V/1.3A
AUDIO GND
AUDIO MUTE
TO A BOARD CN108
CN0524 3P WHT :S-MICRO
15V
GND
DEGUSS
TO F2 BOARD CN2602
CN0525 6P WHT :VH
AC IN
NC
NC
300V
NC
PRIM.GND
TO F2 BOARD CN2607
Q600 2SD1640Q CLAMP
IC601 STR-S6708
START UP
O V P
LATCH
PROPORTYION DRIVE
PRE REG
THERMAL
O S C
OCP
R E F
T601 :SRT
IC303 PQ12RF2
IC602 SE135N-LF12
Q601 2SA1315-Y
Q602 2SC3502-E
Q604 2SA1309
Q603 DTC114ES-TP
IC600 PC111LS
PHOTO COUPLER
D(H/V OUT)
B-SS4867<PX.>-D..

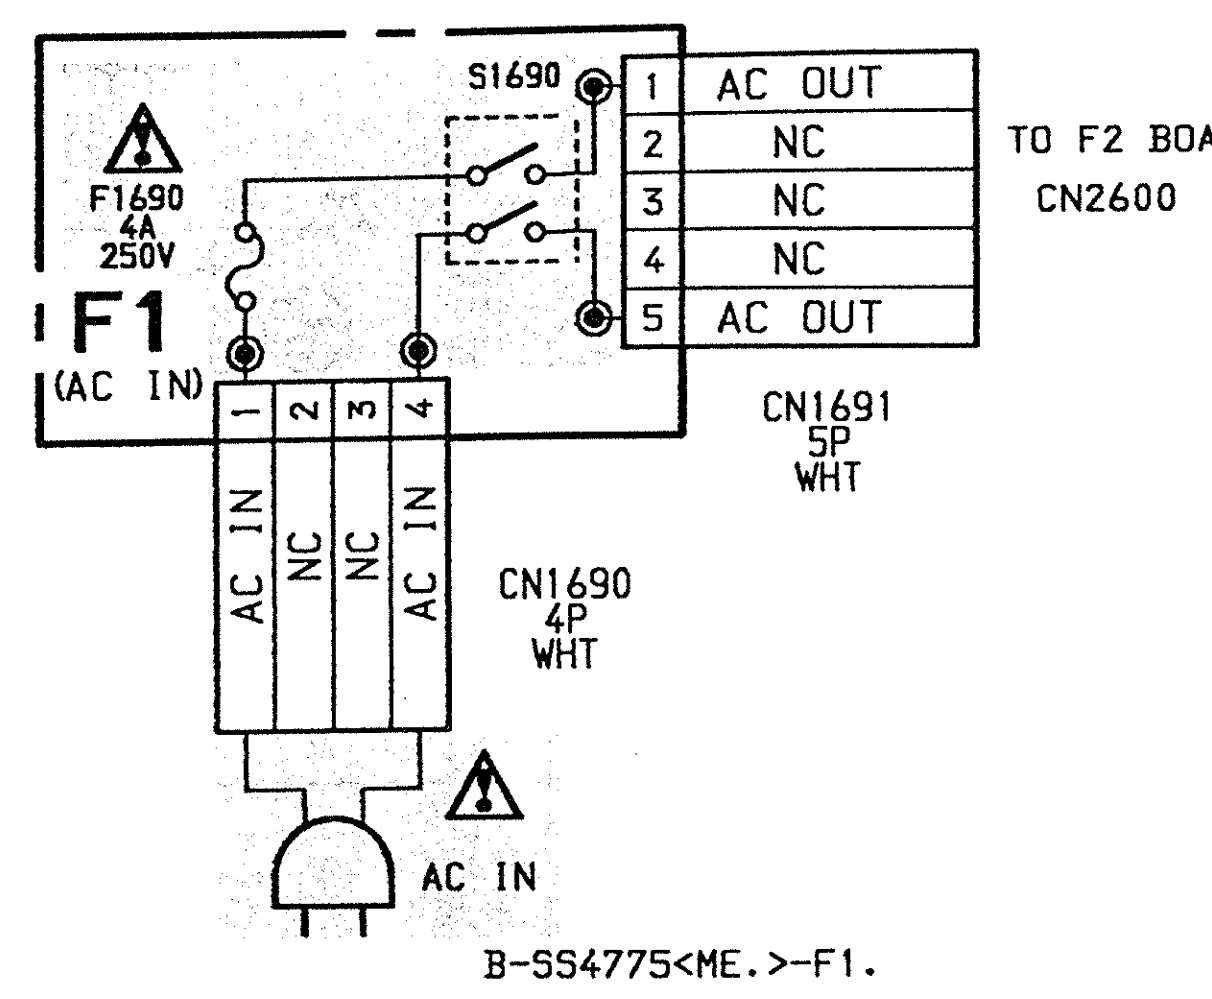

• D BOARD WAVEFORMS

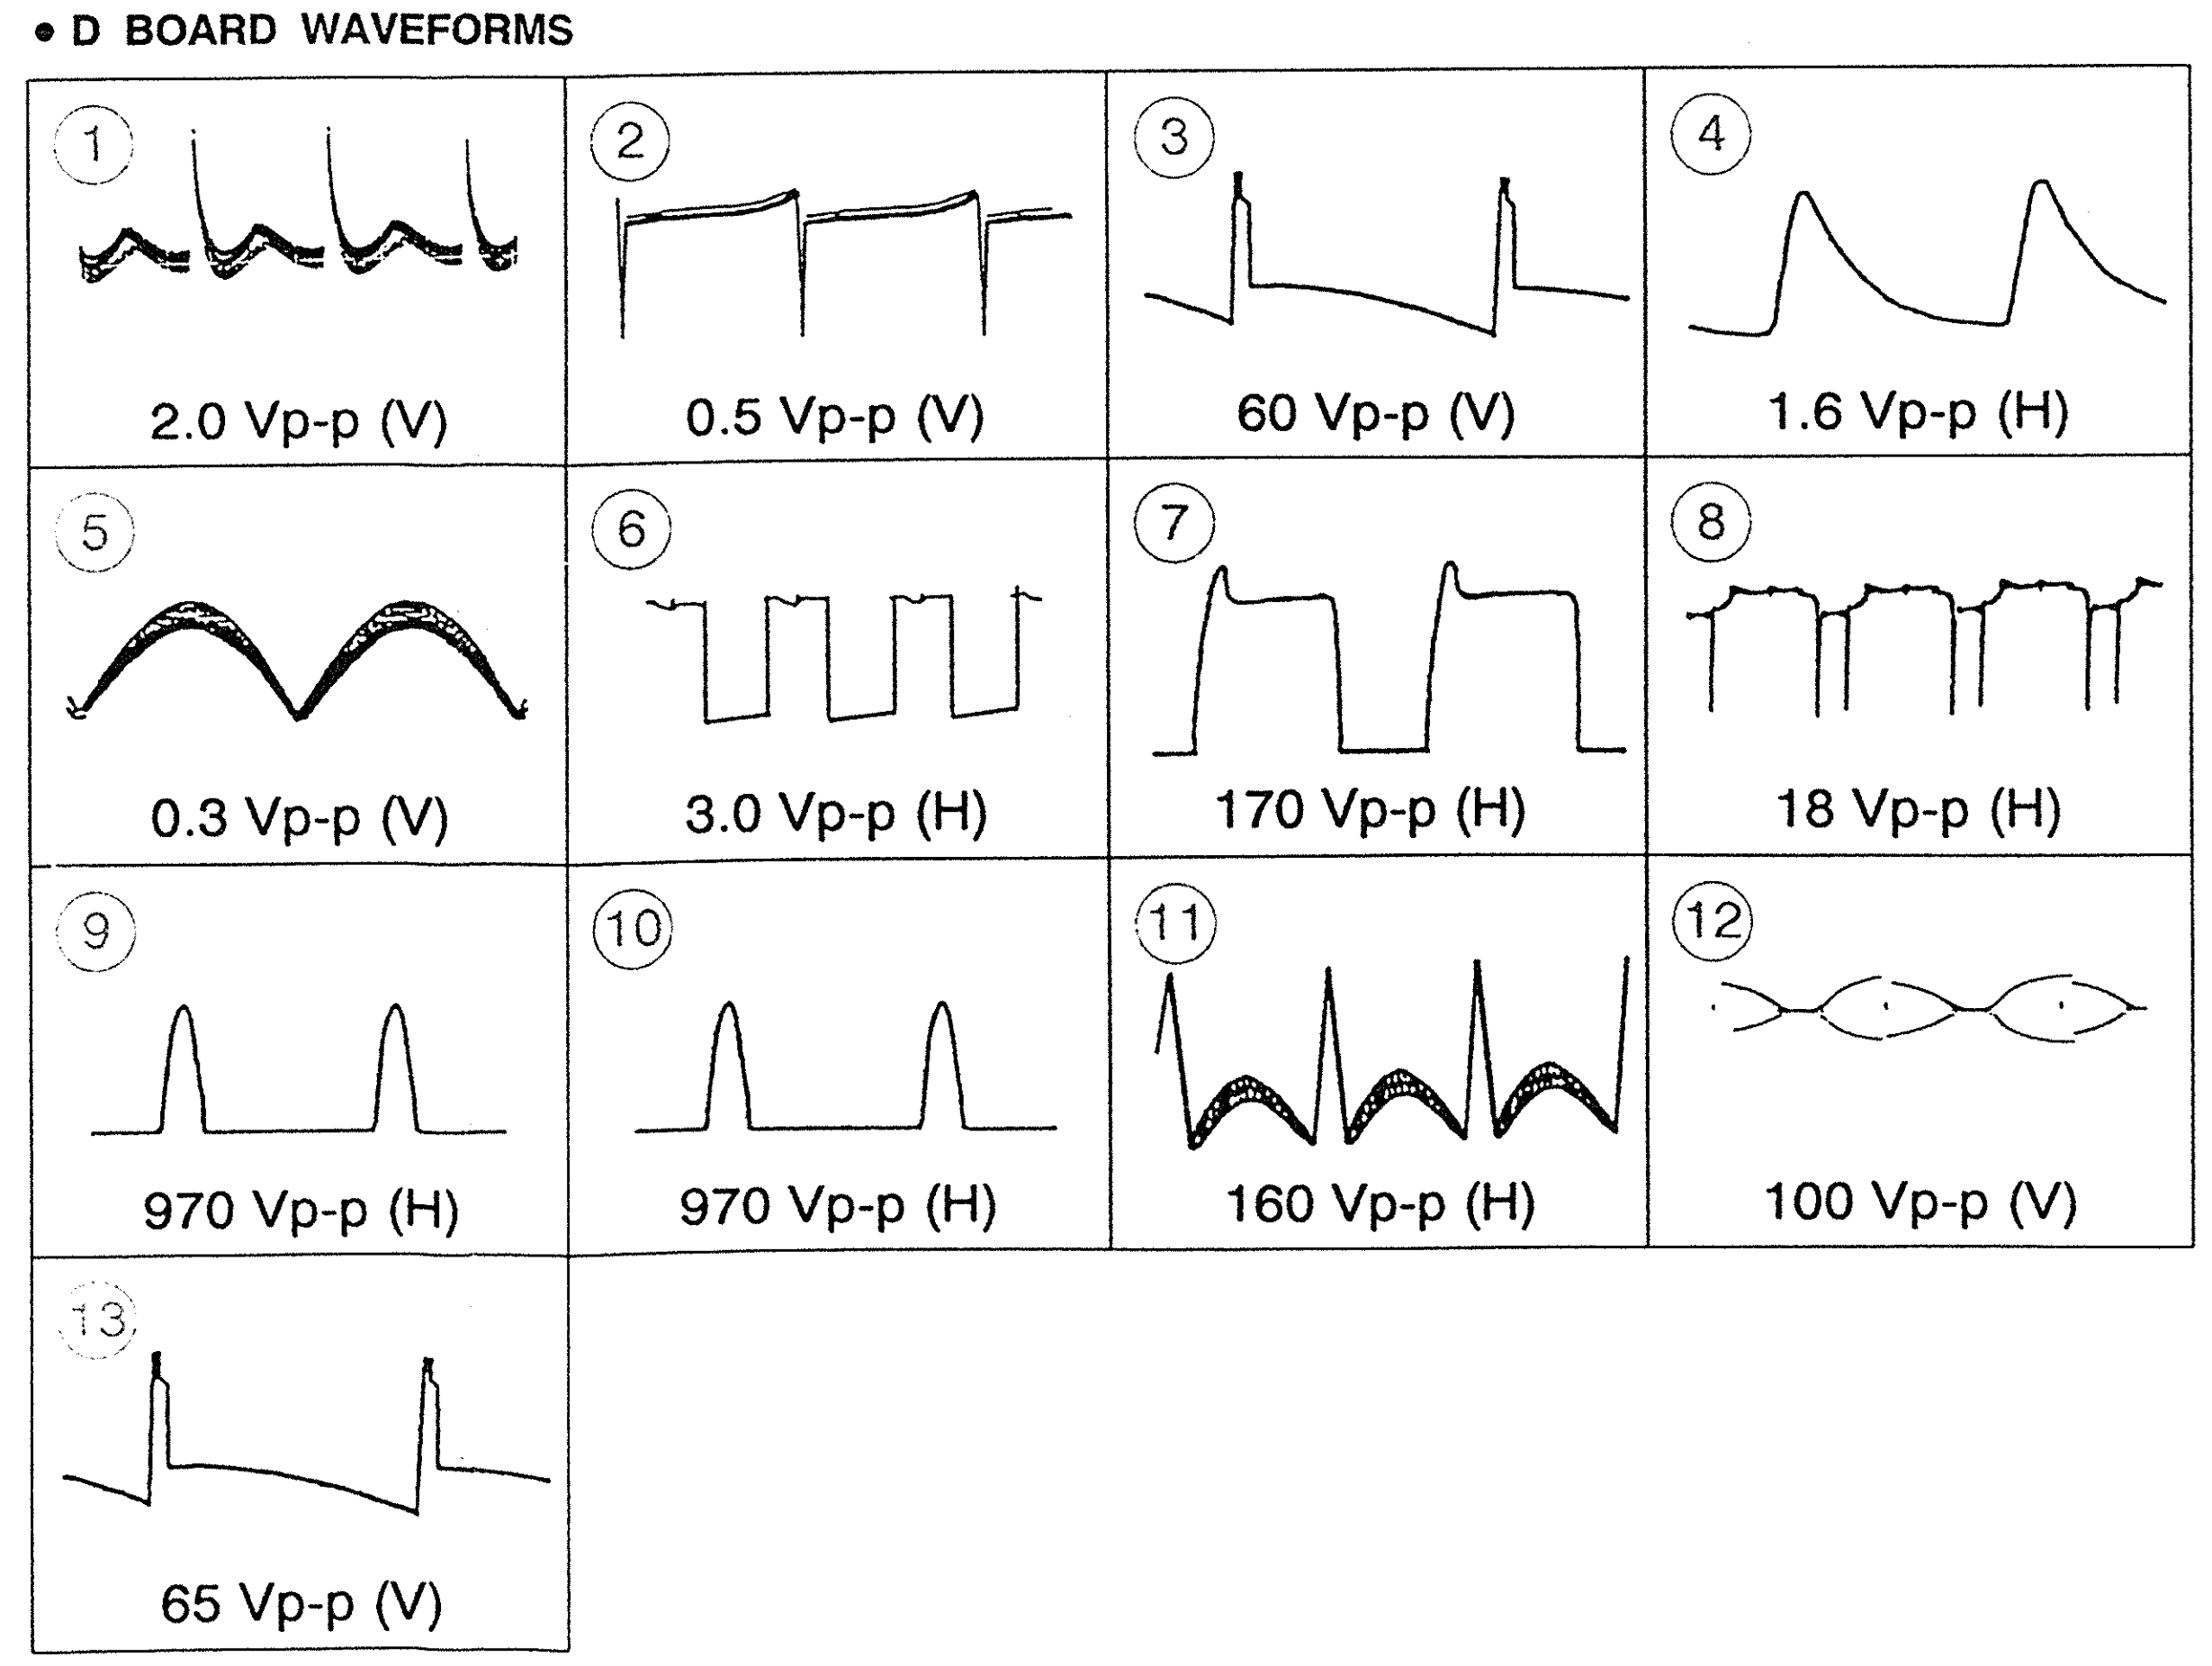

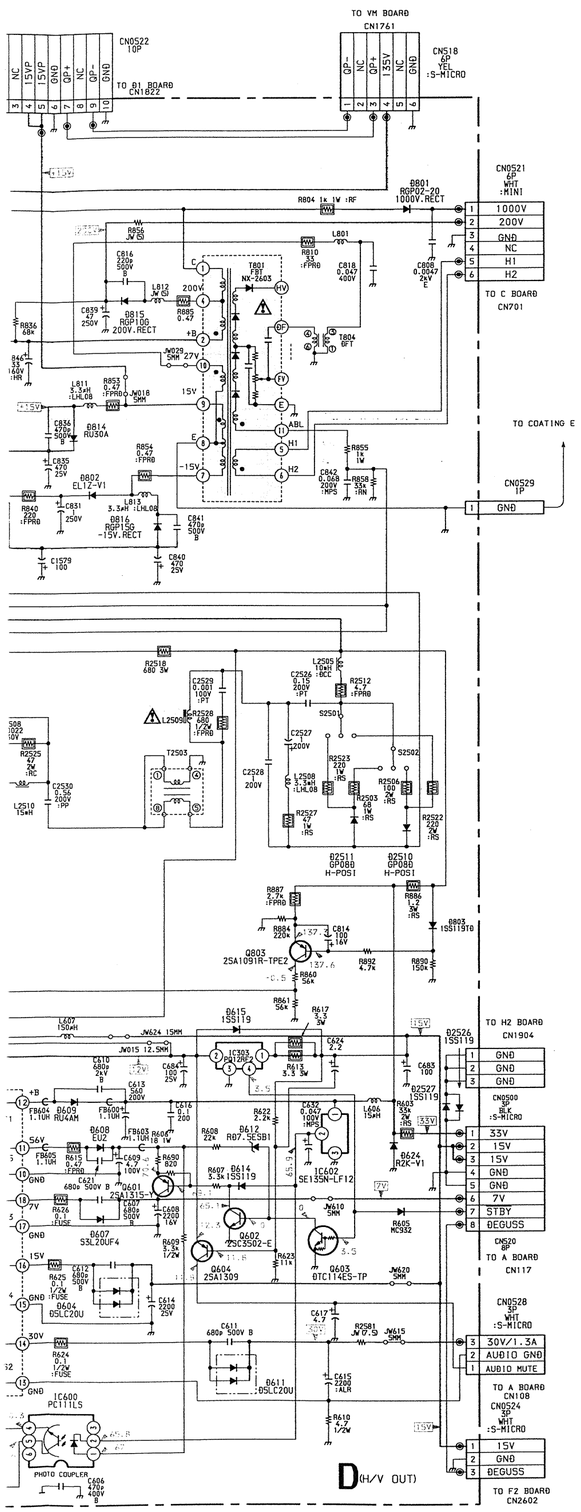

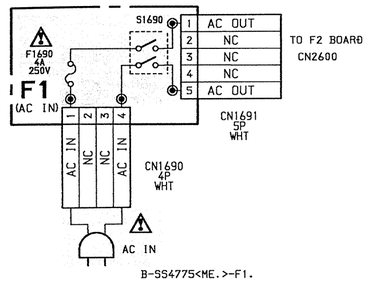

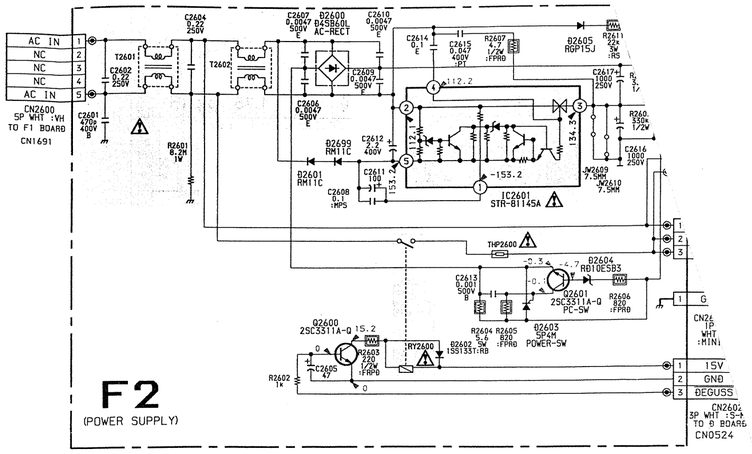

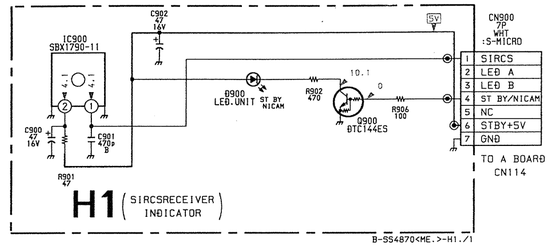

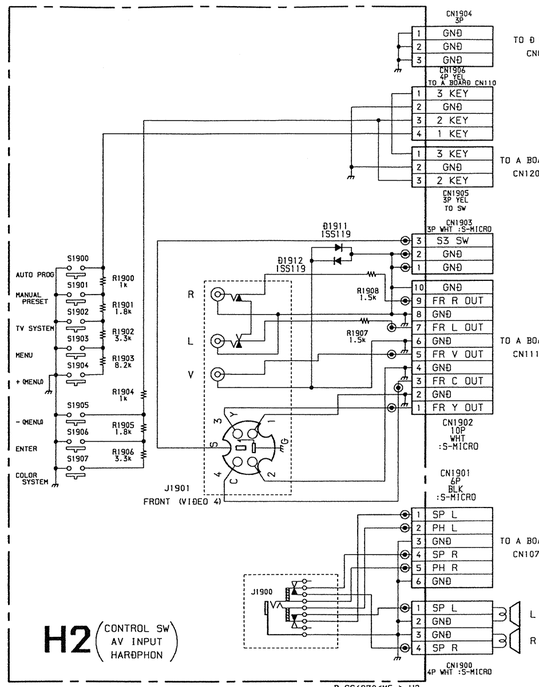

• D BOARD WAVEFORMS

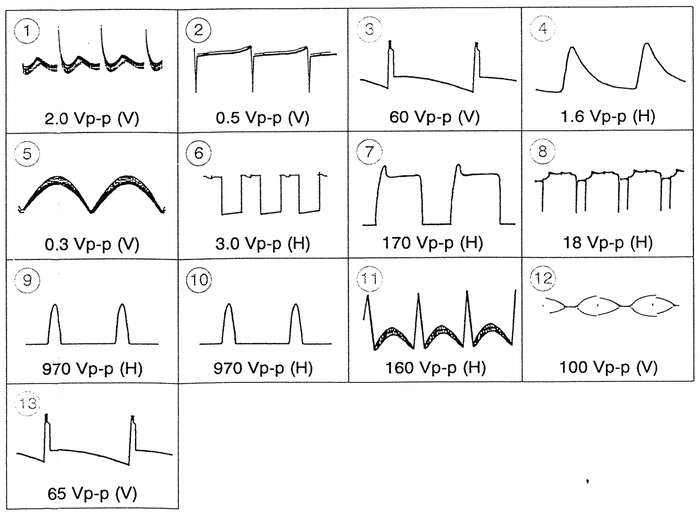
1 2.0 Vp-p (V)
2 0.5 Vp-p (V)
3 60 Vp-p (V)
4 1.6 Vp-p (H)
5 0.3 Vp-p (V)
6 3.0 Vp-p (H)
7 170 Vp-p (H)
8 18 Vp-p (H)
9 970 Vp-p (H)
10 970 Vp-p (H)
11 160 Vp-p (H)
12 100 Vp-p (V)
13 65 Vp-p (V)

Diagram of A Board

AVEFORMS

5 Vp-p (H)	(2) 2.0 Vp-p (H)	(3) PAL SECAM NTSC4.43 2.0 Vp-p (H)	(3) NTSC3.58 1.75 Vp-p (H)
2.25 Vp-p (H)	(5) 2.25 Vp-p (H)	(6) 2.0 Vp-p	(7) PAL SECAM NTSC4.43 2.0 Vp-p (H)
(7) NTSC3.58 1.75 Vp-p (H)	(8) 1.2 Vp-p (H)	(9) PAL SECAM NTSC4.43 1.1 Vp-p (H)	(9) NTSC3.58 0.8 Vp-p (H)
(10) 1.2 Vp-p (H)	(11) 0.8 Vp-p (H)	(12) 0.9 Vp-p (H)	(13) 0.8 Vp-p (H)
(14) 0.9 Vp-p (H)	(15) 1.6 Vp-p (H)	(16) 1.3 Vp-p	(17) 3.2 Vp-p (H)
(18) 3.2 Vp-p (H)	(19) 3.2 Vp-p (H)		

A Board IC201 CXA1545AS

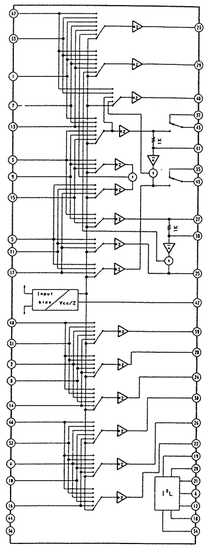

A Board IC301 TDA9145

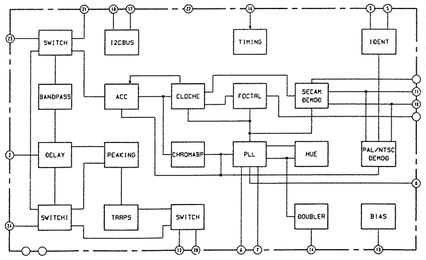

Schematic diagrams

D F1 F2

← H1 H2 boards

Schematic diagram

A board →

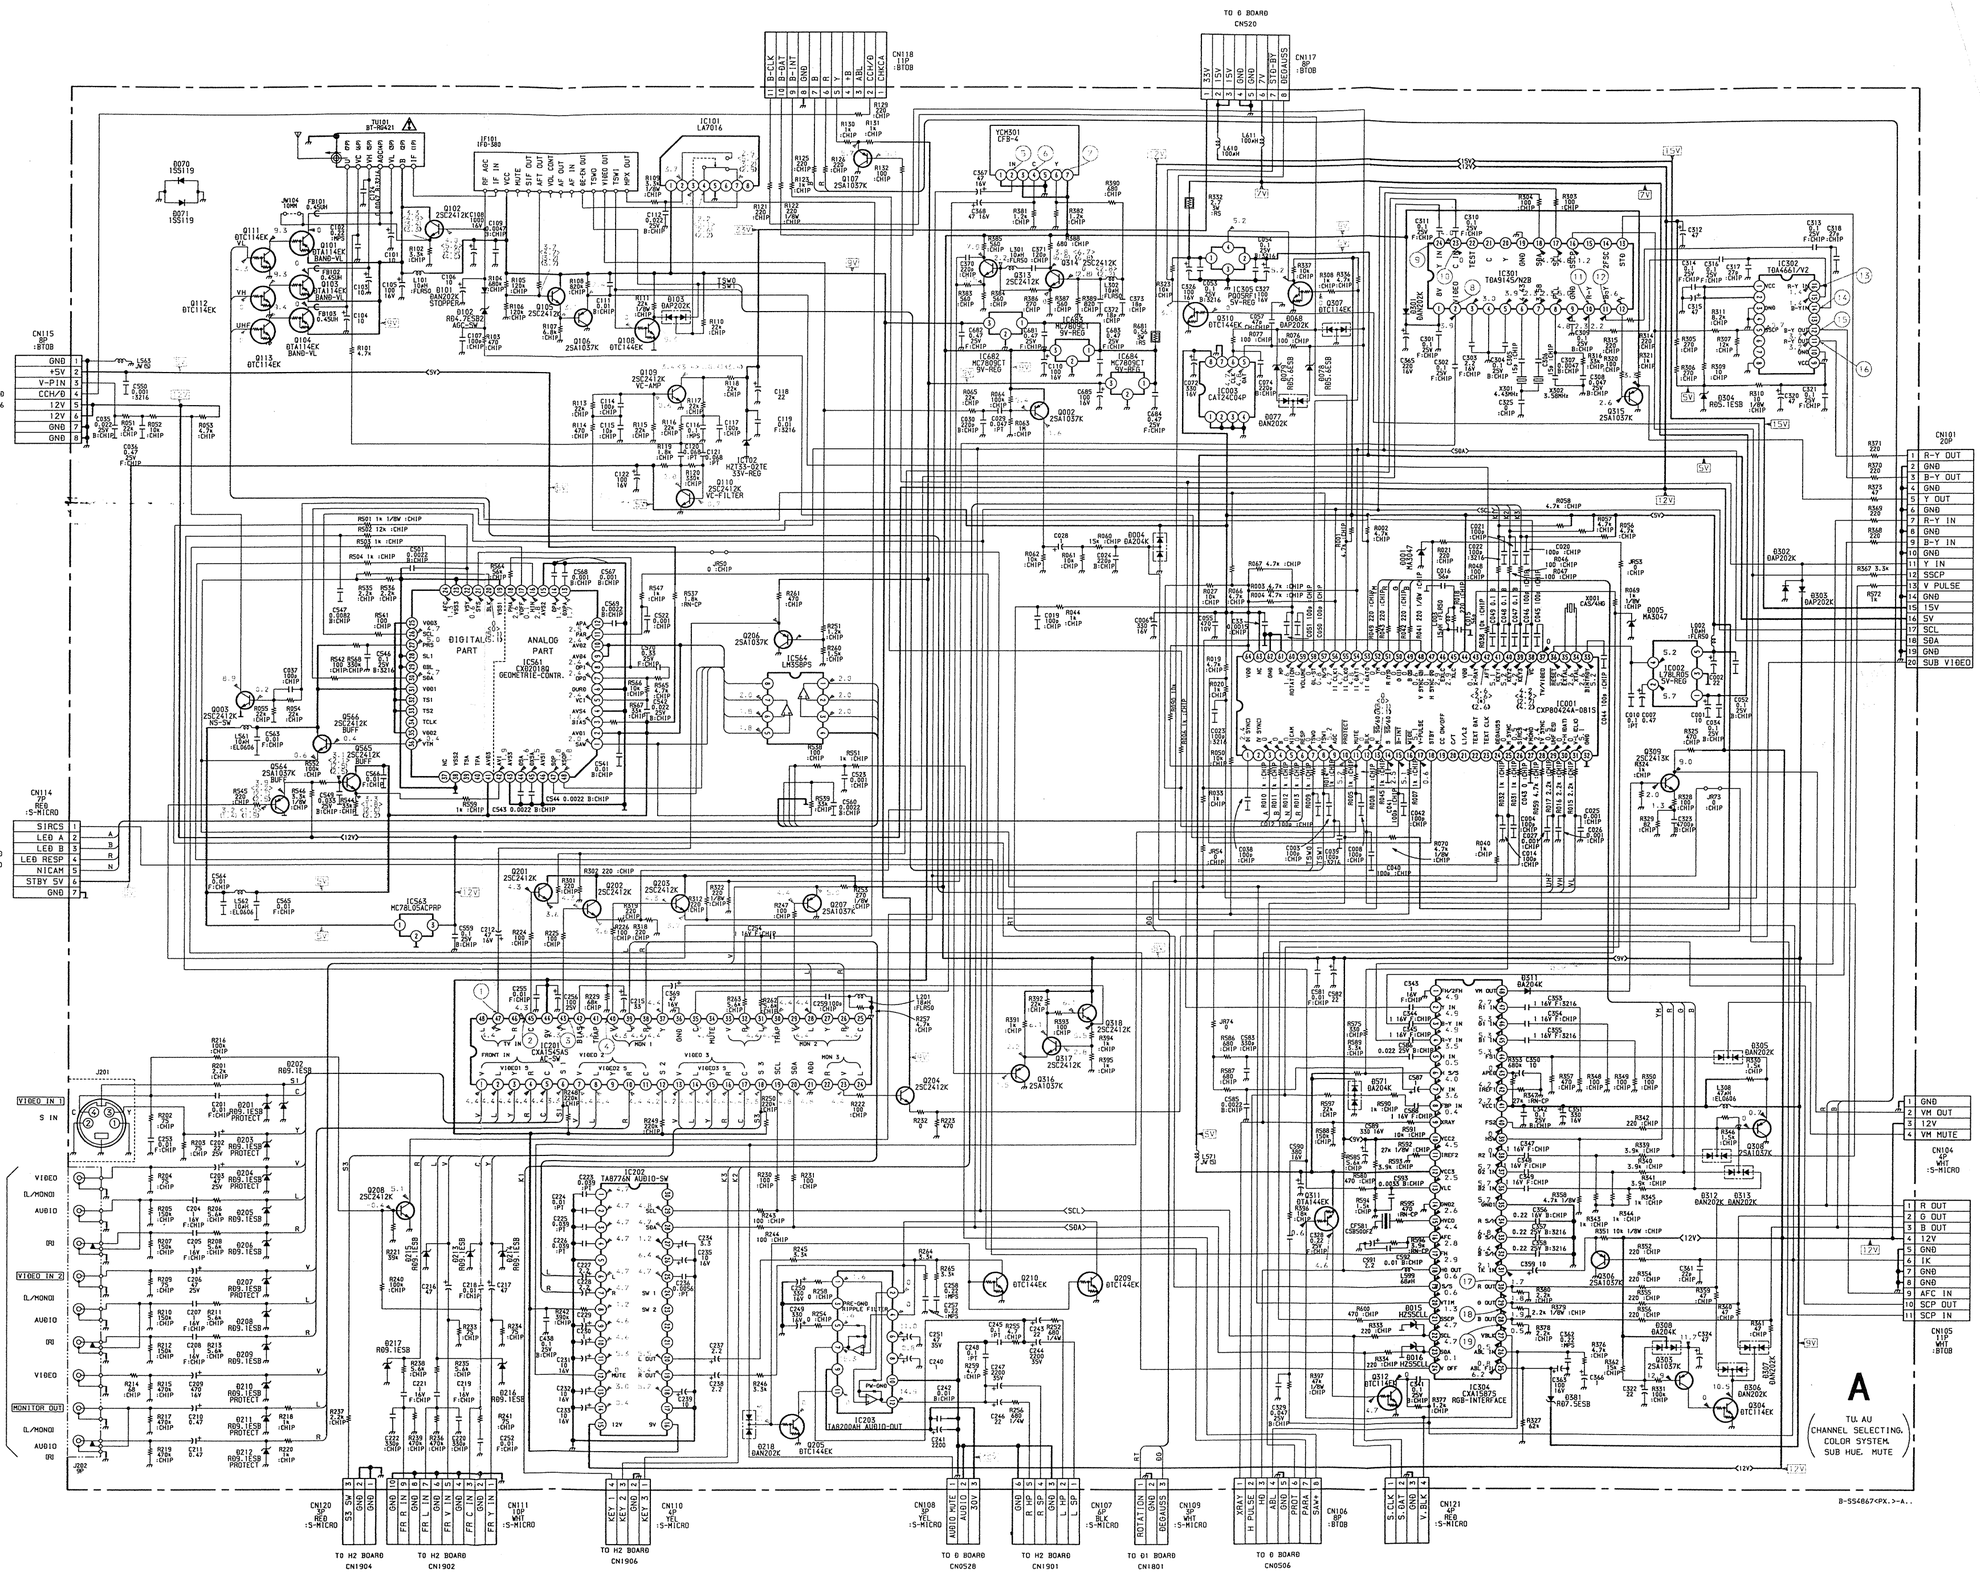
TO G BOARD
CN520
CN117
8P
:BTOB
CN118
11P
:BTOB
CN115
8P
:BTOB
TO G BOARD
CN526
CN114
7P
REG
:S-MICRO
TO H1 BOARD
CN900
CN101
20P
TO P BOARD
CN1401
CN104
4P
WHT
:S-MICRO
TO VM BOARD
CN1762
CN105
11P
WHT
:BTOB
TO A2 BOARD
CN2101
CN120
3P
RED
:S-MICRO
TO H2 BOARD
CN1904
CN111
10P
WHT
:S-MICRO
TO H2 BOARD
CN1902
CN110
4P
YEL
:S-MICRO
TO H2 BOARD
CN1906
CN108
3P
YEL
:S-MICRO
TO G BOARD
CN0528
CN107
6P
BLK
:S-MICRO
TO H2 BOARD
CN1901
CN109
3P
WHT
:S-MICRO
TO G1 BOARD
CN1801
CN106
10P
:BTOB
TO G BOARD
CN0506
CN121
4P
RED
:S-MICRO
DIGITAL(5V) PART
ANALOG PART
IC561
CX20218D0
GEOMETRIE CONTR.
IC563
MC78L05ACPRP
IC564
LA6358PS
IC565
LA6324M
IC566
LA6356
IC567
LA6324M
IC568
LA6356
IC201
CXA1645AS
AC-SW
IC202
TA8220AK
AUDIO-OUT
IC202
TA8772AN
AUDIO-SW
IC501
T0A9145/N2B
IC502
T0A4667/YZ
IC503
CAT24C04P
IC504
CXA1607S
RGB-INTERFACE
IC001
CXP80424A-081S
A
TU. AU
CHANNEL SELECTING.
COLOR SYSTEM.
SUB HUE. MUTE
B-5548&7<PX.>-A..

A TU, AU, CHANNEL SELECTION, COLOR SYSTEM, SUB HUE, MUTE

A Board IC304 CXA1587S

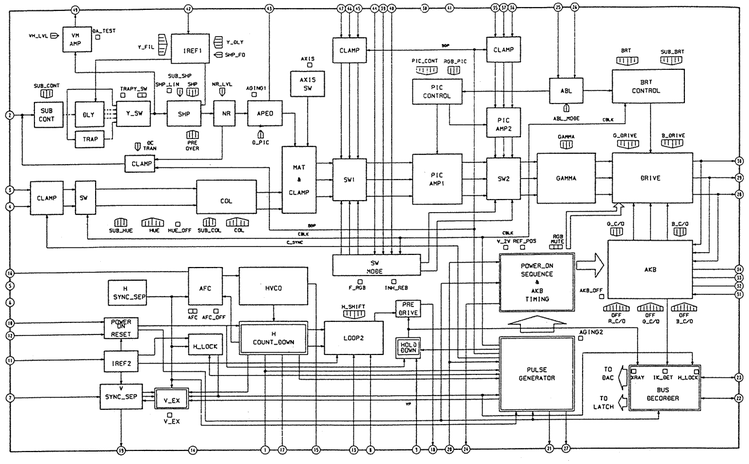

• A BOARD

IC		Q104	E – 9	Q312	D – 1	D204	C – 9	IF BLOCK	
IC001	B – 2	Q105	E – 6	Q313	B – 9	D205	B – 9	IF101	D – 6
IC002	C – 3	Q106	E – 6	Q314	A – 9	D206	B – 9		
IC003	C – 1	Q107	A – 9	Q315	E – 3	D207	C – 9	TUNER	
IC101	D – 6	Q108	D – 6	Q316	A – 9	D208	C – 9	TU101	E – 9
IC102	C – 8	Q109	D – 9	Q317	A – 9	D209	C – 9		
IC201	C – 9	Q110	D – 9	Q318	A – 8	D210	D – 9	CRYSTAL	
IC202	B – 6	Q111	D – 9	Q564	B – 5	D211	D – 9	X001	C – 3
IC203	D – 5	Q112	E – 9	Q565	B – 5	D212	D – 9	X301	E – 3
IC301	E – 3	Q113	E – 9	Q566	C – 5	D213	C – 8	X302	E – 2
IC302	E – 4	Q201	B – 9			D214	C – 8		
IC304	D – 2	Q202	B – 8	DIODE		D215	C – 8		
IC305	A – 2	Q203	B – 8			D216	C – 8		
IC561	C – 5	Q204	C – 7	D001	B – 2	D217	C – 8		
IC563	B – 5	Q205	D – 5	D004	C – 1	D218	D – 5		
IC564	B – 4	Q206	B – 9	D005	C – 2	D301	D – 3		
IC682	A – 7	Q207	B – 8	D015	E – 1	D302	E – 5		
IC683	B – 6	Q208	C – 7	D016	E – 1	D303	E – 2		
IC684	B – 6	Q209	D – 6	D068	C – 1	D304	E – 4		
		Q210	D – 5	D077	C – 1	D305	C – 2		
TRANSISTOR		Q303	C – 2	D078	C – 1	D306	D – 2		
		Q304	C – 2	D079	C – 1	D307	C – 2		
Q002	E – 1	Q306	E – 1	D101	E – 7	D308	C – 2		
Q003	B – 3	Q307	A – 1	D102	E – 6	D311	C – 3		
Q101	D – 9	Q308	D – 2	D103	D – 6	D312	C – 2		
Q102	E – 8	Q309	C – 2	D201	B – 9	D313	C – 2		
Q103	E – 9	Q310	A – 2	D202	B – 9	D381	D – 1		
		Q311	D – 1	D203	B – 9	D571	E – 2		

PRINTED WIRING BOARDS

– A Board –

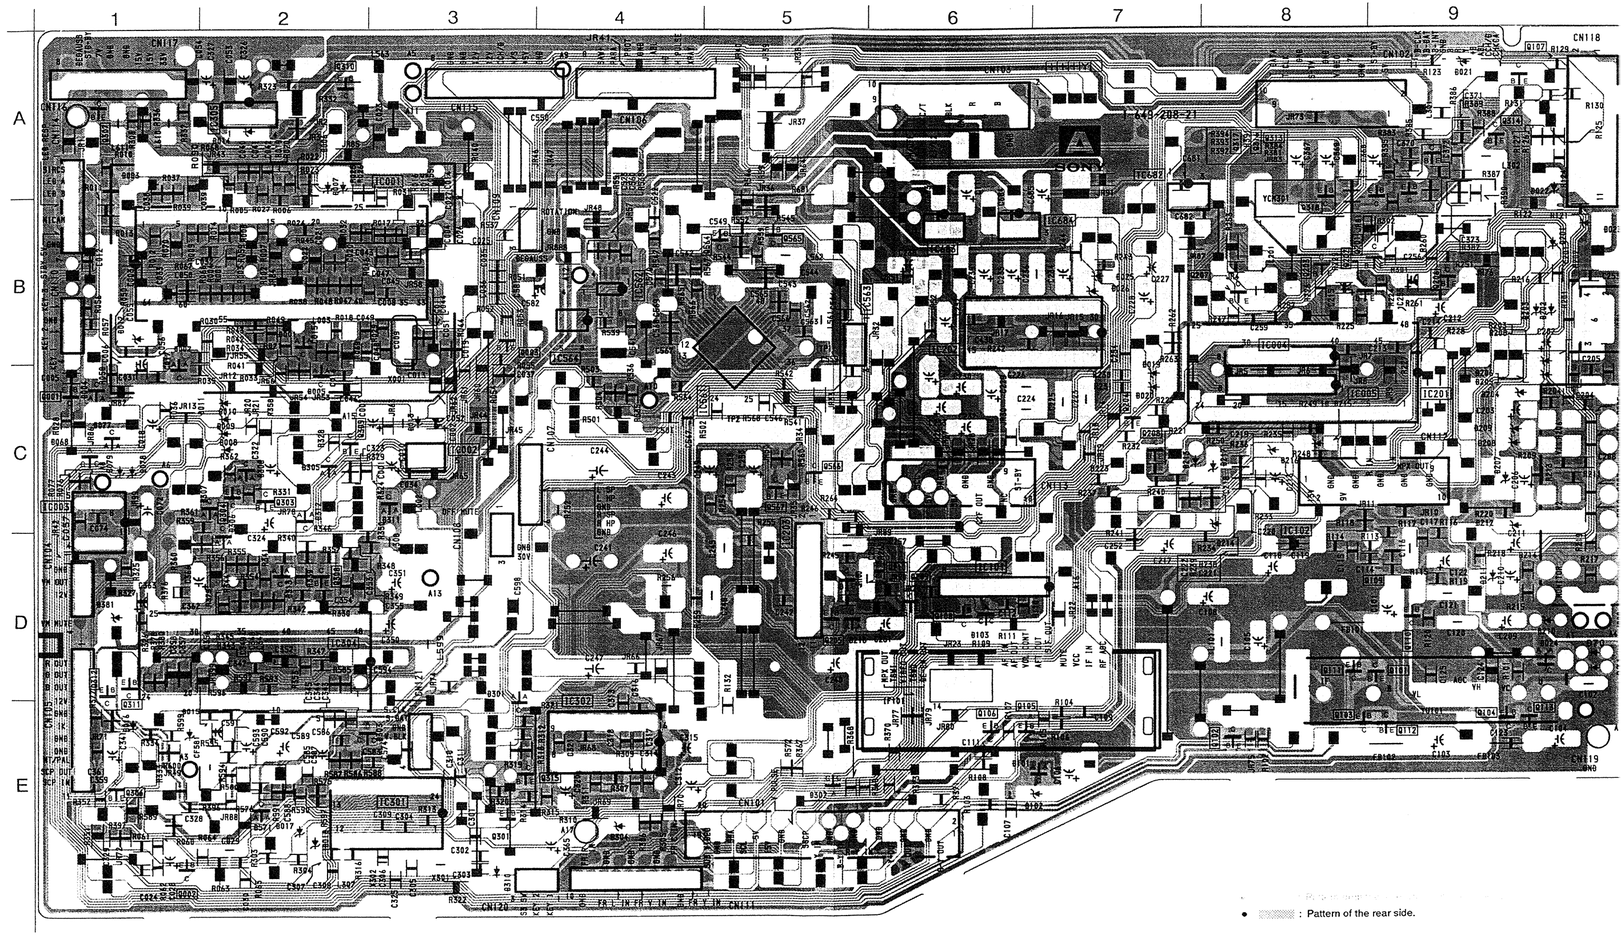

• : Pattern of the rear side.

VM [VM OUT]

PRINTED WIRING BOARDS

– VM Board –

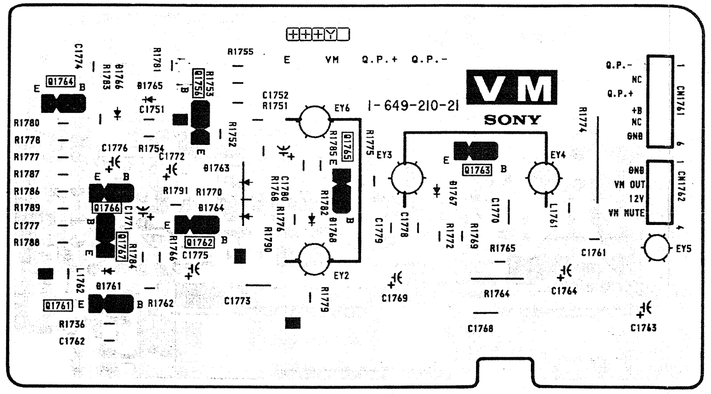

– A2 Board –

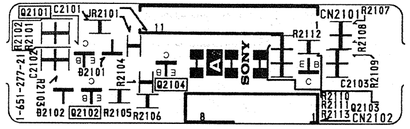

A2 [R, G, B IN/OUT, SCP IN/OUT]

P [P IN P]

– P Board –

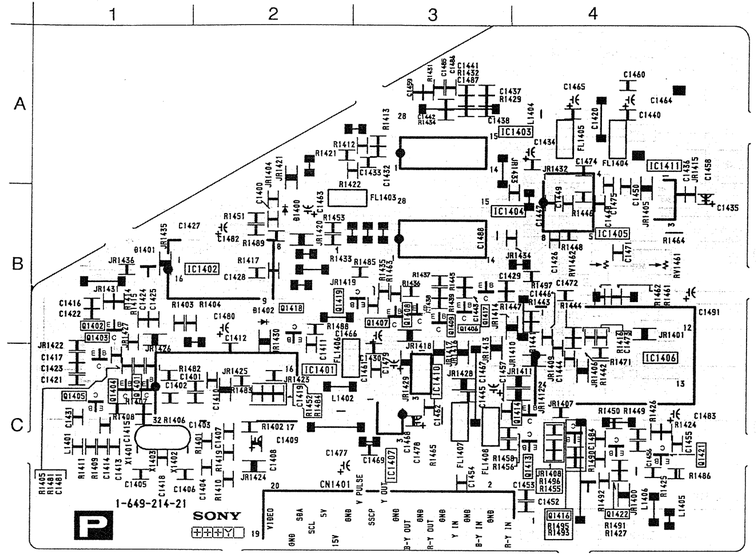

• P BOARD

IC			Q1403 C – 1	DIODE
IC1401 C – 2			Q1404 C – 1	
IC1402 B – 2			Q1405 C – 1	D1400 B – 2
IC1403 A – 3			Q1406 B – 3	D1401 B – 1
IC1404 B – 3			Q1407 B – 3	
IC1405 B – 4			Q1408 B – 3	CRYSTAL
IC1406 C – 4			Q1409 B – 3	
IC1407 C – 3			Q1413 C – 4	X1401 C – 1
IC1410 C – 3			Q1414 C – 4	X1402 C – 1
IC1411 B – 4			Q1416 C – 4	
			Q1417 B – 3	
TRANSISTOR			Q1418 B – 2	
			Q1419 B – 3	
Q1401 C – 1			Q1420	
Q1402 B – 1			Q1421 C – 4	
			Q1422 C – 4	

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

C D E F G H I J K L M N O P

• P BOARD WAVEFORMS

① 2.0 Vp-p (H)	② PAL SECAM NYSC3.58 0.4 Vp-p (H)	② NTSC4.43 0.4 Vp-p (H)	③ PAL SECAM NYSC3.58 0.4 Vp-p (H)
③ NTSC4.43 0.4 Vp-p (H)	④ 1.5 Vp-p (H)	⑤ 1.3 Vp-p (H)	⑥ 1.5 Vp-p (H)
⑦ 1.3 Vp-p (H)			

P Board IC1401 TDA9160

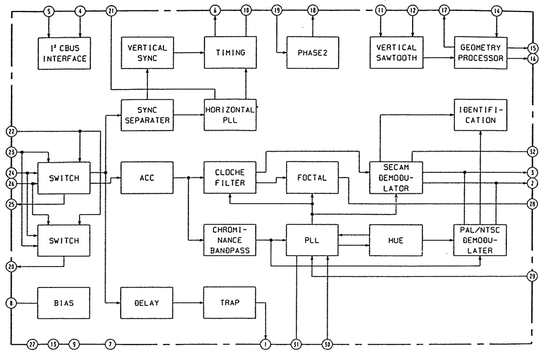

P Board IC1406 TDA8443A

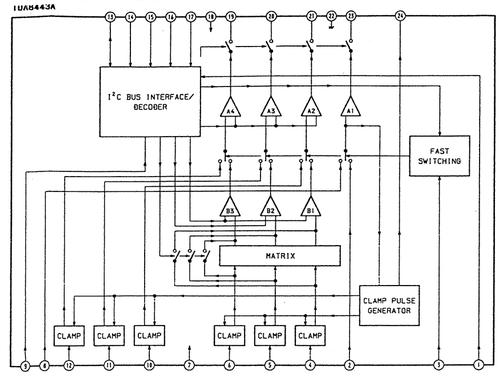

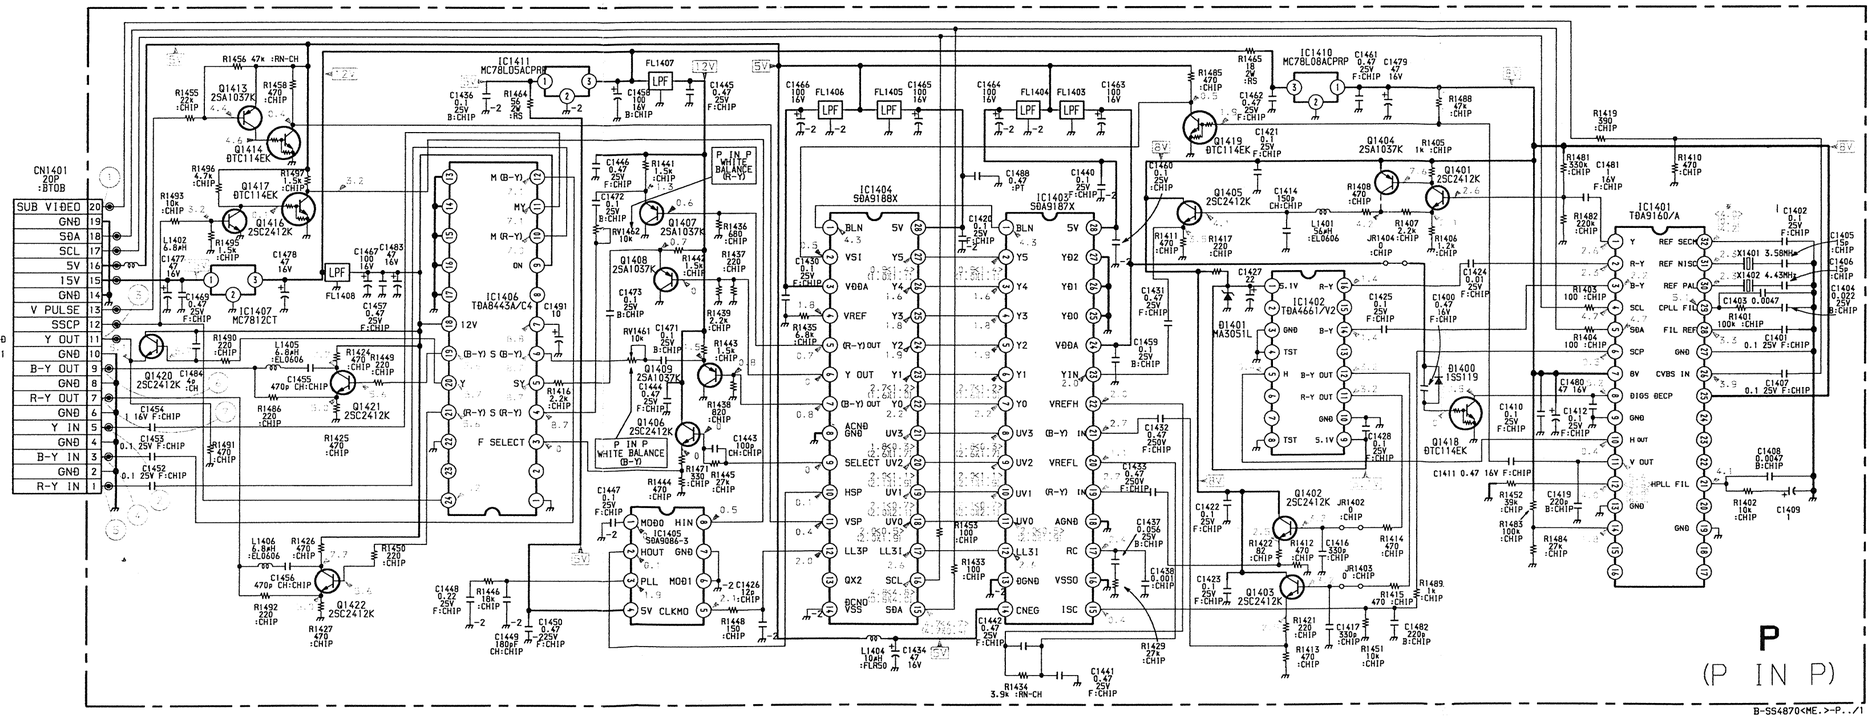

P Board IC1401 TDA9160

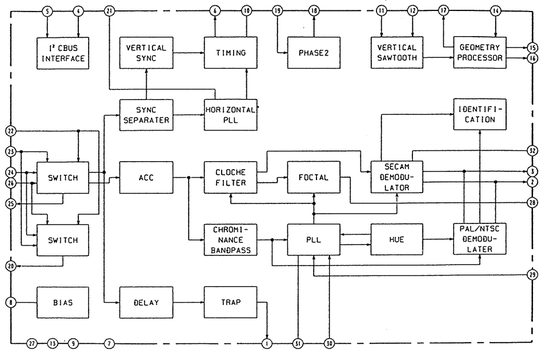

P Board IC1406 TDA8443A

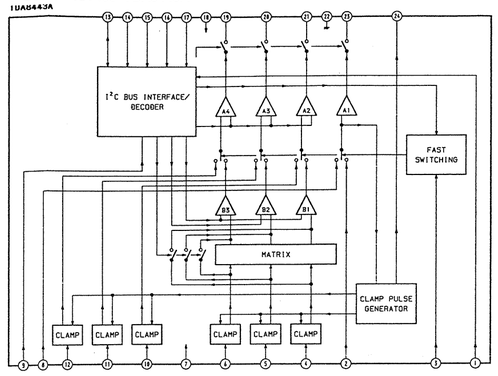

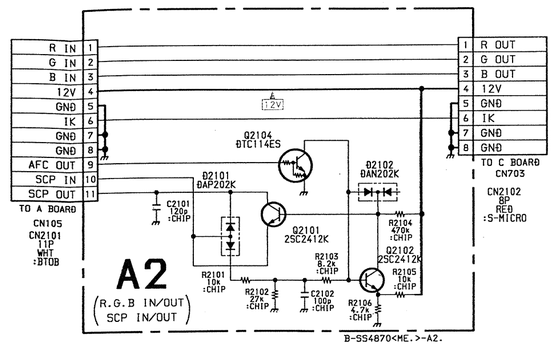

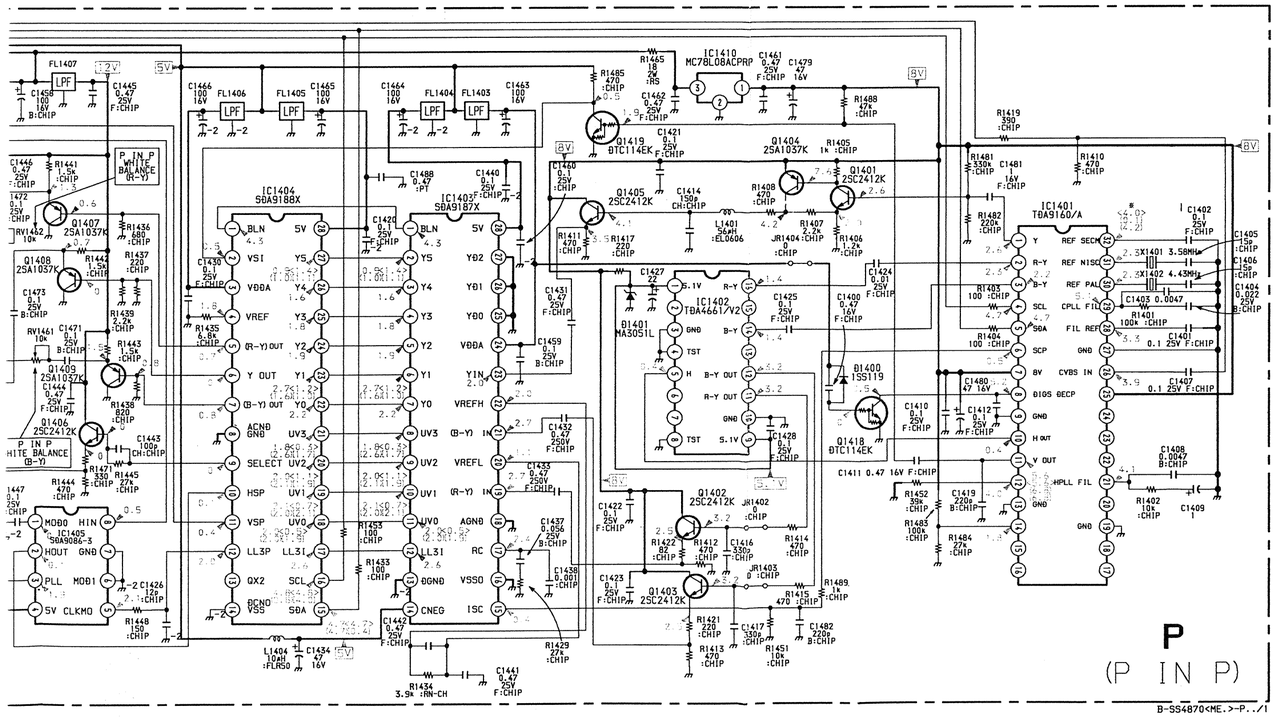

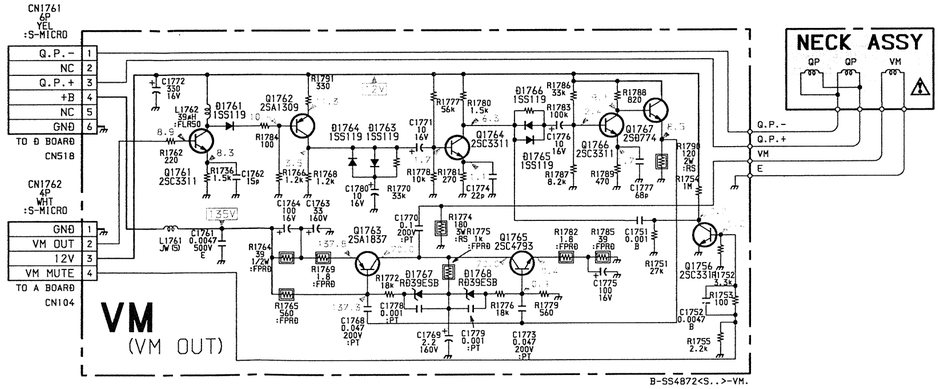

• D1 BOARD WAVEFORMS

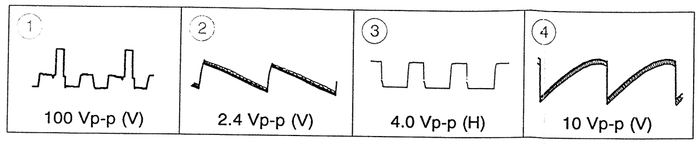

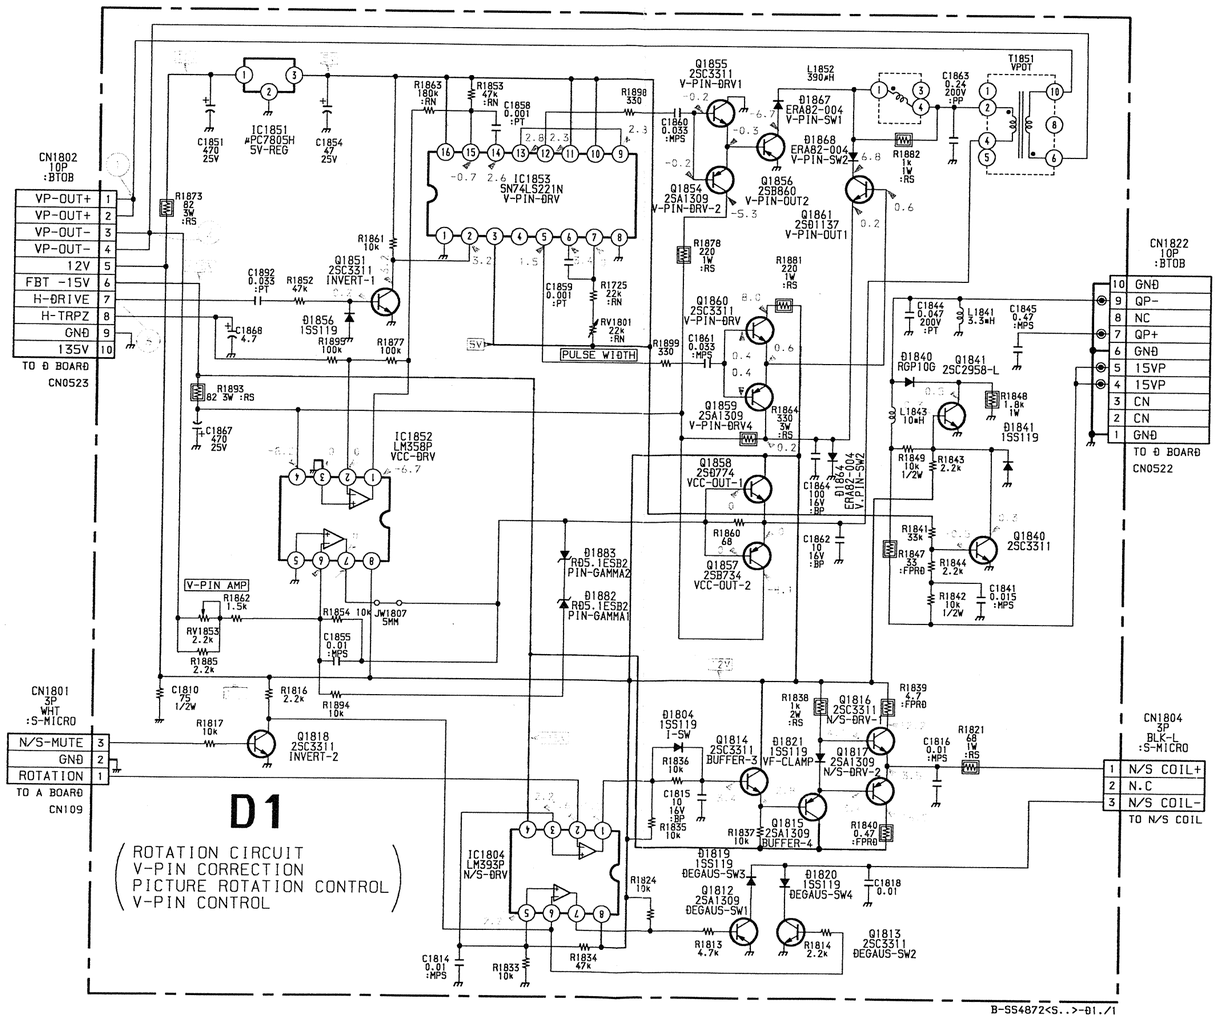

Schematic diagrams
A 2 P VM boards

Schematic diagrams
C D 1 boards ➡

• C BOARD WAVEFORMS

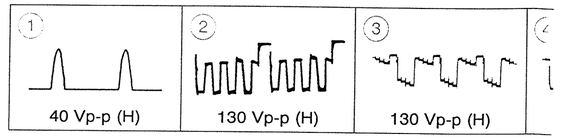

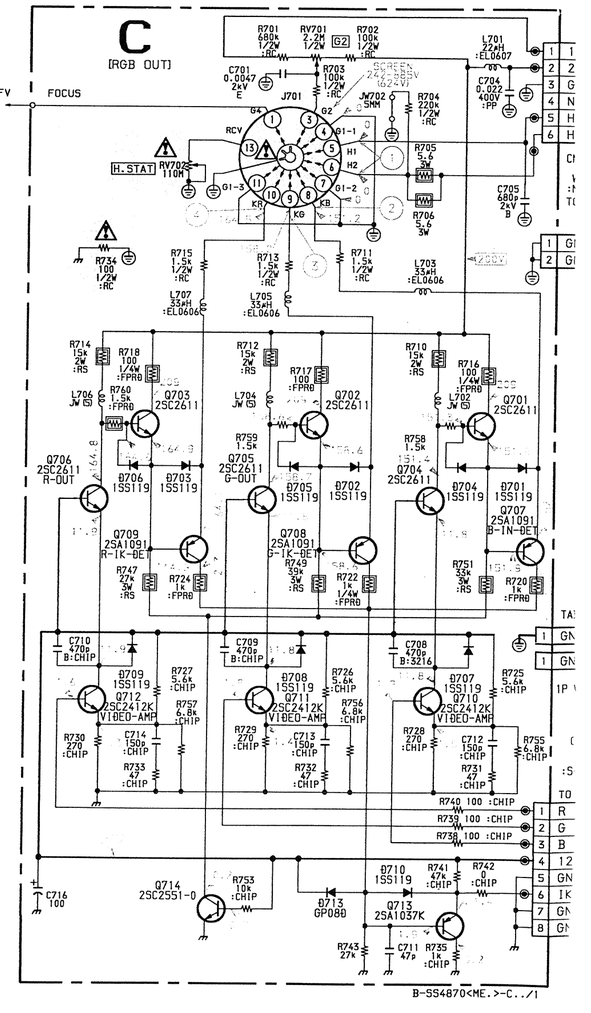

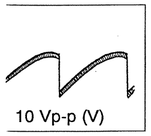

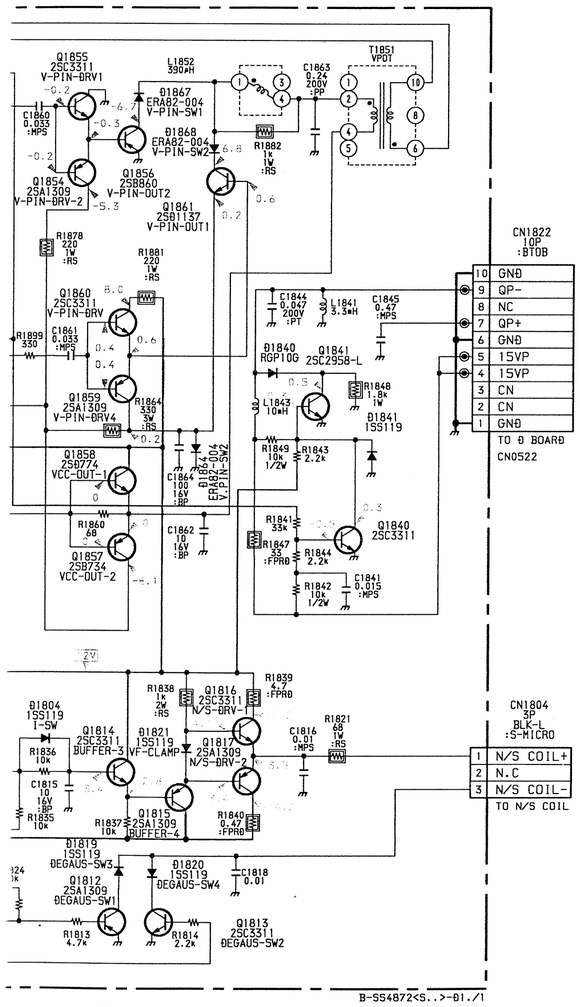

• C BOARD WAVEFORMS

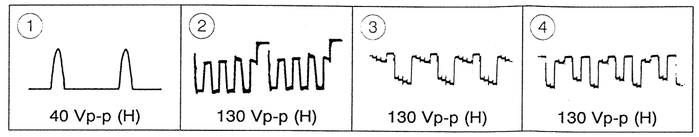

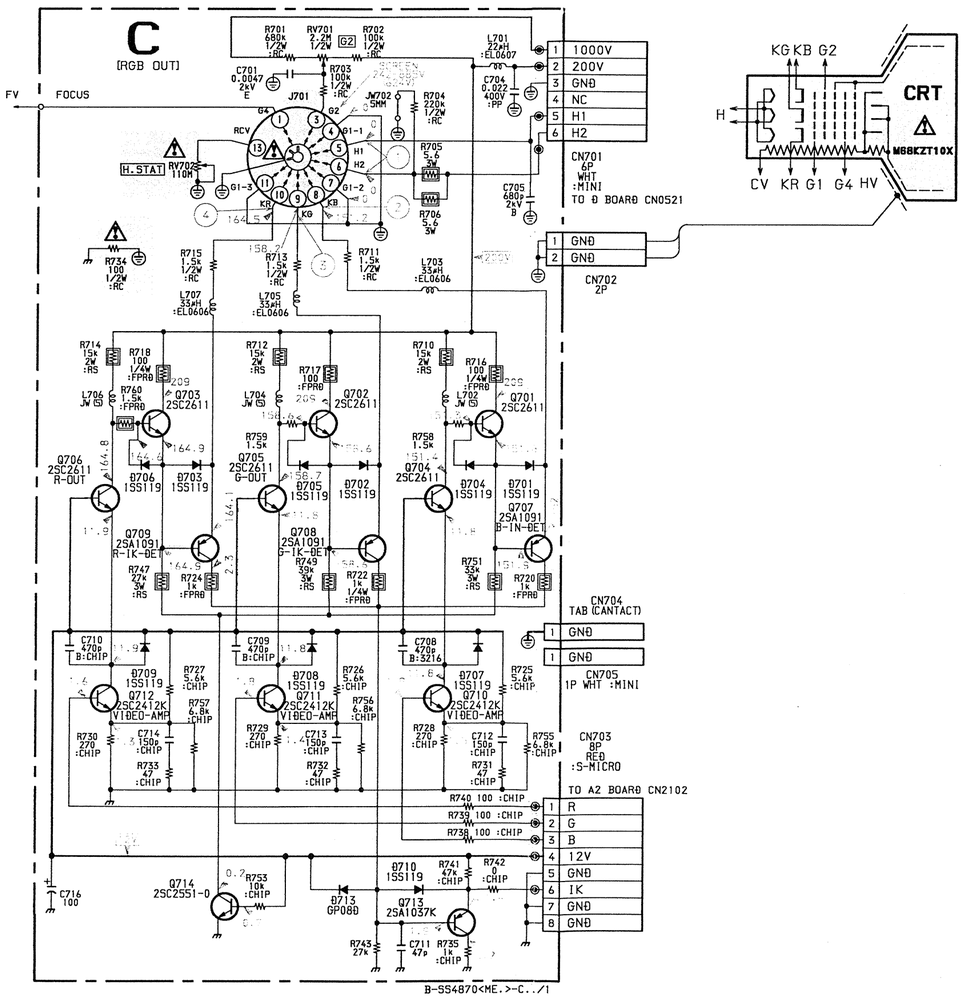

PRINTED WIRING BOARDS
– D1 Board –

D1 [ROTATION CIRCUIT, V-PIN CORRECTION, PICTURE ROTATION CONTROL, V-PIN CONTROL]

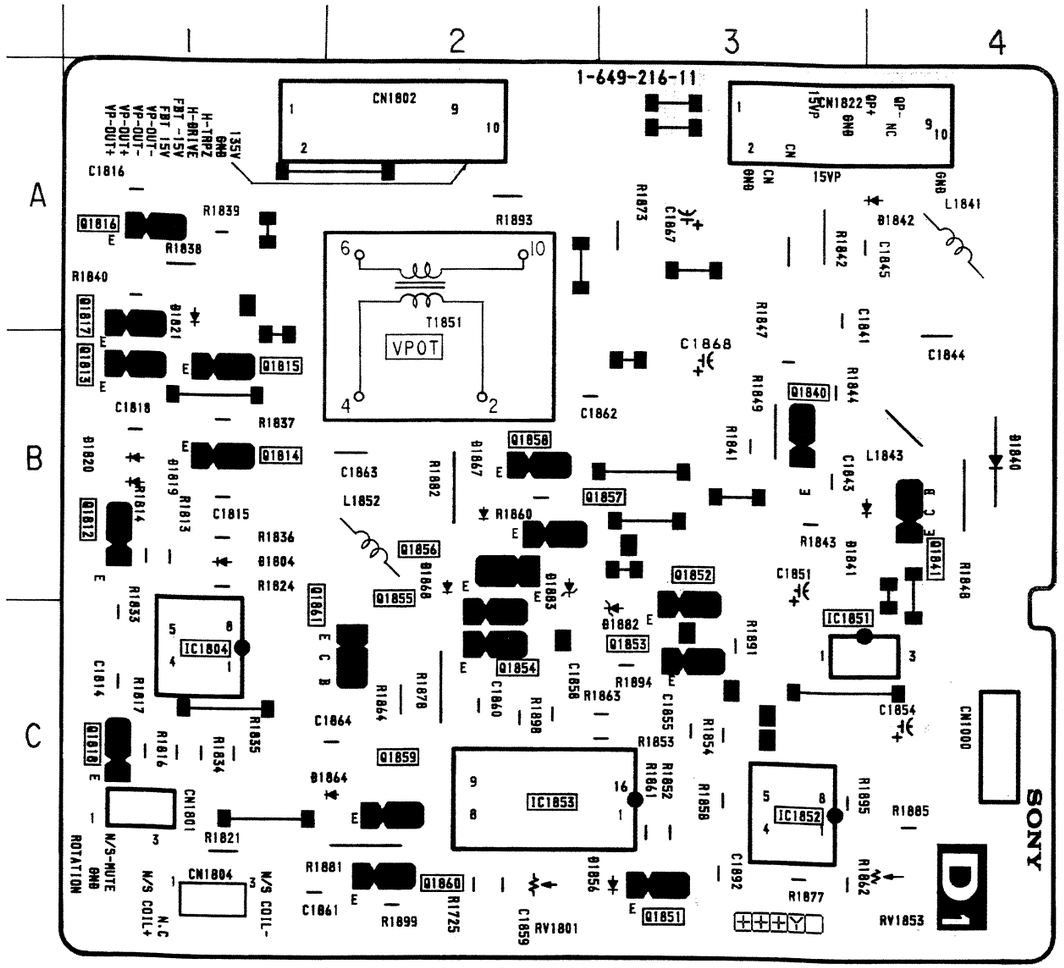

• **D1 BOARD**

IC			
IC1804	C – 1	Q1851	C – 3
IC1851	C – 3	Q1854	C – 2
IC1852	C – 3	Q1855	C – 2
IC1853	C – 2	Q1856	B – 2
TRANSISTOR		Q1857	B – 2
Q1812	B – 1	Q1858	B – 2
Q1813	B – 1	Q1859	C – 2
Q1814	B – 1	Q1860	C – 2
Q1815	B – 1	Q1861	C – 2
Q1816	A – 1	**DIODE**	
Q1817	A – 1	D1804	B – 1
Q1818	C – 1	D1819	B – 1
Q1840	B – 3	D1820	B – 1
Q1841	B – 4	D1821	A – 1
		D1840	B – 4
		D1841	B – 3
		D1856	C – 3
		D1864	C – 2
		D1867	B – 2
		D1868	B – 2
		D1882	C – 3
		D1883	B – 2
		VARIABLE RESISTOR	
		RV1801	C – 2
		RV1853	C – 4

C [R, G, B OUT]

– C Board –

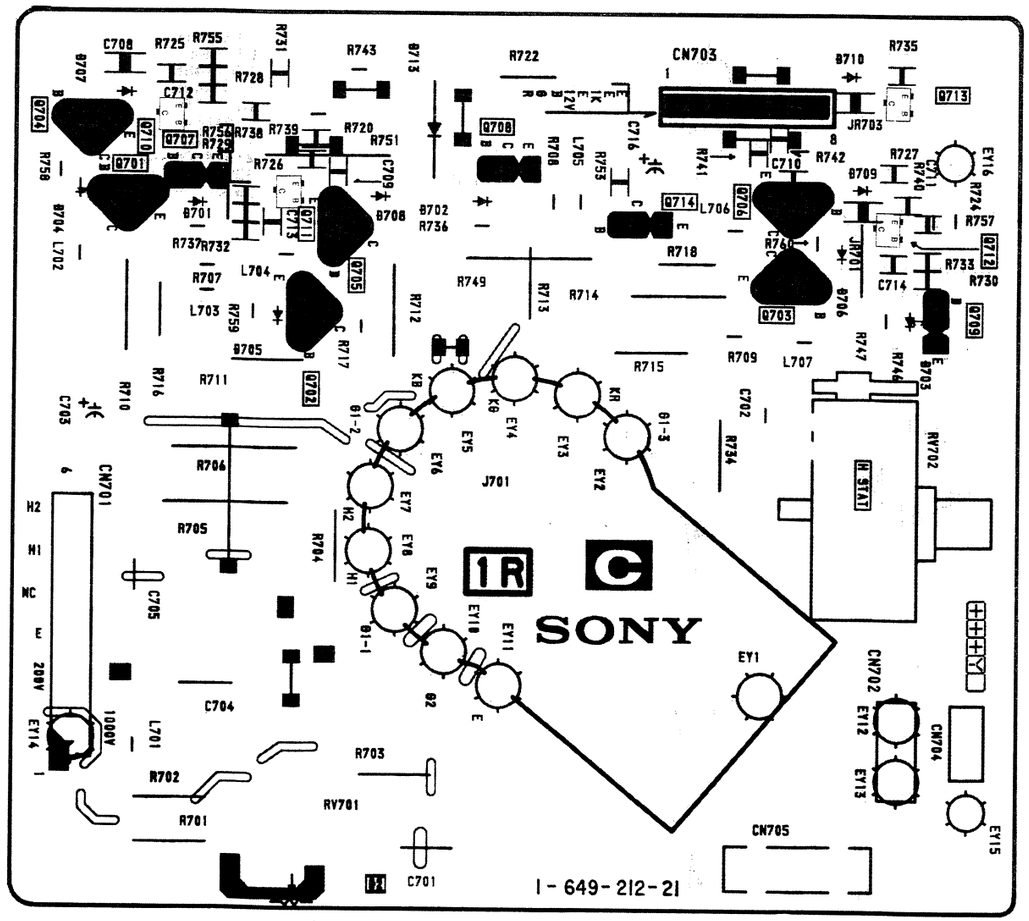

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

6-5. SEMICONDUCTORS

CAT24C04P
LM358P
LM393P
SDA9086-3
μPC358C
μPC393C

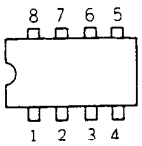

(Top view)

CXA1545AS
CXA1587S



CXD2018Q

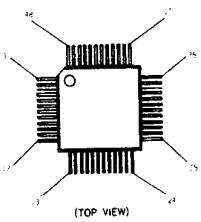

SDA9187X
SDA9188X



(Top view)

CXP80424
CXP80424-SV4652



(Top view)

HZT33-02TE
μPC574J

LA7016



LM358PS



L78LR05D-MA



MC78L05ACPRP
NJM78L05A

MC7809CT
MC7812CT
NJM78M09FA
TA7805S
μPC7805H

PQ05RF1



SE135N-LF12



SN74LS221N
TDA4661/V2



STR-81145A



TA8200AH



TA8776N



(Top view)

TDA8443A/C4
TDA9145
TDA9145/N2B

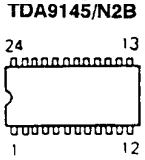

(Top view)

TDA9160/N2



DTA114EK
DTA144EK
DTC114EK
DTC144EK
2SA1037K
2SA1162-G
2SC2412K
2SC2412K-QR
2SC2413K
2SC2413KQ

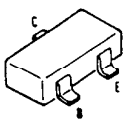

DTC114ES
DTC144ES

2SA1091-O
2SC2551-O



2SA1175-HFE
2SA1309A
2SC2785-HFE
2SC3311A



2SA1315-Y



2SA1837

2SB734-34
2SC2958-L
2SD774-34



2SB858-C
2SB860



2SC2611
2SC2666-LK
2SC3502-E
2SC3601-E



2SC3298B-O
2SC4793
2SD1137



2SC4927-01

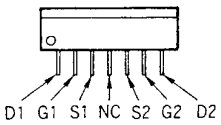

DAN202K

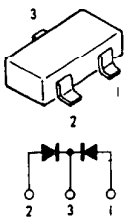

DAP202K

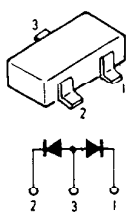

DA204K

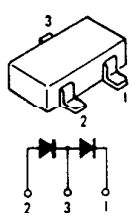

D4SB60L

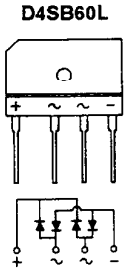

EGP20G
EG01
EL-1Z
EU-1Z
EU-2
GP08D
RGP15G
RGP15J



ERA82-004
ERA85-009
HZS5CLL-TD
RD10ES-B3
RD3.6ES-B1
RD33ES-B2
RD39ES-B
RD39ES-B2
RD4.7ES-B2
RD5.1ES-B
RD5.1ES-B1
RD5.1ES-B2
RD5.6ES-B
RD7.5ES-B
RD7.5ES-B1
RD7.5ES-B2
RD7.5ES-B3
RD9.1ES-B
RD9.1ESL
1SS119
1SS133



ERC06-15S
RGP02-20EL-6394



ERD29-08J
RGP02-17
RGP02-17EL-6433
RU4AM
RU4DS

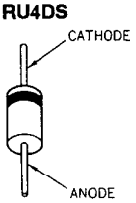

GP08
U05G



MA3047
RD4.7M-B2

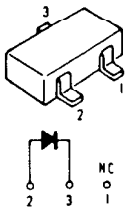

MA3051L-TX



PC111LS
PC111YS



RM11C



5P4M
5P6M



7-1. CHASSIS

● : BVTP3 × 12 7-685-648-79
■ : BVTP4 × 16 7-685-663-79

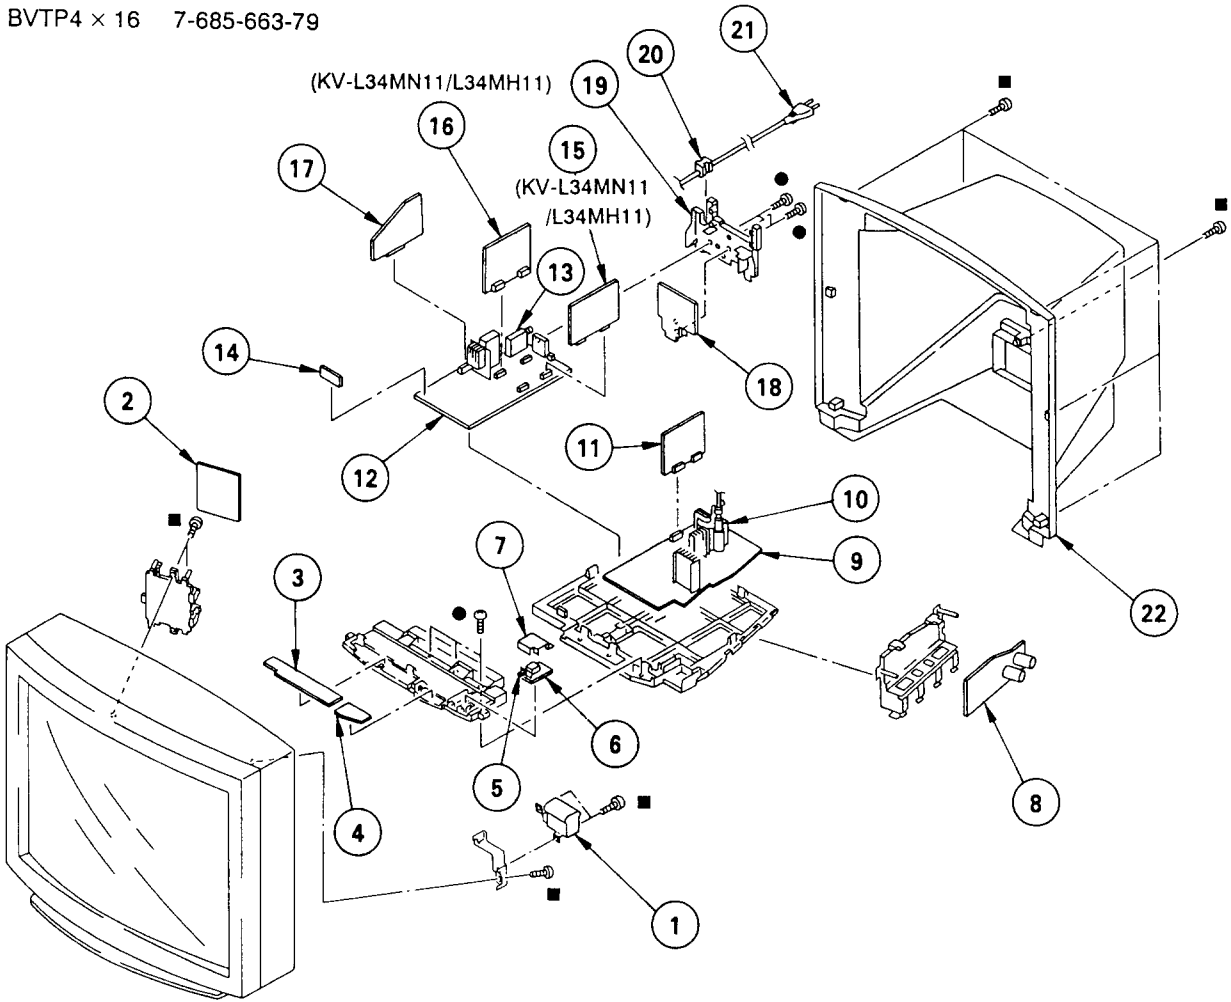

7-2. PICTURE TUBE

●: BVTP3 × 12 7-685-648-79
■: BVTP4 × 16 7-685-663-79
△: BVTP4 × 12 7-685-661-14

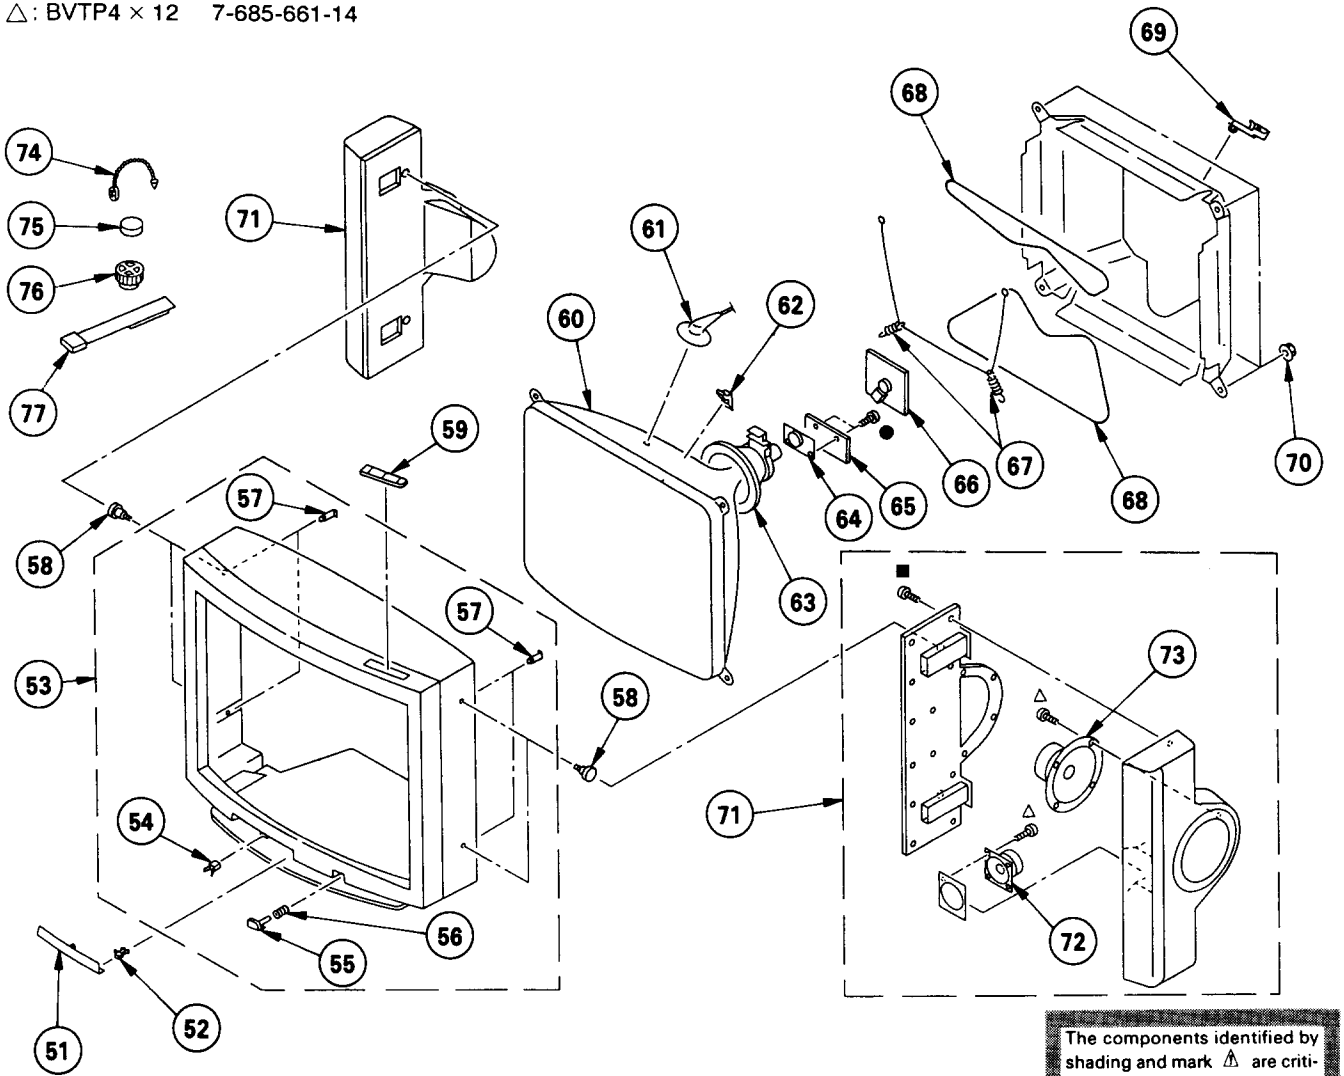

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

SONY

SERVICE MANUAL

G3F CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-L34MF1	RM-845P	ME	SCC-G37L-A
	(Serial No. 1,132,101 through 1,132,150)		
	RM-845P	HK	SCC-G43G-A
	(Serial No. 1,404,401 and later)		
	RM-845P	GE	SCC-G44G-A
	(Serial No. 1,000,001 and later)		
KV-L34MH11	RM-845P	ME	SCC-G37M-A
	(Serial No. 1,004,301 and later)		
	RM-845P	HK	SCC-G43H-A
	(Serial No. 1,404,401 and later)		
KV-L34MN11	RM-845P	GE	SCC-G44B-A
	(Serial No. 1,018,251 through 1,018,300 Serial No. 1,018,751 and later)		

SUPPLEMENT-2

SUBJECT 1 : CHANGE OF PICTURE TUBE
2 : CHANGE OF DEFLECTION YOKE AND NECK ASS'Y
3 : CHANGE OF C, D AND VM BOARDS
4 : D2 BOARD DELETED

File this supplement with the Service Manual.

INTRODUCTION:

- The following new parts numbers are introduced to the models serial numbers listed above and later.
- KV-L34MF1 has new destination model in additional to the ME and HK destination ones. For KV-L34MF1 GE (SCC-A44G-A) model.All the Supplements 1 to 2 and the original service manual (KV-L34MF1) contents are valid from the first set.

  Please refer to them for other information.

	PART NO.	DESCRIPTION	REMARK
⚠	8-733-742-05	PICTURE TUBE (A80JYV51X)	(GE model)
⚠	8-733-743-05	PICTURE TUBE (A80JYV51X)	(ME,HK models)
⚠	8-451-482-21	DEFRECTION YOKE (Y34FXA2)	
⚠	1-452-616-13	NECK ASS'Y,CRT	
	A-1331-636-A	C BOARD COMPLETE	
	A-1346-551-A	D BOARD COMPLETE	
	A-1342-292-A	VM BOARD COMPLETE	
		D2 BOARD COMPLETE	DELETED

MICROFILM

VM [VM OUT]

6-4. SCHEMATIC DIAGRAM AND PRINTED WIRING BOARDS

SCHEMATIC DIAGRAM
– VM Board –

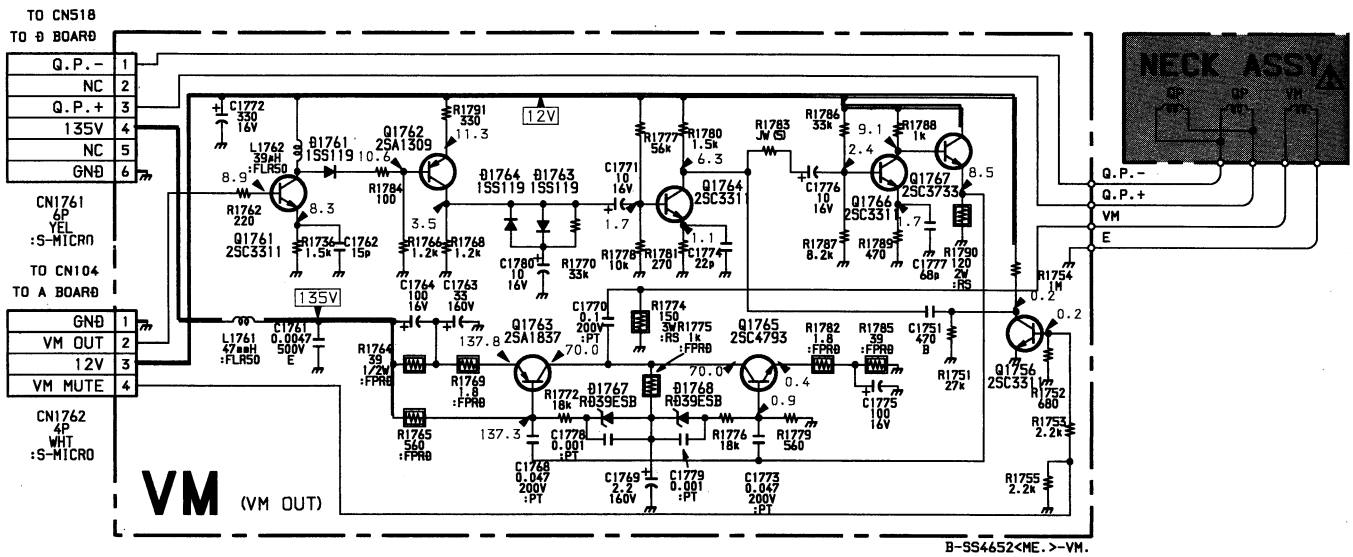

PRINTED WIRING BOARD
– VM Board –

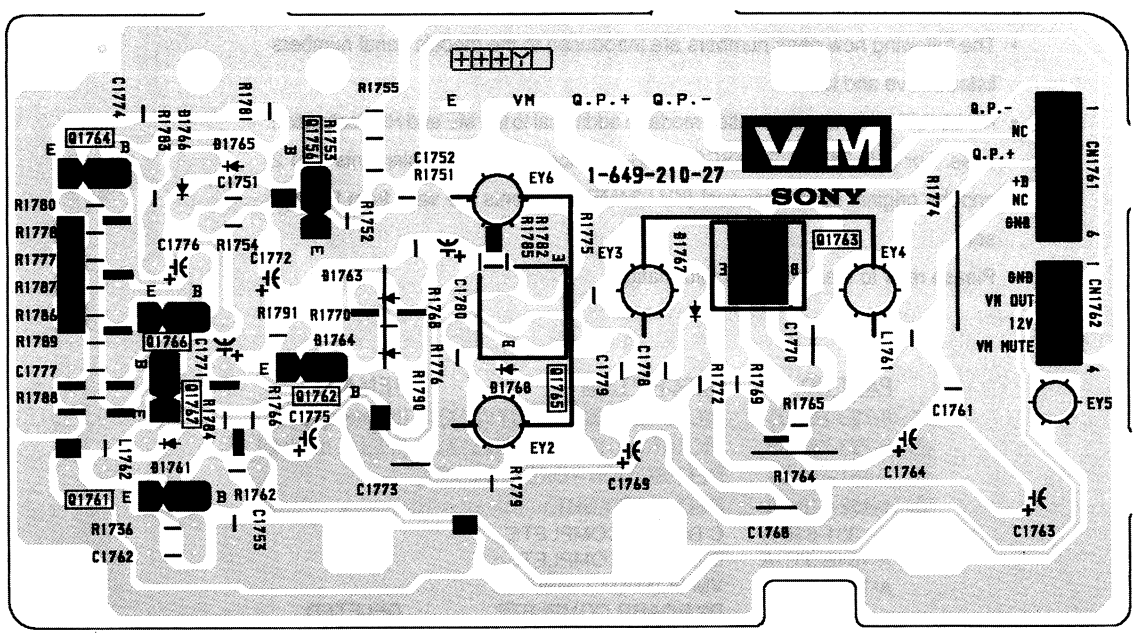

SCHEMATIC DIAGRAM
– C Board –

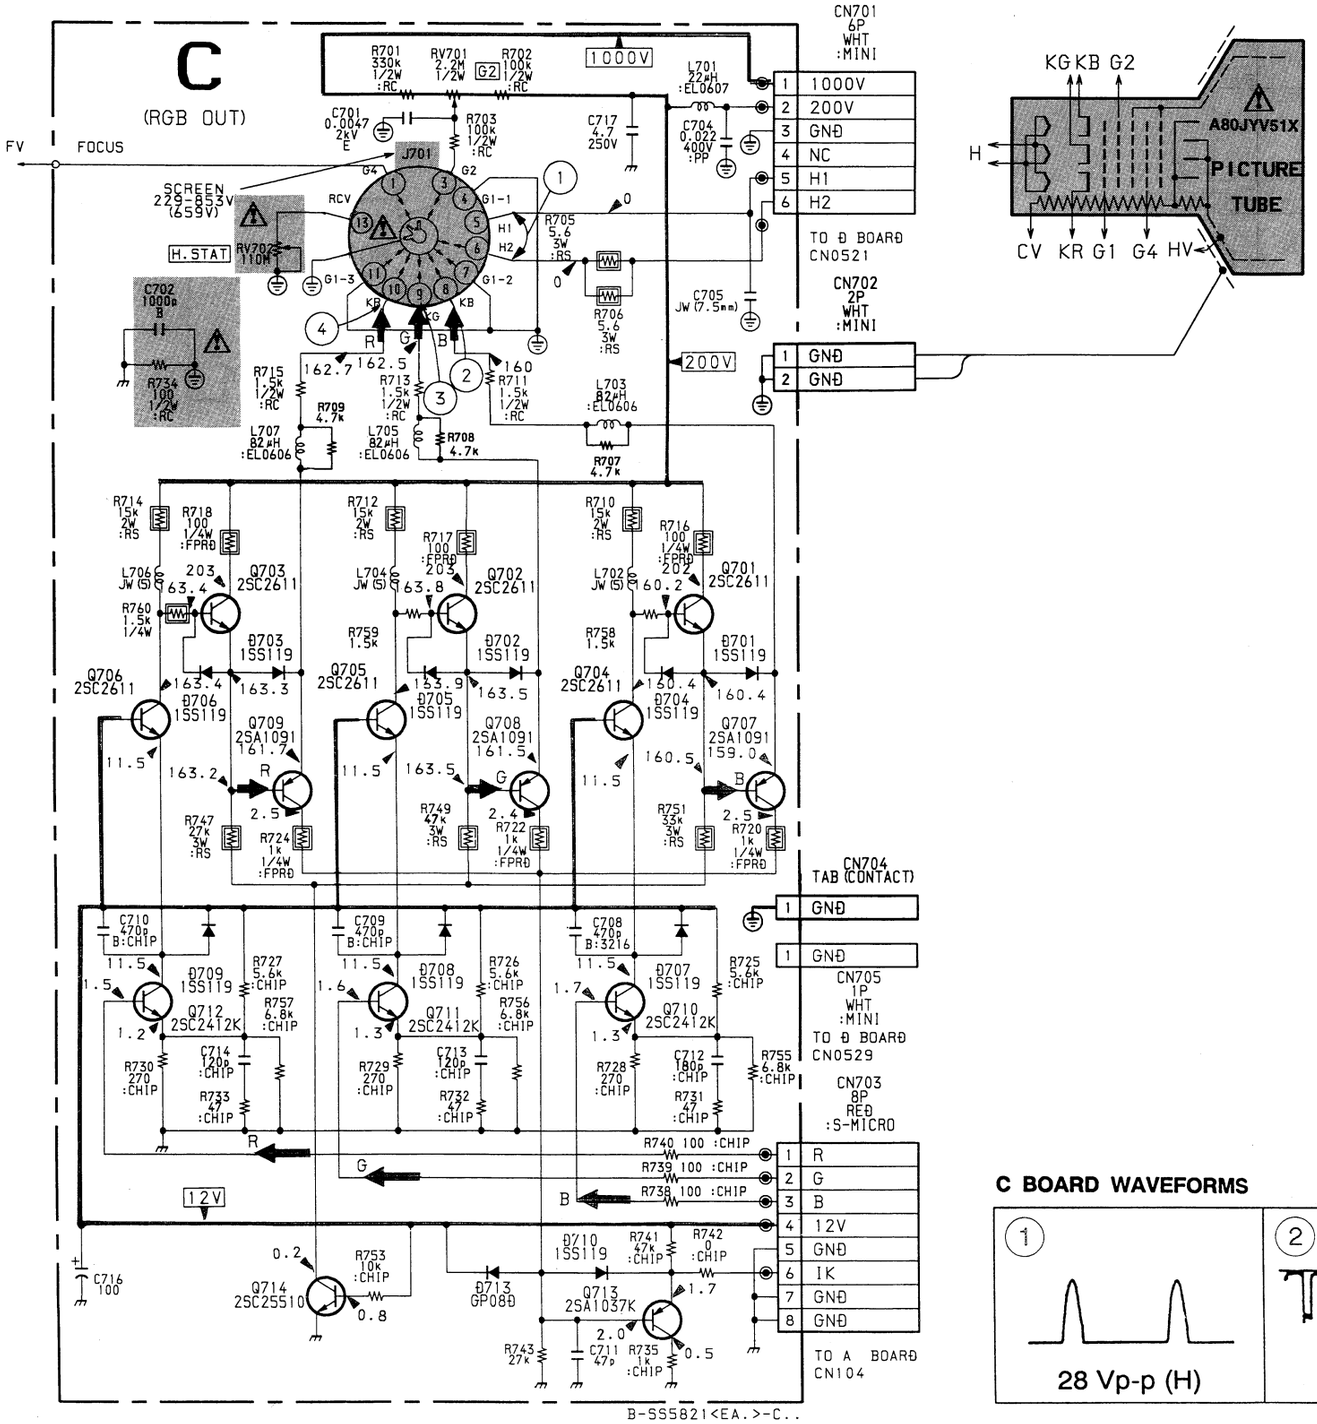

PRINTED WIRING BOARD
– C Board –

C [R.G.B. OUT]

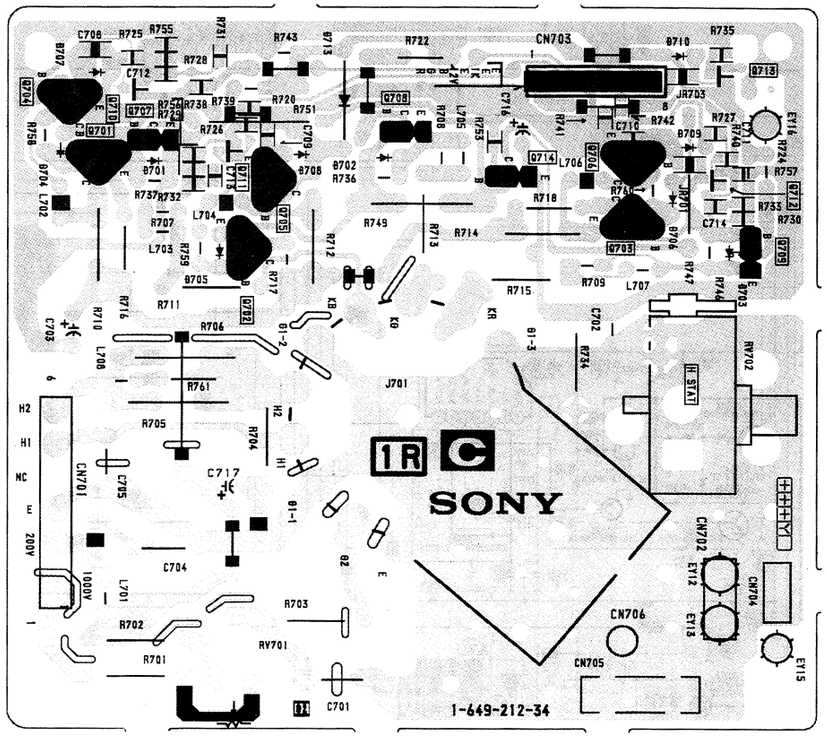

C BOARD WAVEFORMS

①	②	③	④
28 Vp-p (H)	130 Vp-p (H)	130 Vp-p (H)	130 Vp-p (H)

SCHEMATIC DIAGRAM
– D Board –

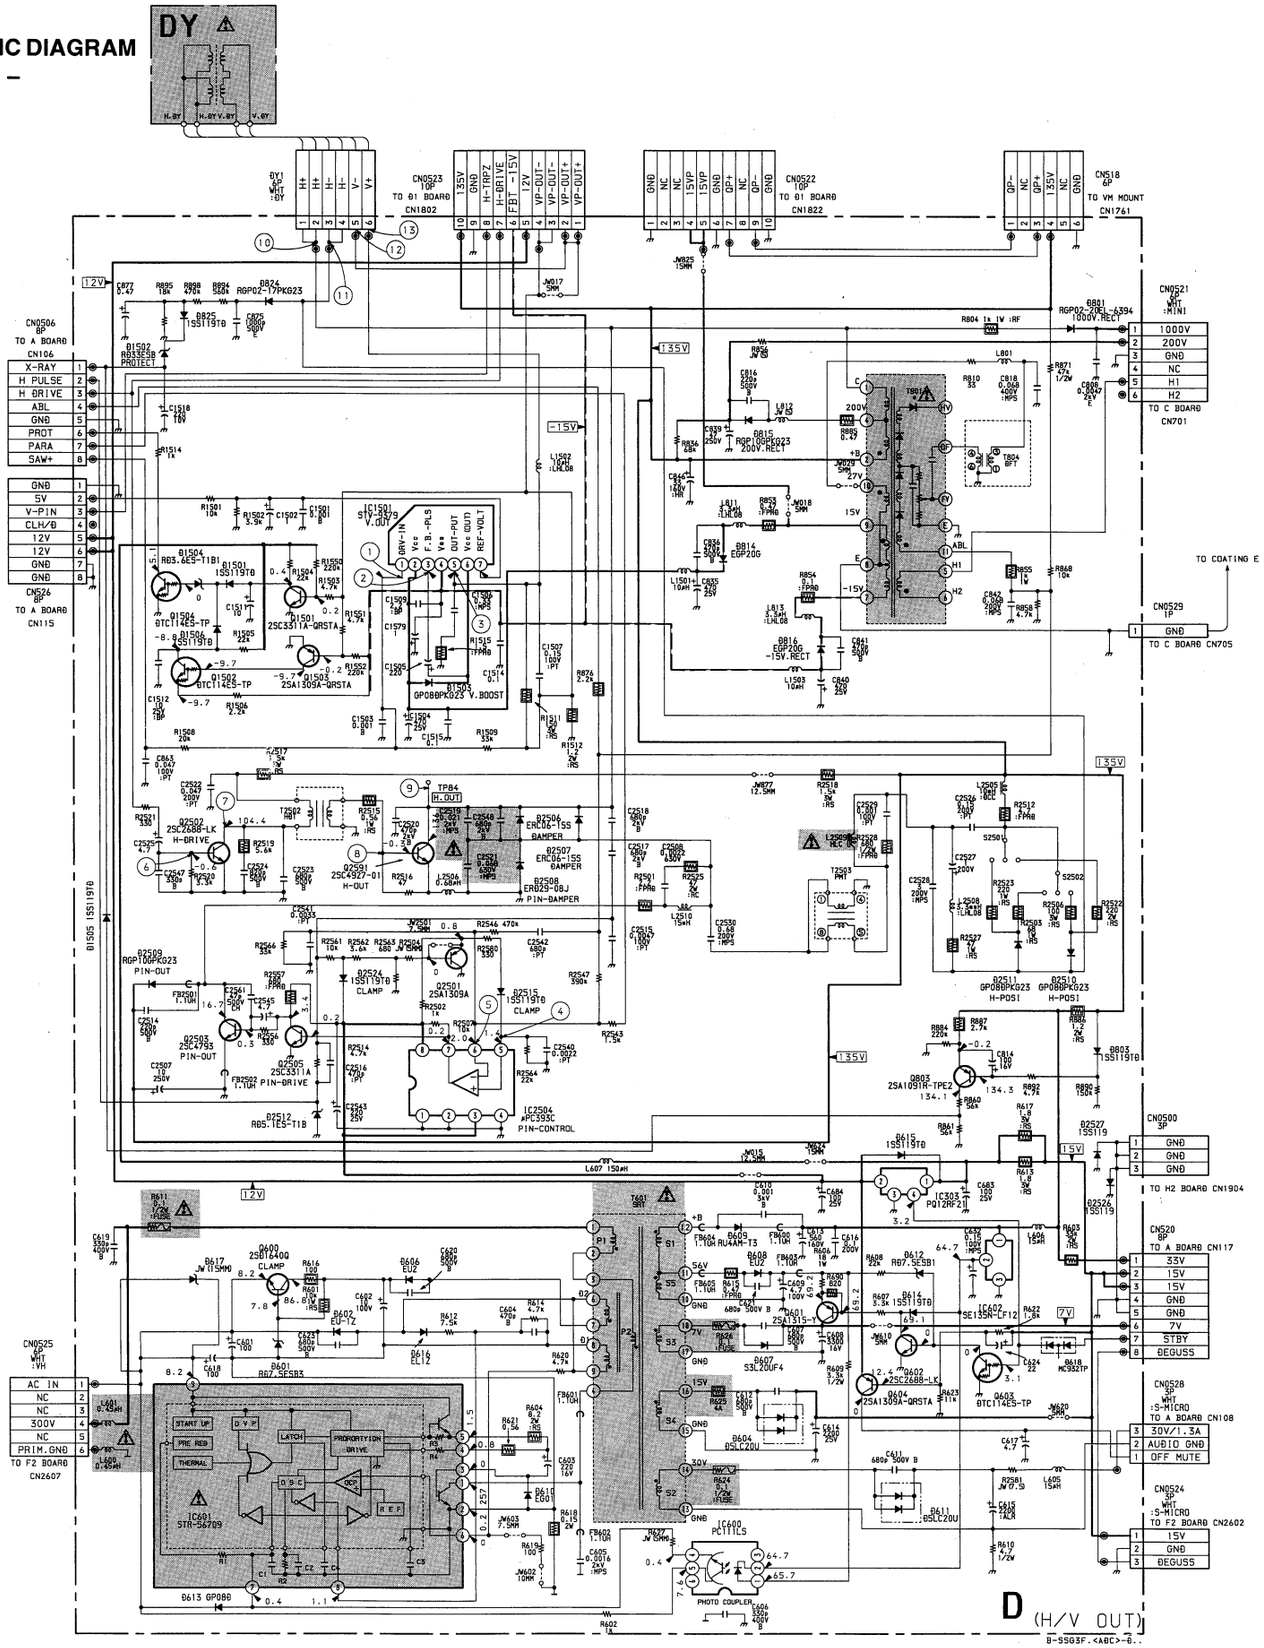

D BOARD WAVEFORMS

① 0.3 Vp-p (V)	② 1.25 Vp-p (V)	③ 60 Vp-p (V)
④ 1.3 Vp-p (H)	⑤ 0.3 Vp-p (V)	⑥ 2.0 Vp-p (H)
⑦ 180 Vp-p (H)	⑧ 16 Vp-p (H)	⑨ 1000 Vp-p (H)
⑩ 1000 Vp-p (H)	⑪ 240 Vp-p (H)	⑫ 2.0 Vp-p (V)
⑬ 64 Vp-p (V)		

PRINTED WIRING BOARD
– D Board –

D [HV OUT]

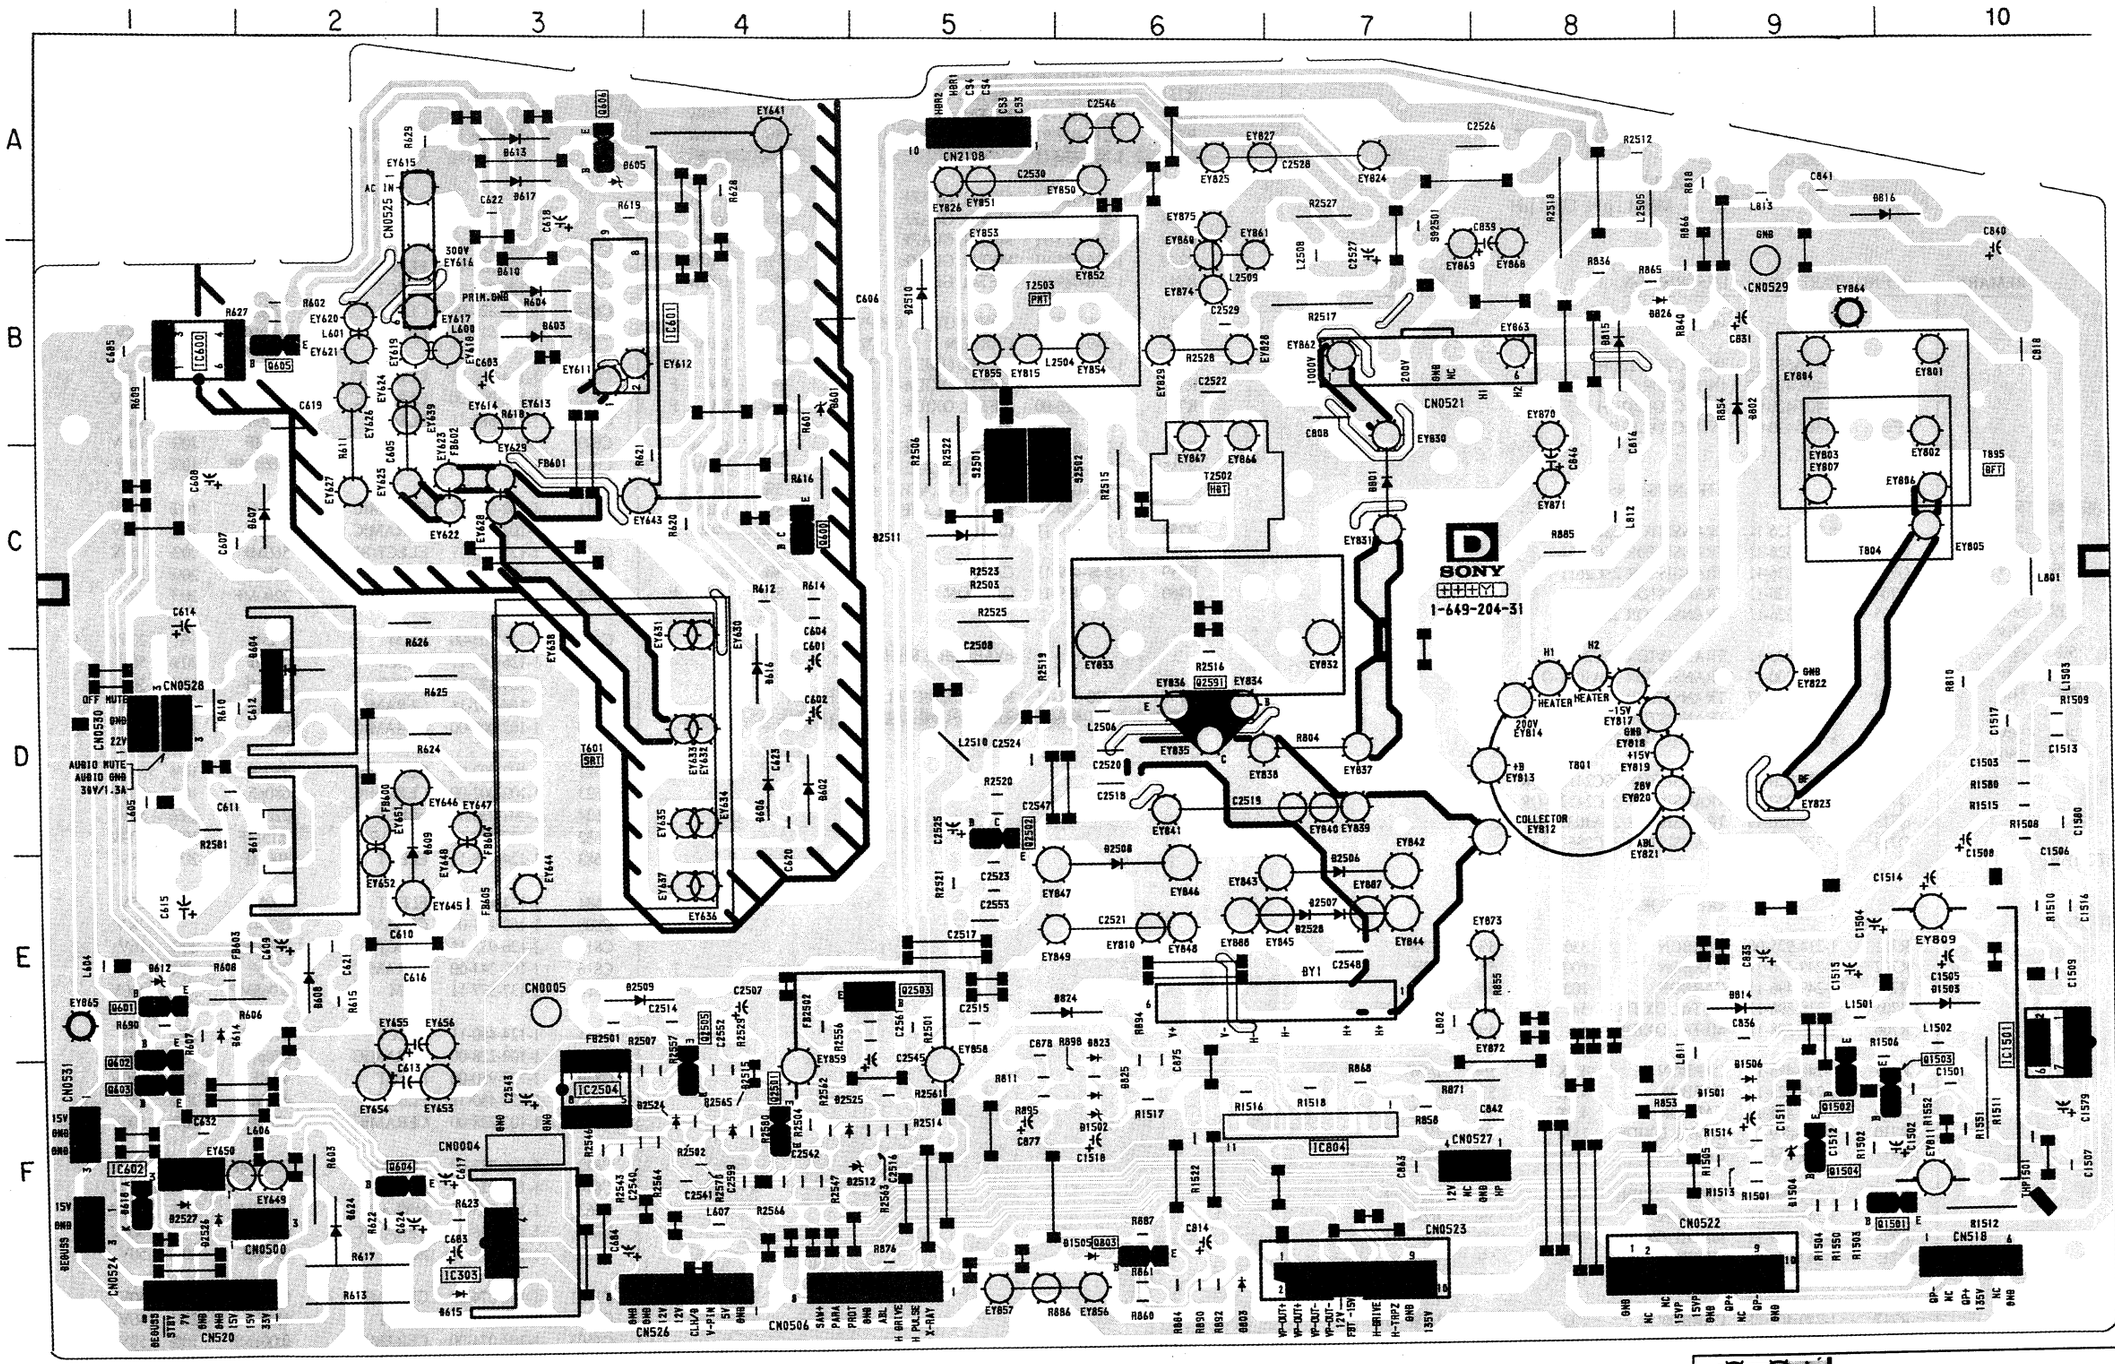

• D BOARD

IC		TRANSISTOR		DIODE	
IC303	F – 3	Q600	C – 4	D601	B – 4
IC600	B – 1	Q601	E – 1	D602	D – 4
IC601	B – 3	Q602	E – 1	D604	C – 2
IC1501	E – 10	Q604	F – 3	D606	D – 4
IC2504	E – 3	Q803	F – 6	D607	C – 2
		Q1501	F – 9	D608	E – 2
		Q1502	E – 9	D609	D – 2
		Q1503	E – 9	D610	B – 3
		Q1504	F – 9	D611	D – 2
		Q2501	F – 4	D612	E – 1
		Q2502	D – 5	D613	A – 3
		Q2503	E – 4	D614	E – 1
		Q2505	E – 4	D615	F – 2
		Q2591	D – 6	D616	D – 4
				D617	A – 3
				D624	F – 2
				D801	C – 7
				D803	F – 6
				D814	E – 9
				D815	B – 8
				D816	A – 9
				D824	E – 5
				D825	E – 5
				D1501	E – 9
				D1502	F – 5
				D1503	E – 10
				D1504	F – 9
				D1505	F – 5
				D1506	E – 9
				D2506	D – 7
				D2507	E – 7
				D2508	D – 6
				D2509	E – 3
				D2510	B – 5
				D2511	C – 5
				D2512	F – 4
				D2515	F – 4
				D2524	F – 3
				D2526	F – 1
				D2527	F – 1

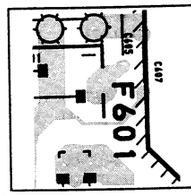

NOTE:
The circuit indicated at left contains high voltage of over 600 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

SECTION 7
ELECTRICAL PARTS LIST

C

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : μF, PF : μμF

COILS
- MMH : μH, UH : μH

REF.NO.		PART NO.	DESCRIPTION			REMARK
	*	A-1331-636-A	MOUNTED PCB, C			
			**********			
		4-352-844-01	PIN, LEAD, COATING			
			<CAPACITOR>			
C701		1-162-114-00	CERAMIC	0.0047MF		2KV
C702	⚠	1-102-074-00	CERAMIC	0.001MF	10%	50V
C704		1-130-202-00	FILM	0.022MF	5%	400V
C708		1-163-197-00	CERAMIC CHIP	470PF	10%	50V
C709		1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C710		1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C711		1-101-880-00	CERAMIC	47PF	5%	50V
C712		1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C713		1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C714		1-163-119-00	CERAMIC CHIP	120PF	5%	50V
C716		1-107-910-11	ELECT	100MF	20%	50V
C717		1-107-651-11	ELECT	4.7MF	20%	250V
			<CONNECTOR>			
CN701	*	1-508-768-00	PIN, CONNECTOR (5MM PITCH) 6P			
CN703		1-564-511-11	PLUG, CONNECTOR 8P			
CN704		1-695-915-11	TAB (CONTACT)			
CN705		1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P			
			<DIODE>			
D701		8-719-911-19	DIODE 1SS119			
D702		8-719-911-19	DIODE 1SS119			
D703		8-719-911-19	DIODE 1SS119			
D704		8-719-911-19	DIODE 1SS119			
D705		8-719-911-19	DIODE 1SS119			
D706		8-719-911-19	DIODE 1SS119			
D707		8-719-911-19	DIODE 1SS119			
D708		8-719-911-19	DIODE 1SS119			
D709		8-719-911-19	DIODE 1SS119			
D710		8-719-911-19	DIODE 1SS119			
D713		8-719-908-03	DIODE GP08D			
			<JACK>			
J701	⚠	1-526-990-11	SOCKET, CRT			
			<CHIP CONDUCTOR>			
JR701		1-216-296-91	CONDUCTOR, CHIP (3216)			
JR703		1-216-296-91	CONDUCTOR, CHIP (3216)			

REF.NO.	PART NO.	DESCRIPTION			REMARK
		<COIL>			
L701	1-410-667-31	INDUCTOR 22UH			
L703	1-408-420-00	INDUCTOR 82UH			
L705	1-408-420-00	INDUCTOR 82UH			
L707	1-408-420-00	INDUCTOR 82UH			
		<TRANSISTOR>			
Q701	8-729-326-11	TRANSISTOR 2SC2611			
Q702	8-729-326-11	TRANSISTOR 2SC2611			
Q703	8-729-326-11	TRANSISTOR 2SC2611			
Q704	8-729-326-11	TRANSISTOR 2SC2611			
Q705	8-729-326-11	TRANSISTOR 2SC2611			
Q706	8-729-326-11	TRANSISTOR 2SC2611			
Q707	8-729-200-17	TRANSISTOR 2SA1091-O			
Q708	8-729-200-17	TRANSISTOR 2SA1091-O			
Q709	8-729-200-17	TRANSISTOR 2SA1091-O			
Q710	8-729-920-74	TRANSISTOR 2SC2412K-QR			
Q711	8-729-920-74	TRANSISTOR 2SC2412K-QR			
Q712	8-729-920-74	TRANSISTOR 2SC2412K-QR			
Q713	8-729-026-49	TRANSISTOR 2SA1037AK			
Q714	8-729-255-12	TRANSISTOR 2SC2551-O			
		<RESISTOR>			
R701	1-214-925-00	CARBON	330K	5%	1/2W
R702	1-249-496-11	CARBON	100K	5%	1/2W
R703	1-249-496-11	CARBON	100K	5%	1/2W
R705	1-216-398-11	METAL OXIDE	5.6	5%	3W F
R706	1-216-398-11	METAL OXIDE	5.6	5%	3W F
R707	1-249-425-11	CARBON	4.7K	5%	1/4W
R708	1-249-425-11	CARBON	4.7K	5%	1/4W
R709	1-249-425-11	CARBON	4.7K	5%	1/4W
R710	1-215-899-11	METAL OXIDE	15K	5%	2W F
R711	1-247-754-11	CARBON	1.5K	5%	1/2W
R712	1-215-899-11	METAL OXIDE	15K	5%	2W F
R713	1-247-754-11	CARBON	1.5K	5%	1/2W
R714	1-215-899-11	METAL OXIDE	15K	5%	2W F
R715	1-247-754-11	CARBON	1.5K	5%	1/2W
R716	1-249-899-11	CARBON	100	5%	1/4W F
R717	1-249-405-11	CARBON	100	5%	1/4W F
R718	1-249-899-11	CARBON	100	5%	1/4W F
R720	1-249-417-11	CARBON	1K	5%	1/4W F
R722	1-249-923-11	CARBON	1K	5%	1/4W F
R724	1-249-417-11	CARBON	1K	5%	1/4W F
R725	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R726	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R727	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R728	1-216-035-00	METAL GLAZE	270	5%	1/10W
R729	1-216-035-00	METAL GLAZE	270	5%	1/10W

C D

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION			REMARK
R730	1-216-035-00	METAL GLAZE	270	5%	1/10W
R731	1-216-017-91	METAL GLAZE	47	5%	1/10W
R732	1-216-017-91	METAL GLAZE	47	5%	1/10W
R733	1-216-017-91	METAL GLAZE	47	5%	1/10W
R734 ⚠	1-247-739-11	CARBON	100	5%	1/2W
R735	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R738	1-216-025-91	METAL GLAZE	100	5%	1/10W
R739	1-216-025-91	METAL GLAZE	100	5%	1/10W
R740	1-216-025-91	METAL GLAZE	100	5%	1/10W
R741	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R742	1-216-295-91	CONDUCTOR, CHIP (2012)			
R743	1-249-434-11	CARBON	27K	5%	1/4W
R747	1-216-489-11	METAL OXIDE	27K	5%	3W F
R749	1-216-927-00	METAL OXIDE	47	5%	3W F
R751	1-215-926-00	METAL OXIDE	33K	5%	3W F
R753	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R755	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R756	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R757	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R758	1-249-419-11	CARBON	1.5K	5%	1/4W
R759	1-249-419-11	CARBON	1.5K	5%	1/4W
R760	1-249-419-11	CARBON	1.5K	5%	1/4W F
		<VARIABLE RESISTOR>			
RV701	1-230-641-11	RES, ADJ, METAL GLAZE 2.2M			
RV702 ⚠	1-241-656-21	RES, ADJ, METAL FILM 110M			

REF.NO.		PART NO.	DESCRIPTION			REMARK
	*	A-1346-551-A	D COMPLETE PCB			
			**********			
	*	4-374-846-11	COVER,CAPACITOR, CAP TYPE			
		4-382-854-11	SCREW (M3X10), P, SW(+)			
			<CAPACITOR>			
C601		1-124-122-11	ELECT	100MF	20%	50V
C602		1-124-667-11	ELECT	10MF	20%	100V
C603		1-126-934-11	ELECT	220MF	20%	16V
C604		1-102-824-00	CERAMIC	470pF	5%	50V
C605		1-136-619-11	FILM	0.0016MF	3%	2KV
C606		1-164-002-11	CERAMIC	330pF	10%	400V
C607		1-102-002-00	CERAMIC	680pF	10%	500V
C608		1-107-885-11	ELECT	3300MF	20%	16V
C609		1-107-928-11	ELECT	4.7MF	20%	100V
C610		1-161-754-00	CERAMIC	0.001MF	10%	3KV
C611		1-102-002-00	CERAMIC	680pF	10%	500V
C612		1-102-002-00	CERAMIC	680pF	10%	500V
C613		1-125-494-11	ELECT(BLOCK)	560MF	20%	160V
C614		1-124-962-11	ELECT	2200MF	20%	25V
C615		1-128-550-11	ELECT	2200MF	20%	50V
C616		1-136-103-00	FILM	0.1MF	5%	200V
C617		1-126-163-11	ELECT	4.7MF	20%	50V
C618		1-124-122-11	ELECT	100MF	20%	50V
C619		1-164-002-11	CERAMIC	330pF	10%	400V
C620		1-102-002-00	CERAMIC	680pF	10%	500V
C621		1-102-002-00	CERAMIC	680pF	10%	500V
C623		1-102-002-00	CERAMIC	680pF	10%	500V
C624		1-107-930-91	ELECT	22MF	20%	50V
C632		1-137-423-11	MYLAR	0.15MF	10%	100V
C683		1-124-478-11	ELECT	100MF	20%	25V
C684		1-124-478-11	ELECT	100MF	20%	25V
C808		1-162-114-00	CERAMIC	0.0047MF		2KV
C814		1-126-933-11	ELECT	100MF	20%	16V
C816		1-102-244-00	CERAMIC	220pF	10%	500V
C818		1-137-577-11	FILM	0.068MF	5%	400V
C835		1-124-480-11	ELECT	470MF	20%	25V
C836		1-102-228-00	CERAMIC	470pF	10%	500V
C839		1-123-950-00	ELECT	47MF	20%	250V
C840		1-124-480-11	ELECT	470MF	20%	25V
C841		1-102-228-00	CERAMIC	470pF	10%	500V
C842		1-106-387-00	MYLAR	0.068MF	10%	200V
C846		1-123-024-21	ELECT	33MF		160V
C863		1-106-383-00	MYLAR	0.047MF	10%	100V
C875		1-102-038-00	CERAMIC	0.001MF		500V
C877		1-124-902-00	ELECT	0.47MF	20%	50V
C1501		1-102-074-00	CERAMIC	0.001MF	10%	50V
C1502		1-124-903-11	ELECT	1MF	20%	50V
C1503		1-102-074-00	CERAMIC	0.001MF	10%	50V
C1504		1-124-480-11	ELECT	470MF	20%	25V
C1505		1-124-911-11	ELECT	220MF	20%	50V
C1506		1-136-171-00	FILM	0.33MF	5%	50V
C1507		1-137-423-11	MYLAR	0.15MF	10%	100V
C1509		1-109-953-11	ELECT	2.2MF	20%	50V
C1511		1-126-964-11	ELECT	10MF	20%	50V
C1512		1-124-006-11	ELECT	10MF	20%	25V

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

D

REF.NO.	PART NO.	DESCRIPTION			REMARK
C1514	1-124-463-00	ELECT	0.1MF	20%	50V
C1515	1-124-463-00	ELECT	0.1MF	20%	50V
C1518	1-104-666-11	ELECT	220MF	20%	10V
C1579	1-107-902-11	ELECT	1MF	20%	50V
C2507	1-107-652-11	ELECT	10MF	20%	250V
C2508	1-129-898-00	FILM	0.0022MF	10%	630V
C2514	1-102-244-00	CERAMIC	220pF	10%	500V
C2515	1-106-359-00	MYLAR	0.0047MF	10%	100V
C2516	1-130-467-00	MYLAR	470pF	5%	50V
C2517	1-162-116-00	CERAMIC	680pF	10%	2KV
C2518	1-162-116-00	CERAMIC	680pF	10%	2KV
C2519 ⚠	1-136-897-11	FILM	0.021MF	3%	2KV
C2520	1-162-134-11	CERAMIC	470pF	10%	2KV
C2521 ⚠	1-129-724-00	FILM	0.068MF	10%	630V
C2522	1-108-700-11	MYLAR	0.047MF	10%	200V
C2523	1-102-002-00	CERAMIC	680pF	10%	500V
C2524	1-102-212-00	CERAMIC	820pF	10%	500V
C2525	1-126-163-11	ELECT	4.7MF	20%	50V
C2526	1-106-395-00	MYLAR	0.15MF	10%	200V
C2527	1-124-341-00	ELECT	1MF	20%	200V
C2528	1-136-598-11	FILM	3MF	5%	200V
C2529	1-106-343-00	MYLAR	0.001MF	10%	100V
C2530	1-136-109-00	FILM	0.68MF	5%	200V
C2540	1-130-475-00	MYLAR	0.0022MF	5%	50V
C2541	1-130-477-00	MYLAR	0.0033MF	5%	50V
C2542	1-130-469-00	MYLAR	680pF	5%	50V
C2543	1-104-666-11	ELECT	220MF	20%	25V
C2545	1-126-963-11	ELECT	4.7MF	20%	50V
C2547	1-102-112-00	CERAMIC	330pF	10%	50V
C2548 ⚠	1-162-116-00	CERAMIC	680pF	10%	2KV
C2561	1-162-815-11	CERAMIC	47pF	5%	500V

<CONNECTOR>

CN518 *	1-564-509-11	PLUG, CONNECTOR	6P
CN520 *	1-764-607-11	CONNECTOR, BOARD TO BOARD	8P
CN526 *	1-764-607-11	CONNECTOR, BOARD TO BOARD	8P
CN0500*	1-564-506-11	PLUG, CONNECTOR	3P
CN0506*	1-764-607-11	CONNECTOR, BOARD TO BOARD	8P
CN0521*	1-508-768-00	PIN, CONNECTOR (5MM PITCH)	6P
CN0522	1-764-610-11	CONNECTOR, BOARD TO BOARD	10P
CN0523	1-764-610-11	CONNECTOR, BOARD TO BOARD	10P
CN0524*	1-564-506-11	PLUG, CONNECTOR	3P
CN0525*	1-695-294-11	PIN, CONNECTOR (PC BOARD)	6P
CN0528 *	1-564-506-11	PLUG, CONNECTOR	3P
CN0529	1-508-784-00	PIN, CONNECTOR (5MM PITCH)	1P

<DIODE>

D601	8-719-110-04	DIODE	RD7.5ESB3
D602	8-719-312-61	DIODE	EU-1Z
D604	8-719-510-37	DIODE	D5LC20U
D606	8-806-326-11	DIODE	EU2
D607	8-719-510-73	DIODE	S3L20UF4
D608	8-806-326-11	DIODE	EU2
D609	8-719-312-10	DIODE	RU4AM-T3
D610	8-719-312-26	DIODE	EG01
D611	8-719-510-37	DIODE	D5LC20U
D612	8-719-110-02	DIODE	RD7.5ESB1
D613	8-719-908-03	DIODE	GP08D
D614	8-719-911-19	DIODE	1SS119-25
D615	8-719-911-19	DIODE	1SS119-25
D616	8-719-302-43	DIODE	EL1Z
D617	8-719-908-03	DIODE	GP08D
D618	8-719-016-42	DIODE	MC932TP
D801	8-719-018-82	DIODE	RGP02-20EL-6394
D803	8-719-911-19	DIODE	1SS119-25
D814	8-719-979-85	DIODE	EGP20G
D815	8-719-302-43	DIODE	EL1Z
D816	8-719-979-85	DIODE	EGP20G
D824	8-719-028-72	DIODE	RGP02-17EL-6433
D825	8-719-911-19	DIODE	1SS119-25
D1501	8-719-911-19	DIODE	1SS119-25
D1502	8-719-110-78	DIODE	RD33ESB2
D1503	8-719-908-03	DIODE	GP08D
D1504	8-719-109-68	DIODE	RD3.6ESB1
D1505	8-719-911-19	DIODE	1SS119-25
D1506	8-719-911-19	DIODE	1SS119-25
D2506	8-719-945-80	DIODE	ERC06-15S
D2507	8-719-945-80	DIODE	ERC06-15S
D2508	8-719-900-26	DIODE	ERD29-08J
D2509	8-719-302-43	DIODE	EL1Z
D2510	8-719-908-03	DIODE	GP08D
D2511	8-719-908-03	DIODE	GP08D
D2512	8-719-109-84	DIODE	RD5.1ESB1
D2515	8-719-911-19	DIODE	1SS119-25
D2524	8-719-911-19	DIODE	1SS119-25
D2526	8-719-911-19	DIODE	1SS119-25
D2527	8-719-911-19	DIODE	1SS119-25

<FERRITE BEAD>

FB600	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH
FB601	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH
FB602	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH
FB603	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH
FB604	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH
FB605	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH
FB2501	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH
FB2502	1-410-397-21	FERRITE BEAD	INDUCTOR 1.1UH

<IC>

IC303	8-759-518-68	IC	PQ12RF21
IC600	8-749-923-50	PHOTO COUPLER	PC111YS
IC601 ⚠	8-749-010-92	IC	STR-S6709
IC602	8-749-920-61	IC	SE-135N
IC1501	8-759-192-71	IC	STV9379
IC2504	8-759-729-03	IC	NJM2903D

D

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION					REMARK
		<COIL>					
L600	⚠ 1-410-396-41	FERRITE BEAD	INDUCTOR 0.45UH				
L601	⚠ 1-410-396-41	FERRITE BEAD	INDUCTOR 0.45UH				
L605	1-412-527-11	INDUCTOR	15UH				
L606	1-412-527-11	INDUCTOR	15UH				
L607	1-412-539-11	INDUCTOR	150UH				
L801	1-459-104-00	COIL, WITH CORE					
L811	1-412-519-11	INDUCTOR	3.3UH				
L813	1-412-519-11	INDUCTOR	3.3UH				
L1501	1-412-525-31	INDUCTOR	10UH				
L1502	1-412-525-31	INDUCTOR	10UH				
L1503	1-412-525-31	INDUCTOR	10UH				
L2505	1-459-104-00	COIL, WITH CORE					
L2506	1-422-613-11	COIL, AIR CORE					
L2508	1-412-553-11	INDUCTOR	3.3mH				
L2509	⚠ 1-409-861-11	COIL, HORIZONTAL LINEARITY					
L2510	1-406-607-11	COIL, CHOKE	15mH				
		<TRANSISTOR>					
Q600	8-729-028-34	TRANSISTOR	2SD1640Q,R				
Q601	8-729-203-79	TRANSISTOR	2SA1315-Y				
Q602	8-729-805-05	TRANSISTOR	2SC3601-E				
Q603	8-729-900-80	TRANSISTOR	DTC114ES				
Q604	8-729-119-76	TRANSISTOR	2SA1175-HFE				
Q803	8-729-200-17	TRANSISTOR	2SA1091-O				
Q1501	8-729-119-78	TRANSISTOR	2SC2785-HFE				
Q1502	8-729-900-80	TRANSISTOR	DTC114ES				
Q1503	8-729-119-76	TRANSISTOR	2SA1175-HFE				
Q1504	8-729-900-80	TRANSISTOR	DTC114ES				
Q2501	8-729-119-76	TRANSISTOR	2SA1175-HFE				
Q2502	8-729-119-80	TRANSISTOR	2SC2688-LK				
Q2503	8-729-017-06	TRANSISTOR	2SC4793				
Q2505	8-729-119-78	TRANSISTOR	2SC2785-HFE				
Q2591	8-729-016-32	TRANSISTOR	2SC4927-01				
		<RESISTOR>					
R601	1-215-875-11	METAL OXIDE	10K	5%	1W	F	
R602	1-249-417-11	CARBON	1K	5%	1/4W		
R603	1-215-901-00	METAL OXIDE	33K	5%	2W	F	
R604	1-216-380-11	METAL OXIDE	8.2	5%	2W	F	
R606	1-216-422-11	METAL OXIDE	18	5%	1W	F	
R607	1-247-843-11	CARBON	3.3K	5%	1/4W		
R608	1-247-863-91	CARBON	22K	5%	1/4W		
R609	1-260-105-11	CARBON	3.3K	5%	1/2W		
R610	1-260-072-11	CARBON	4.7	5%	1/2W		
R611	⚠ 1-202-933-61	FUSIBLE	0.1	10%	1/2W	F	
R612	1-247-852-11	CARBON	7.5K	5%	1/4W		
R613	1-216-392-11	METAL OXIDE	1.8	5%	3W	F	
R614	1-249-425-11	CARBON	4.7K	5%	1/4W		
R615	1-249-377-11	CARBON	0.47	5%	1/4W	F	
R616	1-249-899-11	CARBON	100	5%	1/4W	F	
R617	1-216-392-11	METAL OXIDE	1.8	5%	3W	F	
R618	1-217-190-21	WIRE WOUND	0.15	10%	2W	F	
R619	1-247-807-31	CARBON	100	5%	1/4W		
R620	1-249-425-11	CARBON	4.7K	5%	1/4W		

REF.NO.	PART NO.	DESCRIPTION					REMARK
R621	1-249-378-11	CARBON	0.56	5%	1/4W	F	
R622	1-249-420-11	CARBON	1.8K	5%	1/4W		
R623	1-215-446-00	METAL	11K	1%	1/4W		
R624	⚠ 1-211-761-11	FUSIBLE	0.1	10%	1/2W		
R625	⚠ 1-532-845-21	LINK,	1C				
R626	⚠ 1-219-134-11	FUSIBLE	0.1	10%	1/4W		
R690	1-249-416-11	CARBON	820	5%	1/4W		
R804	1-217-778-11	FUSIBLE	1K	5%	1W	F	
R810	1-249-399-11	CARBON	33	5%	1/4W		
R836	1-249-439-11	CARBON	68K	5%	1/4W		
R853	1-249-443-11	CARBON	0.47	5%	1/4W	F	
R854	1-219-119-11	FUSIBLE	0.1	5%	1/4W	F	
R855	1-215-869-11	METAL OXIDE	1K	5%	1W	F	
R858	1-215-437-00	METAL	4.7K	1%	1/4W		
R860	1-249-438-11	CARBON	56K	5%	1/4W		
R861	1-249-438-11	CARBON	56K	5%	1/4W		
R868	1-249-429-11	CARBON	10K	5%	1/4W		
R871	1-260-119-11	CARBON	47K	5%	1/2W		
R876	1-249-421-11	CARBON	2.2K	5%	1/4W	F	
R884	1-247-887-00	CARBON	220K	5%	1/4W		
R885	1-249-443-11	CARBON	0.47	5%	1/4W	F	
R886	1-216-370-11	METAL OXIDE	1.2	5%	2W	F	
R887	1-249-422-11	CARBON	2.7K	5%	1/4W	F	
R890	1-247-883-00	CARBON	150K	5%	1/4W		
R892	1-249-425-11	CARBON	4.7K	5%	1/4W		
R894	1-247-897-11	CARBON	560K	5%	1/4W		
R895	1-249-432-11	CARBON	18K	5%	1/4W		
R898	1-247-895-91	CARBON	470K	5%	1/4W		
R1501	1-215-445-00	METAL	10K	1%	1/4W		
R1502	1-215-435-00	METAL	3.9K	1%	1/4W		
R1503	1-249-425-11	CARBON	4.7K	5%	1/4W		
R1504	1-247-863-91	CARBON	22K	5%	1/4W		
R1505	1-247-863-91	CARBON	22K	5%	1/4W		
R1506	1-249-421-11	CARBON	2.2K	5%	1/4W		
R1508	1-215-452-00	METAL	20K	1%	1/4W		
R1509	1-249-435-11	CARBON	33K	5%	1/4W		
R1511	1-215-912-11	METAL OXIDE	150	5%	3W	F	
R1512	1-216-370-11	METAL OXIDE	1.2	5%	2W	F	
R1514	1-249-417-11	CARBON	1K	5%	1/4W		
R1515	1-249-383-11	CARBON	1.5	5%	1/4W	F	
R1550	1-247-887-00	CARBON	220K	5%	1/4W		
R1551	1-249-425-11	CARBON	4.7K	5%	1/4W		
R1552	1-247-887-00	CARBON	220K	5%	1/4W		
R2501	1-249-385-11	CARBON	2.2	5%	1/4W	F	
R2502	1-249-417-11	CARBON	1K	5%	1/4W		
R2503	1-215-885-00	METAL OXIDE	68	5%	2W	F	
R2506	1-215-911-11	METAL OXIDE	100	5%	3W	F	
R2507	1-249-429-11	CARBON	10K	5%	1/4W		
R2512	1-249-389-11	CARBON	4.7	5%	1/4W	F	
R2514	1-249-425-11	CARBON	4.7K	5%	1/4W		
R2515	1-216-346-00	METAL OXIDE	0.56	5%	1W	F	
R2516	1-249-401-11	CARBON	47	5%	1/4W		
R2517	1-215-918-00	METAL OXIDE	1.5K	5%	3W	F	
R2518	1-215-918-00	METAL OXIDE	1.5K	5%	3W	F	
R2519	1-247-722-11	CARBON	5.6K	5%	1/4W	F	
R2520	1-247-843-11	CARBON	3.3K	5%	1/4W		

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

D **VM**

REF.NO.	PART NO.	DESCRIPTION			REMARK
R2521	1-249-411-11	CARBON	330	5%	1/4W
R2522	1-215-888-00	METAL OXIDE	220	5%	2W F
R2523	1-215-865-11	METAL OXIDE	220	5%	1W F
R2525	1-215-884-11	METAL OXIDE	47	5%	2W F
R2527	1-215-861-00	METAL OXIDE	47	5%	1W F
R2528	1-247-750-11	CARBON	680	5%	1/2W F
R2543	1-249-419-11	CARBON	1.5K	5%	1/4W
R2546	1-247-895-91	CARBON	470K	5%	1/4W
R2547	1-247-893-11	CARBON	390K	5%	1/4W
R2556	1-249-411-11	CARBON	330	5%	1/4W
R2557	1-249-415-11	CARBON	680	5%	1/4W F
R2561	1-249-429-11	CARBON	10K	5%	1/4W
R2562	1-215-434-00	METAL	3.6K	1%	1/4W
R2563	1-215-417-00	METAL	680	1%	1/4W
R2564	1-247-863-91	CARBON	22K	5%	1/4W
R2566	1-249-435-11	CARBON	33K	5%	1/4W
R2580	1-249-411-11	CARBON	330	5%	1/4W
		<SWITCH>			
S2501	1-572-707-11	SWITCH, LEVER			
S2502	1-572-707-11	SWITCH, LEVER			
		<TRANSFORMER>			
T601	⚠ 1-429-177-11	TRANSFORMER, CONVERTER (SRT)			
T801	⚠ 8-598-916-10	TRANSFORMER, FLYBACK NX-2603			
T804	1-413-059-00	TRANSFORMER, FERRITE (DFT)			
T2502	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE			
T2503	1-424-545-11	TRANSFORMER, FERRITE (PMT)			

REF.NO.	PART NO.	DESCRIPTION			REMARK
*	A-1342-292-A	MOUNTED PCB, VM			
		**********			
	4-352-844-01	PIN, LEAD, COATING			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C1751	1-102-114-00	CERAMIC	470pF	10%	50V
C1761	1-161-830-00	CERAMIC	0.0047MF		500V
C1762	1-102-951-00	CERAMIC	15pF	5%	50V
C1763	1-123-935-00	ELECT	33MF	20%	160V
C1764	1-126-933-11	ELECT	100MF	20%	16V
C1768	1-106-383-00	MYLAR	0.047MF	10%	200V
C1769	1-107-667-11	ELECT	2.2MF	20%	160V
C1770	1-104-999-11	MYLAR	0.1MF	10%	200V
C1771	1-104-396-11	ELECT	10MF	20%	16V
C1772	1-124-119-00	ELECT	330MF	20%	16V
C1773	1-106-383-00	MYLAR	0.047MF	10%	200V
C1774	1-102-959-00	CERAMIC	22pF	5%	50V
C1775	1-126-933-11	ELECT	100MF	20%	16V
C1776	1-104-396-11	ELECT	10MF	20%	16V
C1777	1-101-888-00	CERAMIC	68pF	5%	50V
C1778	1-130-471-00	MYLAR	0.001MF	5%	50V
C1779	1-130-471-00	MYLAR	0.001MF	5%	50V
C1780	1-104-396-11	ELECT	10MF	20%	16V
		<CONNECTOR>			
CN1761	* 1-564-509-11	PLUG, CONNECTOR 6P			
CN1762	* 1-564-507-11	PLUG, CONNECTOR 4P			
		<DIODE>			
D1761	8-719-911-19	DIODE	1SS119-25		
D1763	8-719-911-19	DIODE	1SS119-25		
D1764	8-719-911-19	DIODE	1SS119-25		
D1767	8-719-110-88	DIODE	RD39ESB2		
D1768	8-719-110-88	DIODE	RD39ESB2		
		<COIL>			
L1761	1-410-095-11	INDUCTOR	47mH		
L1762	1-408-416-00	INDUCTOR	39UH		
		<TRANSISTOR>			
Q1756	8-729-119-78	TRANSISTOR	2SC2785-HFE		
Q1761	8-729-119-78	TRANSISTOR	2SC2785-HFE		
Q1762	8-729-119-76	TRANSISTOR	2SA1175-HFE		
Q1763	8-729-017-05	TRANSISTOR	2SA1837		
Q1764	8-729-119-78	TRANSISTOR	2SC2785-HFE		
Q1765	8-729-017-06	TRANSISTOR	2SC4793		
Q1766	8-729-119-78	TRANSISTOR	2SC2785-HFE		
Q1767	8-729-142-86	TRANSISTOR	2SC3733		

VM

REF.NO.	PART NO.	DESCRIPTION			REMARK	
		<RESISTOR>				
R1736	1-249-419-11	CARBON	1.5K	5%	1/4W	
R1751	1-249-434-11	CARBON	27K	5%	1/4W	
R1752	1-249-415-11	CARBON	680	5%	1/4W	
R1753	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1754	1-247-903-00	CARBON	1M	5%	1/4W	
R1755	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1762	1-247-815-91	CARBON	220	5%	1/4W	
R1764	1-247-734-11	CARBON	39	5%	1/2W	F
R1765	1-249-414-11	CARBON	560	5%	1/4W	F
R1766	1-249-418-11	CARBON	1.2K	5%	1/4W	
R1768	1-249-418-11	CARBON	1.2K	5%	1/4W	
R1769	1-249-384-11	CARBON	1.8	5%	1/4W	F
R1770	1-249-435-11	CARBON	33K	5%	1/4W	
R1772	1-249-432-11	CARBON	18K	5%	1/4W	
R1774	1-215-912-11	METAL OXIDE	150	5%	3W	F
R1775	1-249-417-11	CARBON	1K	5%	1/4W	F
R1776	1-249-432-11	CARBON	18K	5%	1/4W	
R1777	1-249-438-11	CARBON	56K	5%	1/4W	
R1778	1-249-429-11	CARBON	10K	5%	1/4W	
R1779	1-249-414-11	CARBON	560	5%	1/4W	
R1780	1-249-419-11	CARBON	1.5K	5%	1/4W	
R1781	1-249-410-11	CARBON	270	5%	1/4W	
R1782	1-249-384-11	CARBON	1.8	5%	1/4W	F
R1784	1-247-807-31	CARBON	100	5%	1/4W	
R1785	1-249-400-11	CARBON	39	5%	1/4W	F
R1786	1-249-435-11	CARBON	33K	5%	1/4W	
R1787	1-249-428-11	CARBON	8.2K	5%	1/4W	
R1788	1-249-417-11	CARBON	1K	5%	1/4W	
R1789	1-249-413-11	CARBON	470	5%	1/4W	
R1790	1-216-451-11	METAL OXIDE	120	5%	2W	F
R1791	1-249-411-11	CARBON	330	5%	1/4W	

MEMO

9-965-540-82

Sony Corporation
Display Company
Quality Engineering Dept.

English
96KH08154-1
Printed in Japan
© 1996. 11